




Removal/Installation

CAUTION: Check the front seat belts for damage, and replace them if necessary. Be careful not to damage them during removal and installation.

Front seat belt:

- Slide the front seat forward fully.
- Remove (see section 20).
 - Door sill molding
 - Door trim
 - Quarter window trim
 - Rear seat cushion and rear seat-back
 - Side trim panel
- Remove the upper anchor cap, lower anchor cap and seat belt guide.

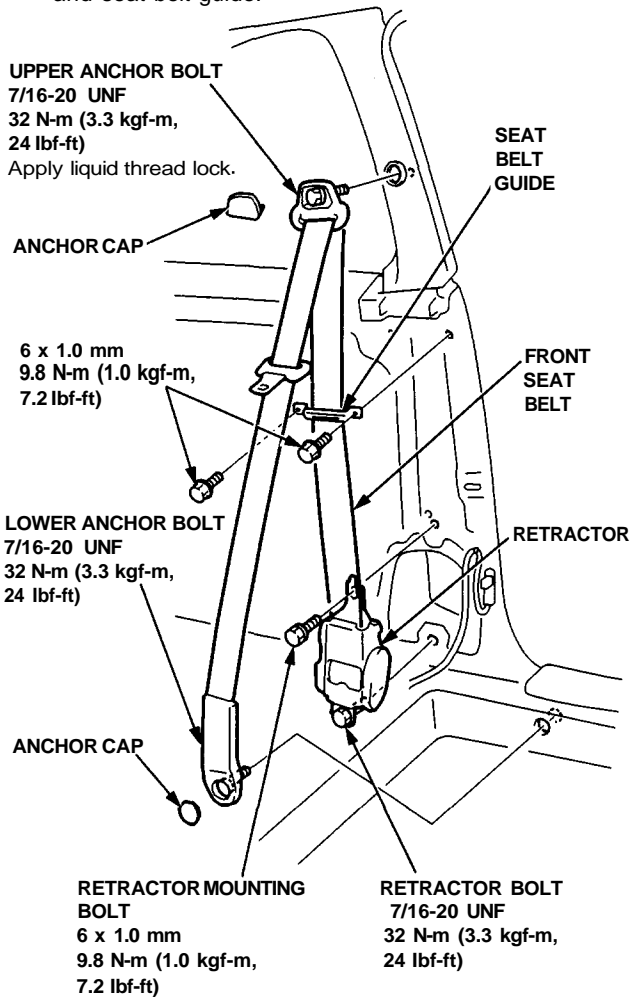


- Remove all the anchor bolts and the retractor bolt, remove the retractor mounting bolt, then remove the front seat belt and retractor.

- Installation is the reverse of the removal procedure.


NOTE:

- Check that the retractor locking mechanism functions as described on page 24-7.
- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before installing the anchor bolts, make sure there are no twists or kinks in the front seat belt.


Upper anchor bolt construction:

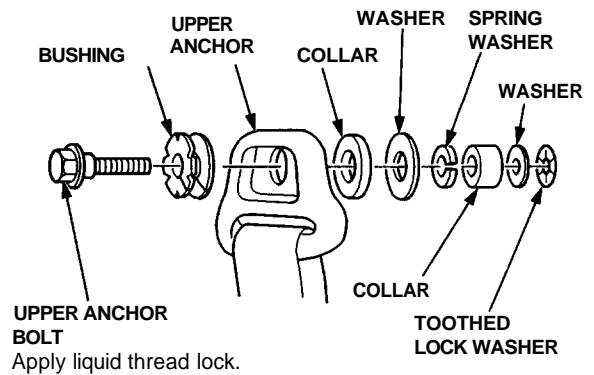

Lower anchor bolt construction:

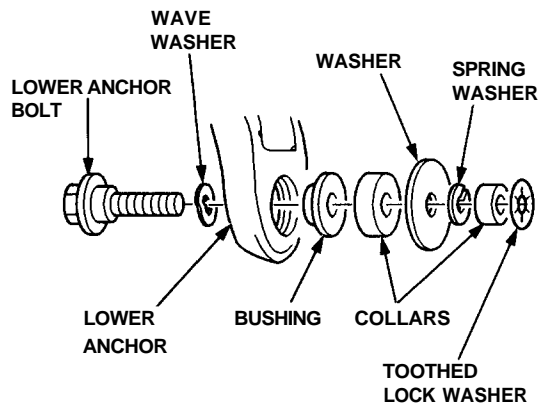

Retractor bolt construction:

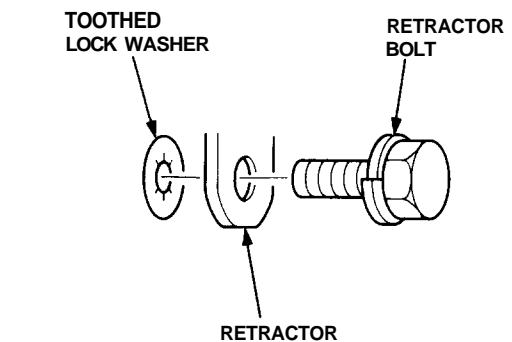


(cont'd)

Front Seat Belt


Removal/Installation (cont'd)

Seat belt buckle:

1. Remove the front seat (see [section 20](#)).
2. Driver's: Remove the cap. Remove the center cover mounting screw, detach the connector, then pull out the seat belt switch harness from the seat linkage.
Passenger's: Remove the center cover (see [section 20](#)).

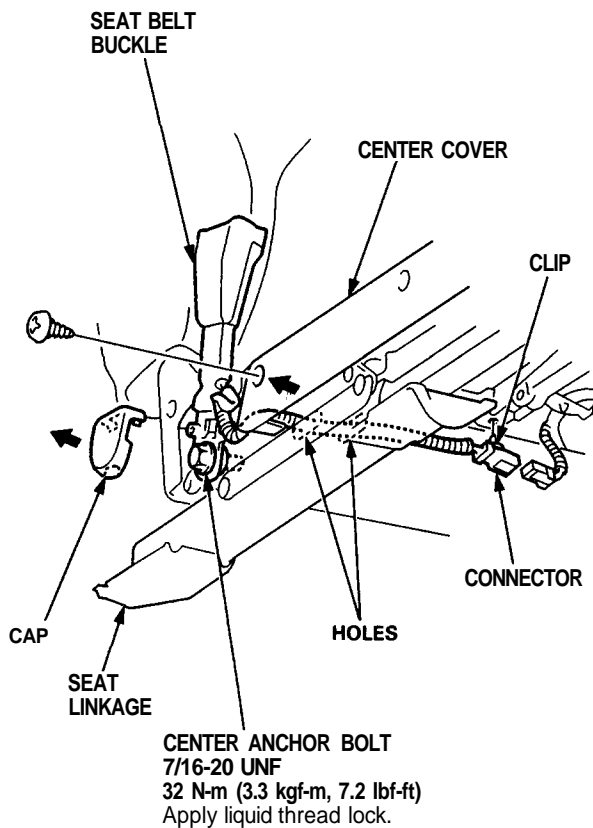

Center anchor bolt construction:

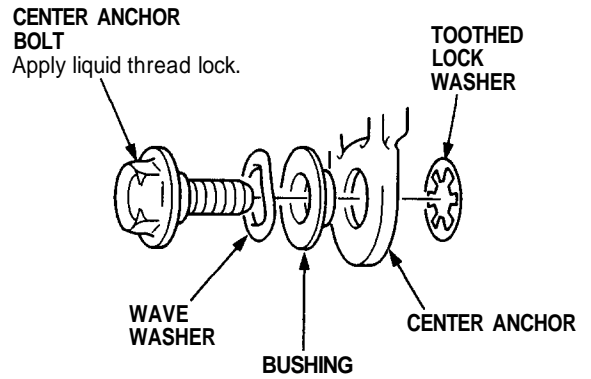

4. Installation is the reverse of the removal procedure.

NOTE: Make sure you assemble the washers and bushing on the center anchor bolt as shown.

3. Remove the center anchor bolt, then remove the seat belt buckle.