


Wiper/Washer

Wiper/Washer Switch Test

SRS components are located in this area. Review the SRS component locations, precautions, and procedures in the SRS (section 24) before performing repairs or service.

1. Remove the dashboard lower cover and knee bolster.
2. Disconnect the 7P and 20P connectors from the main wire harness.
3. Inspect the connector terminals to be sure they are all making good contact.
 - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
 - If the terminals look OK, check for continuity between them in each switch position according to the table.
 - If there is no continuity between any of them, check for continuity in the switch harness.
 - If there is continuity in the switch harness, replace the wiper/washer switch.
 - If there is no continuity in the switch harness, repair the harness or replace the wiper/washer switch.

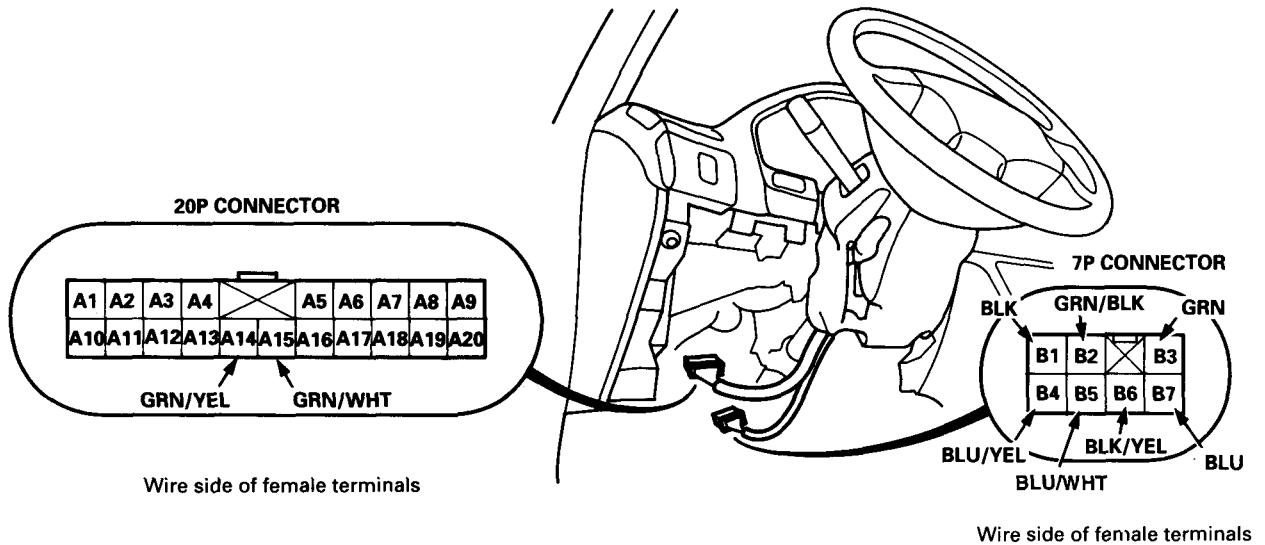

Terminal	A15	A14	B1	B2	B3	B4	B5	B6	B7
Position									
OFF							○	○	○
INT				○	○		○	○	○
LO			○						○
HI			○	○		○			
Mist switch "ON"			○	○		○			
Washer switch "ON"				○				○	
Intermittent dwell time controller turned	○	○							

0-30kΩ