

Diagnostic Trouble Code (DTC)

DTC Erasure

NOTE: This operation can also be done with the Honda PGM Tester.

1. Connect the SCS service connector to the service check connector (2P) under the glove box.
2. Press the brake pedal.
3. Turn the ignition switch ON (II) while keeping the brake pedal pressed.
4. After the ABS indicator goes off, release the brake pedal.
5. After the indicator comes on, press the brake pedal again.
6. After the indicator goes off, release the brake pedal again.
7. After a few seconds, the ABS indicator blinks twice and the DTC is erased. If the indicator does not blink twice, repeat steps 1 through 6. If the indicator stays ON after the indicator blinks twice, check the DTC because a problem was detected during initial diagnosis before shifting to DTC Erasure mode.
8. Turn the ignition switch OFF, and remove the SCS service connector.

Conditions for DTC erasure

- Vehicle speed is 6 mph (10 km/h) or less.
- The SCS service connector is connected before the ignition switch is turned ON (II).
- The brake pedal is pressed before the ignition switch is turned ON (II).

