


Charging System

Drive Belt Inspection

1. Inspect the belt for cracks and damage. If the belt is cracked or damaged, replace it.
2. Check that the auto-tensioner indicator (A) is within the standard range (B) as shown. If it is out of the standard range, replace the drive belt (see page 4-32).

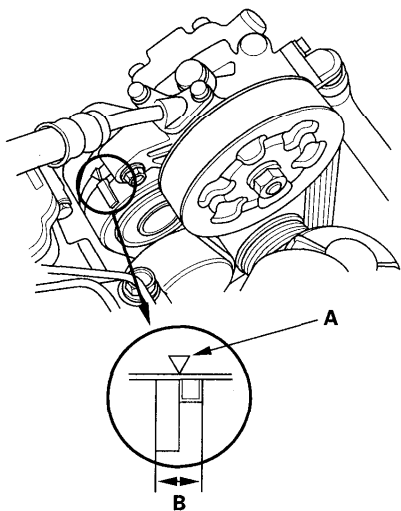


Drive Belt Replacement

Special Tools Required

Belt tension release tool Snap-on YA9317 or equivalent, commercially available

1. Move the auto-tensioner (A) using the belt tension release tool to relieve tension from the drive belt (B), and remove the drive belt.

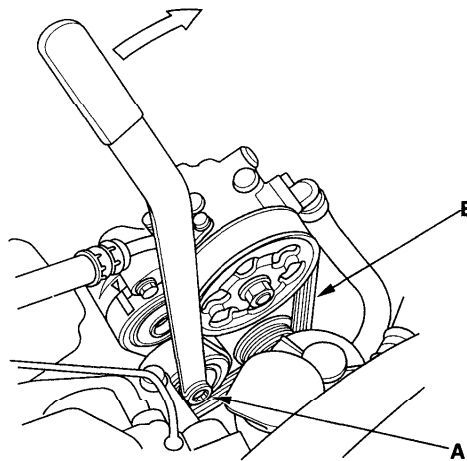

2. Install the new belt in the reverse order of removal.