





## CKP Sensor Replacement

1. Move the auto-tensioner to remove tension from the alternator belt, then remove the alternator belt (see step 5 on page 6-27).
2. Loosen the adjusting bolt, locknut and mounting bolt, then remove the power steering (P/S) pump belt (see step 6 on page 6-28).
3. Remove the dipstick and tube (see step 9 on page 6-28).
4. Remove the crankshaft pulley (see step 10 on page 6-28).
5. Remove the upper and lower covers (see step 12 on page 6-29).
6. Remove the timing belt guard (A) (M/T).

M/T:

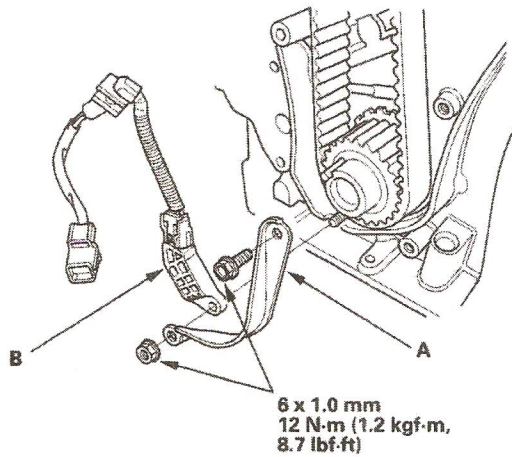

A/T:

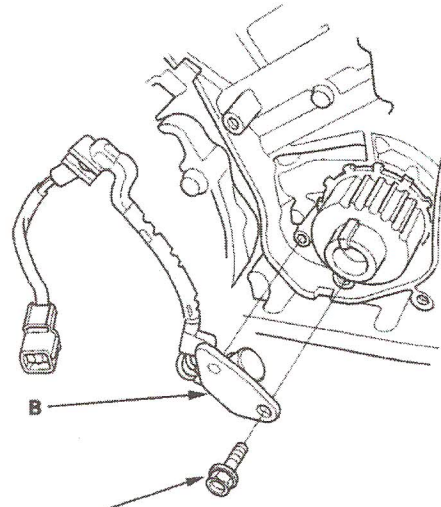

7. Remove the crankshaft position (CKP) sensor (B) from the oil pump.
8. Install the CKP sensor in the reverse order of removal.