

## 2001 3.2CL - Recirculation Control Motor Replacement

1. Remove the evaporator.
2. Disconnect the 5P connector (A) from the recirculation control motor (B). Remove the self-tapping screws and the recirculation control motor from the blower unit.
3. Install the motor in the reverse order of removal. After installation, make sure the recirculation control motor runs smoothly.

