


 


## Trunk Lid Latch Replacement

1. Remove the trunk lid trim (see page 20-53).
2. Disconnect the trunk lid opener cable (A) and trunk lid latch switch connector (B), and detach the trunk lid latch switch connector from the trunk lid. Take care not to bend the opener cable.

### Fastener Locations

C ▶ : Bolt, 2

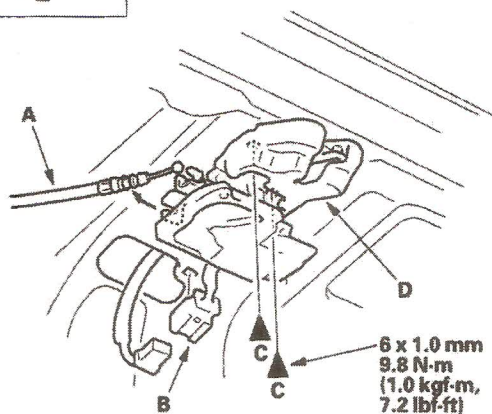

3. Remove the bolts (C), then remove the trunk lid latch (D).
4. Install the latch in the reverse order of removal, and note these items:
  - Grease the locations of the trunk lid latch indicated by arrows.
  - Make sure the connector is plugged in properly and the opener cable is connected properly.
  - Make sure the trunk lid opens properly and locks securely.

