

TROUBLESHOOTING


TESTING > WIPER MOTOR TEST (2013-17) > TEST

Windshield

1. Cowl Covers - Remove

1. Remove the cowl covers .

2. Windshield Wiper Motor - Test

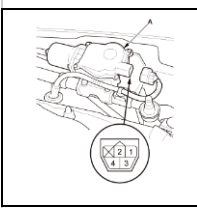

Courtesy of HONDA,
U.S.A., INC.

1. Disconnect the windshield wiper motor connector.
2. Test the wiper motor by connecting battery power to terminal No. 1 and ground to terminal No. 2 of the wiper motor. The wiper motor should run at low speed.
3. Test the wiper motor by connecting battery power to terminal No. 3 and ground to terminal No. 2 of the wiper motor. The wiper motor should run at high speed.
4. Connect an analog ohmmeter to terminals No. 4 and No. 2, and run the wiper motor at low or high speed. The needle of the ohmmeter should pulse. If the wiper motor does not run or fails to run smoothly, or there is no pulse, replace the windshield wiper motor (A) or the wiper linkage.
5. Connect the windshield wiper motor connector.

3. Cowl Covers - Install


1. Install the cowl covers .

Rear Window

4. Tailgate Lower Trim Panel - Remove

1. Remove the tailgate lower trim panel - Refer to: Interior Trim Removal and Installation - Cargo Areas (2013-17), or Interior Trim Removal and Installation - Pillar Areas (2013-17), or Interior Trim Removal and Installation - Rear Side Area (2013-17), or Interior Trim Removal and Installation - Tailgate Areas (2013-17), or Interior Trim Removal and Installation - Door Areas (2013-17) .
--

5. Rear Window Wiper Motor - Test

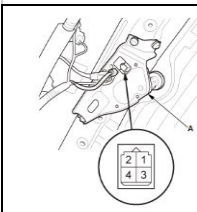

Courtesy of HONDA,
U.S.A., INC.

1. Disconnect the rear window wiper motor connector.
2. Test the wiper motor by connecting battery power to terminal No. 2 and ground to terminal No. 4 of the wiper motor. The wiper motor should run.
3. Connect an analog ohmmeter to terminals No. 4 and No. 3. The ohmmeter should indicate continuity and no continuity alternately. If the wiper motor does not run or fails to run smoothly, or there is no pulse, replace the rear window wiper motor (A).
4. Connect the rear window wiper motor connector.

6. Tailgate Lower Trim Panel - Install

--

1. Install the tailgate lower trim panel - Refer to: Interior Trim Removal and Installation - Cargo Areas (2013-17), or Interior Trim Removal and Installation - Pillar Areas (2013-17), or Interior Trim Removal and Installation - Rear Side Area (2013-17), or Interior Trim Removal and Installation - Tailgate Areas (2013-17), or Interior Trim Removal and Installation - Door Areas (2013-17) .