


**REMOVAL INSTALLATION > CYLINDER HEAD COVER REMOVAL AND
INSTALLATION (2016-17) > REMOVAL****Front**

1. Intake Manifold - Remove
2. Ignition Coil - Remove (Front Bank)
3. Connector (Alternator and A/C Compressor) and Positive Alternator Cable - Disconnect

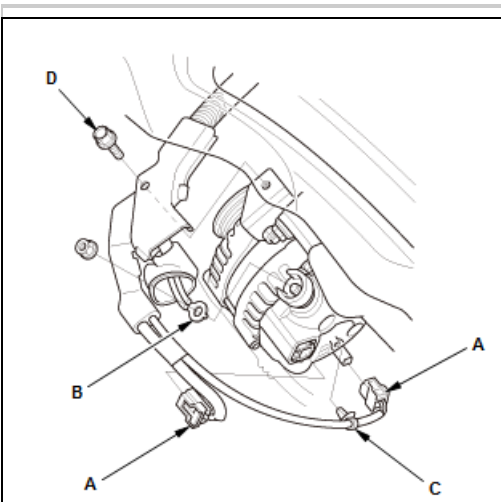


Courtesy of HONDA, U.S.A., INC.

1. Disconnect the connectors (A) and the positive alternator cable (B)
2. Remove the harness clamp (C) and the bolt (D) securing the harness holder.


4. Harness Holder - Remove

1. Disconnect the connectors (A)
2. Remove the harness clamp (B)
3. Remove the harness holder (C).

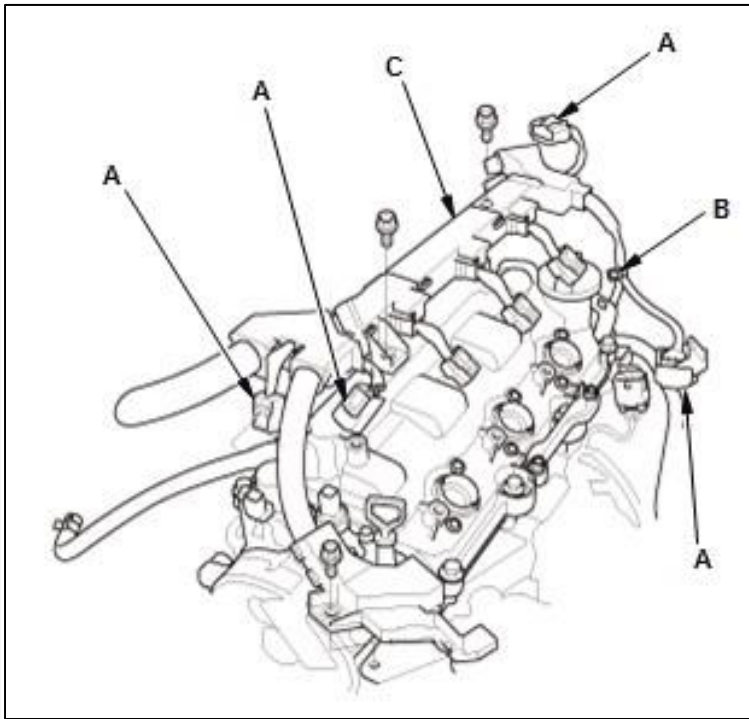

Courtesy of HONDA, U.S.A., INC.

5. Front Cylinder Head Cover - Remove

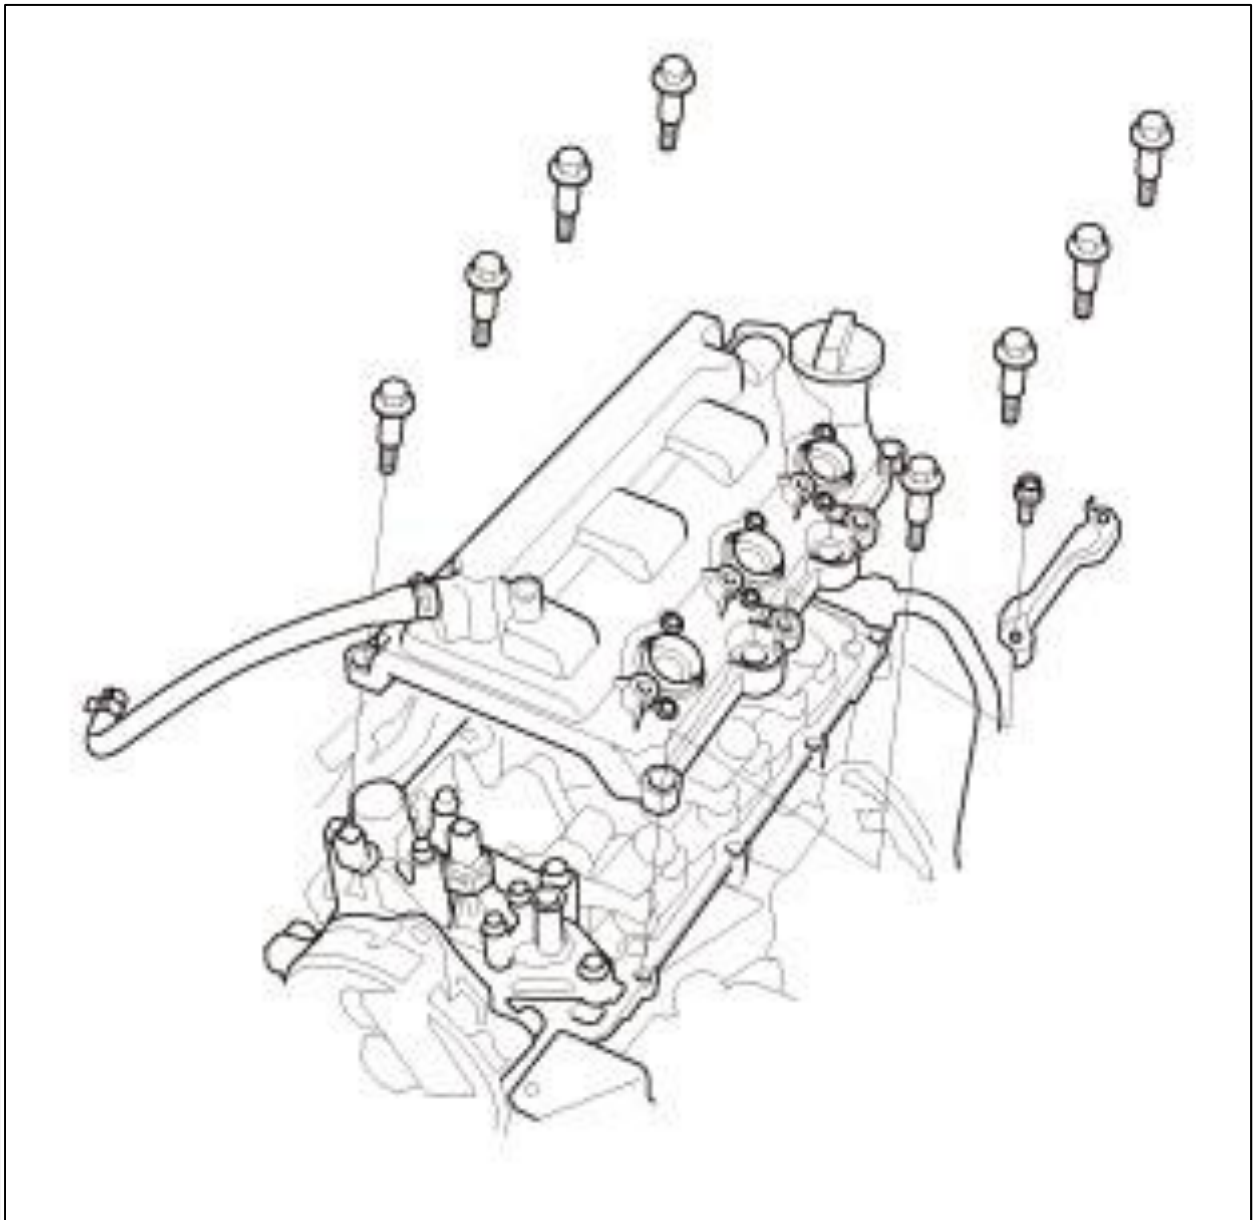


Courtesy of HONDA, U.S.A., INC.

Rear


6. Intake Manifold - Remove
7. Ignition Coil - Remove (Rear Bank)
8. Harness Holder - Remove

1. Remove the harness holder mounting bolts (A)
2. Disconnect the connectors (B)
3. Remove the harness clamp (C)
4. Remove the harness holder (D)
5. Disconnect the breather hose (E).

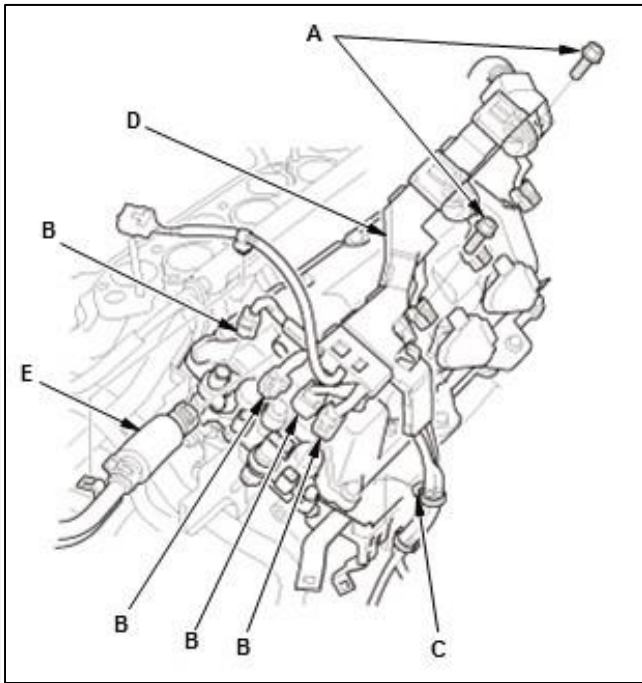

Courtesy of HONDA, U.S.A., INC.

9. Rear Cylinder Head Cover - Remove

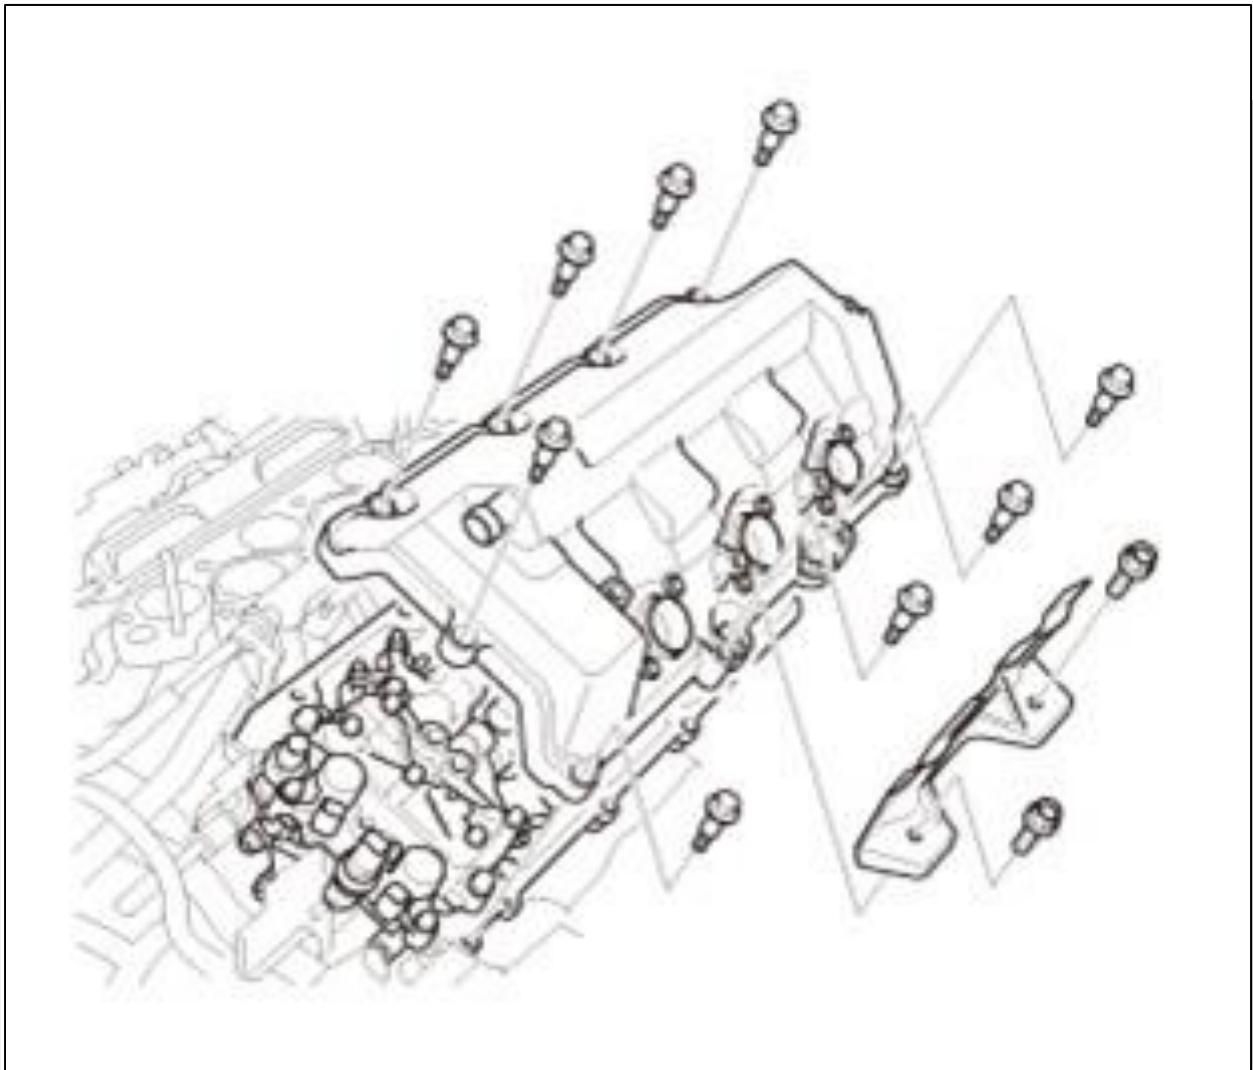


Courtesy of HONDA, U.S.A., INC.

REMOVAL INSTALLATION > CYLINDER HEAD COVER REMOVAL AND INSTALLATION (2016-17) > INSTALLATION

Front

1. Head Cover Gasket - Install

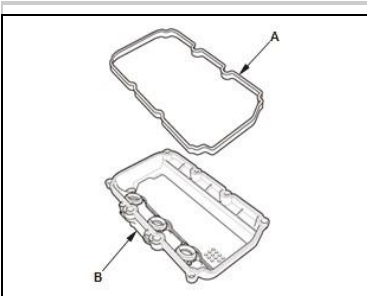


Courtesy of HONDA, U.S.A., INC.

1. Check the spark plug seals for damage. If any seals are damaged, replace it
2. Thoroughly clean the head cover gasket (A) and the groove of the cylinder head cover (B).

NOTE: *Check and if necessary, replace the head cover gasket*

3. Install the head cover gasket in the groove of the cylinder head cover. Make sure the head cover gasket is seated securely.

2. Front Cylinder Head Cover - Install

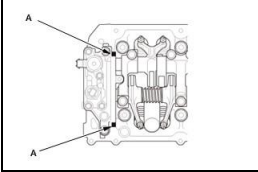


Courtesy of HONDA,
U.S.A., INC.

1. Remove all of the old liquid gasket from the front rocker arm oil control valve and the cylinder head
2. Clean the head cover contacting surfaces with a shop towel
3. Apply liquid gasket (P/N 08717-0004, 08718-0003, 08718-0004, or 08718-0009) to the rocker arm oil control valve mating surfaces (A). Install the component within 5 minutes of applying the liquid gasket.


NOTE:

1. If you apply liquid gasket P/N 08718-0012, the component must be installed within 4 minutes.
2. If too much time has passed after applying the liquid gasket, remove the old liquid gasket and residue, then reapply the new liquid gasket.

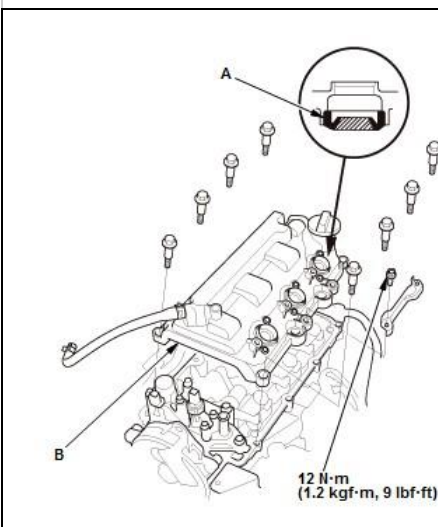

Courtesy of HONDA, U.S.A., INC.

4. Set the spark plug seals (A) on the spark plug tubes, and install the front cylinder head cover (B)
5. Inspect the spark plug seals for damage.

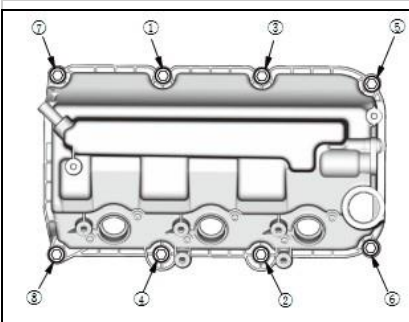


6. Tighten the bolts in three steps. In the final step torque the bolts, in sequence, 7 N.m (0.7 kgf.m, 5 lbf.ft).

NOTE:

1. Wait at least 30 minutes before filling the engine with oil.
2. Do not run the engine for at least 3 hours after installing the cylinder


3. Harness Holder - Install

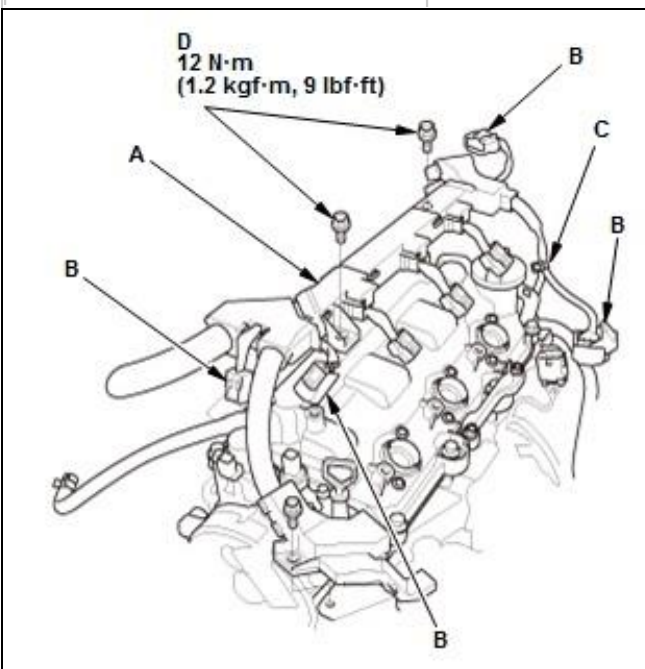

1. Install the harness holder (A)
2. Connect the connectors (B)
3. Install the harness clamp (C)
4. Tighten the harness holder mounting bolts (D).

Courtesy of HONDA, U.S.A., INC.

4. Connector (Alternator and A/C Compressor) and Positive Alternator Cable - Connect

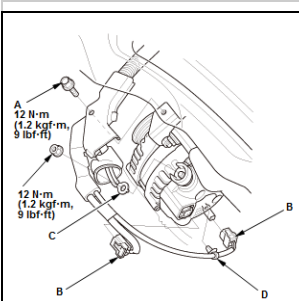

1. Install the bolt (A) securing the harness holder
2. Connect the connectors (B) and the positive alternator cable (C). Make sure the crimped side of the ring terminal faces away from the alternator when you connect it
3. Install the harness clamp (D).


Courtesy of HONDA, U.S.A., INC.

5. Ignition Coil - Install (Front Bank)

6. Intake Manifold - Install
Rear

7. Head Cover Gasket - Install

1. Check the spark plug seals for damage. If any seals are damaged, replace it

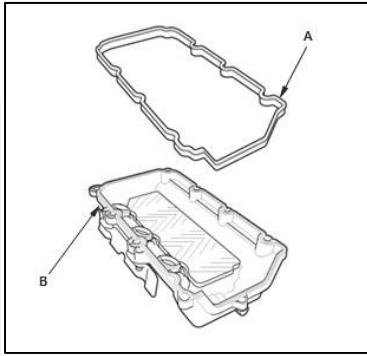


Courtesy of HONDA, U.S.A., INC.

2. Thoroughly clean the head cover gasket (A) and the groove of the cylinder head cover (B).

NOTE: *Check and if necessary, replace the head cover gasket*

3. Install the head cover gasket in the groove of the cylinder head cover. Make sure the head cover gasket is seated securely.

8. Rear Cylinder Head Cover - Install

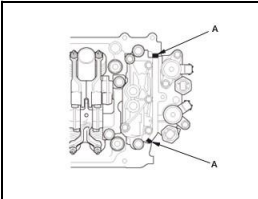


Courtesy of HONDA, U.S.A., INC.

1. Remove all of the old liquid gasket from the front rocker arm oil control valve and the cylinder head
2. Clean the head cover contacting surfaces with a shop towel
3. Apply liquid gasket (P/N 08717-0004, 08718-0003, 08718-0004, or 08718-0009) to the rocker arm oil control valve mating surfaces (A). Install the component within 5 minutes of applying the liquid gasket.


NOTE:

1. *If you apply liquid gasket P/N 08718-0012, the component must be installed within 4 minutes.*
2. *If too much time has passed after applying the liquid gasket, remove the old liquid gasket and residue, then reapply the new liquid gasket.*

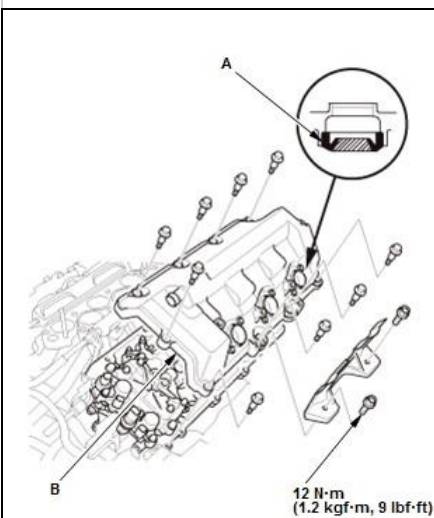

Courtesy of HONDA, U.S.A., INC.

4. Set the spark plug seals (A) on the spark plug tubes, and install the rear cylinder head cover (B)
5. Inspect the spark plug seals for damage.

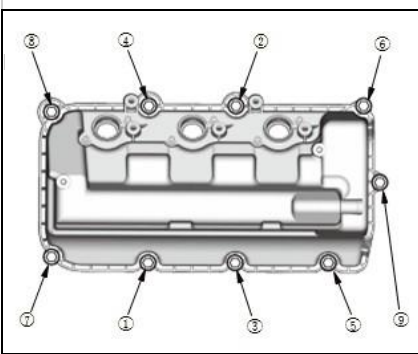


Courtesy of HONDA, U.S.A., INC.

6. Tighten the bolts in three steps. In the final step torque the bolts, in sequence, 7 N.m (7.1 kgf.m, 5 lbf.ft).

NOTE:

1. Wait at least 30 minutes before filling the engine with oil.
2. Do not run the engine for at least 3 hours after installing the cylinder head cover.

9. Harness Holder - Install

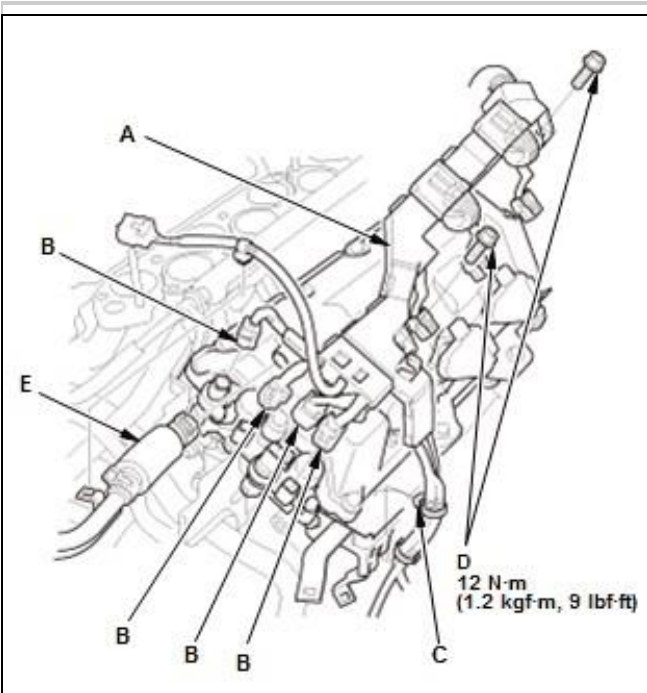

Courtesy of HONDA, U.S.A., INC.

1. Install the harness holder (A)
2. Connect the connectors (B)
3. Install the harness clamp (C)
4. Tighten the harness holder mounting bolts (D)
5. Connect the breather hose (E).

10. Ignition Coil - Install (Rear Bank)

11. Intake Manifold - Install