


2018 Acura RDX Base

Engine: 3.5L Eng

Drive Belt Removal And Installation (2013-18)

*: Available through the Acura Tool and Equipment Program 888-424-6857.


Special Tools Required

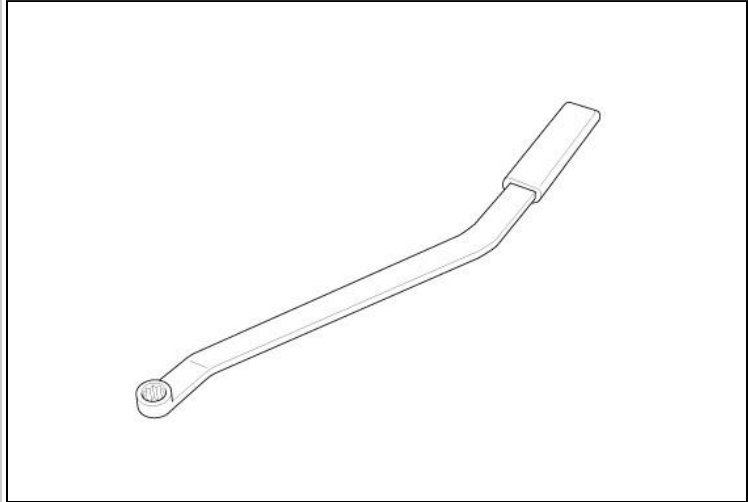Image	Description/Tool Number
	Belt Tension Release Tool Snap-on YA9317*, commercially available
Courtesy of HONDA, U.S.A., INC.	

*: Available through the Acura Tool and Equipment Program 888-424-6857.

Removal

1. Drive Belt - Remove

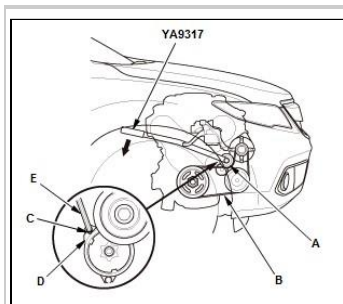


Courtesy of HONDA, U.S.A., INC.

1. Install the belt tension release tool (YA9317) onto the drive belt auto-tensioner as shown
2. Move the drive belt auto-tensioner (A) using the belt tension release tool in the direction of the arrow to relieve tension from the drive belt (B)
3. Align the hole on the lock (C) and the drive belt auto-tensioner (D), then insert a 6.0 mm (15/64 in) hex wrench (E) into the hole
4. Remove the drive belt.

Installation

1. Drive Belt - Install

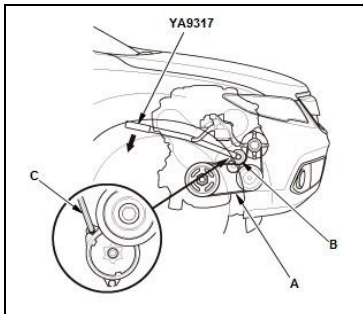

Courtesy of HONDA, U.S.A., INC.

1. Install the drive belt (A)
2. Move the drive belt auto-tensioner (B) using the belt tension releasetool (YA9317) in the direction of the arrow to relieve tension
3. Remove the 6.0 mm (15/64 in) hex wrench (C) to the hole
4. Remove the belt tension release tool.