

2018 Acura RDX Base Engine:
3.5L Eng VIN:

TESTING > RESETTING THE PARKING AND BACK-UP SENSOR CONTROL UNIT (2016-18) > PROCEDURE

1. Parking and Back-Up Sensor Control Unit - Reset
Reset the parking and back-up sensor control unit after doing any of the following actions:
2. When you replace the parking and back-up sensor.

When you change the parking and back-up sensor mounting location from the original location.

NOTE: Before performing the resetting procedure, make sure that each the parking and back-up sensor is connected.


Resetting Procedure

1. Turn the vehicle to the ON mode
2. Press the parking and back-up sensor button 10 times, within 10 seconds.

NOTE: Parking and back-up sensor switch indicator is blinks

3. Turn the vehicle to the OFF mode
4. Press and hold the parking and back-up sensor button
5. Turn the vehicle to the ON mode
6. Wait about 10 seconds.

NOTE: NOTE: When the resetting the parking and backup sensor control unit is successful, the buzzer sounds for 2 seconds.

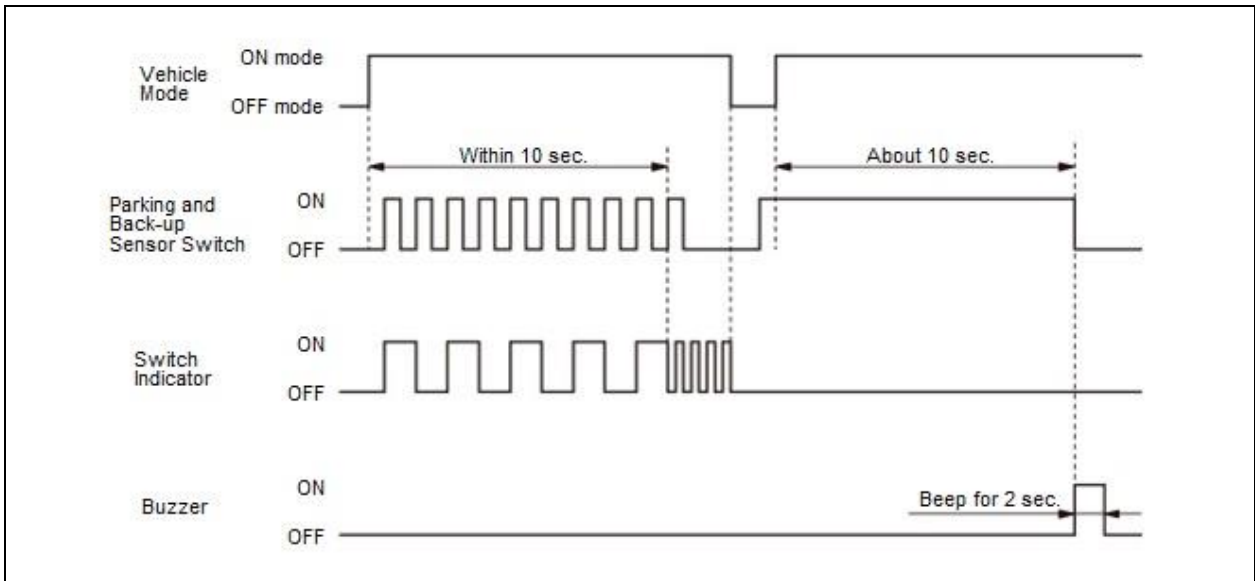

Courtesy of HONDA, U.S.A., INC.

7. Press the parking and back-up sensor button. Make sure that the system works normally.