

YMMS: 2018 Acura RDX Base
Engine: 3.5L Eng
VIN:

Oct 17, 2019
License:
Odometer:

REMOVAL & INSTALLATION > WATER PUMP REMOVAL AND INSTALLATION (2013-18) > REMOVAL

1. Engine Coolant - Drain

1. Drain the engine coolant - Refer to: Coolant Replacement (2013-15), or Coolant Replacement (2016-18) .


2. Timing Belt - Remove

1. Remove the timing belt - Refer to: Timing Belt Removal and Installation (2013-15), or Timing Belt Removal and Installation (2016-18) .

3. Timing Belt Adjuster - Remove

1. Remove the timing belt adjuster .

4. Water Pump - Remove

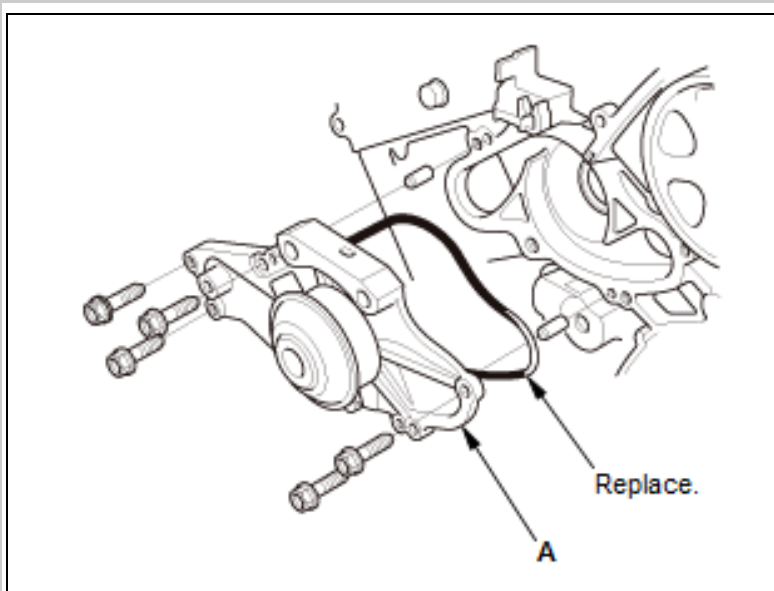


1. Remove the water pump (A).

Courtesy of HONDA, U.S.A., INC.

REMOVAL & INSTALLATION > WATER PUMP REMOVAL AND INSTALLATION (2013-18) > INSTALLATION

1. Water Pump - Install

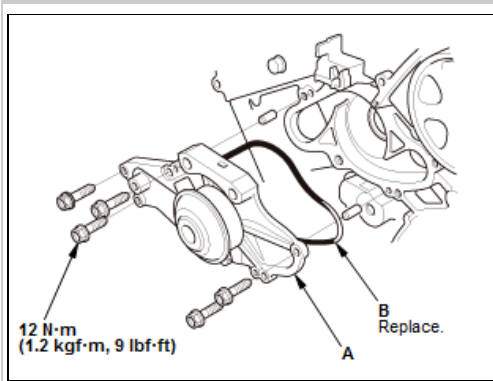

Courtesy of HONDA, U.S.A., INC.

1. Inspect and clean the O-ring groove and the mating surface of the engine block
2. Install the water pump (A) with a new O-ring (B)
3. Clean up any spilled engine coolant.

2. Timing Belt Adjuster - Install

1. Install the timing belt adjuster .

3. Timing Belt - Install

1. Install the timing belt - Refer to: Timing Belt Removal and Installation (2013-15), or Timing Belt Removal and Installation (2016-18) .

4. Engine Coolant - Refill

1. Refill the radiator with engine coolant, and bleed the air from the cooling system - Refer to: Coolant Replacement (2013-15), or Coolant Replacement (2016-18) .