

YMMS: 2018 Acura RDX Base

Engine: 3.5L Eng


Power Seat Control Unit Removal And Installation (2013-18)

Removal

1. Driver's Seat Front Cover - Remove

1. Remove the driver's seat front cover. **NOTE:** If you are removing the driver's seat front cover, you do not need to remove the driver's seat.

2. Power Seat Control Unit - Remove

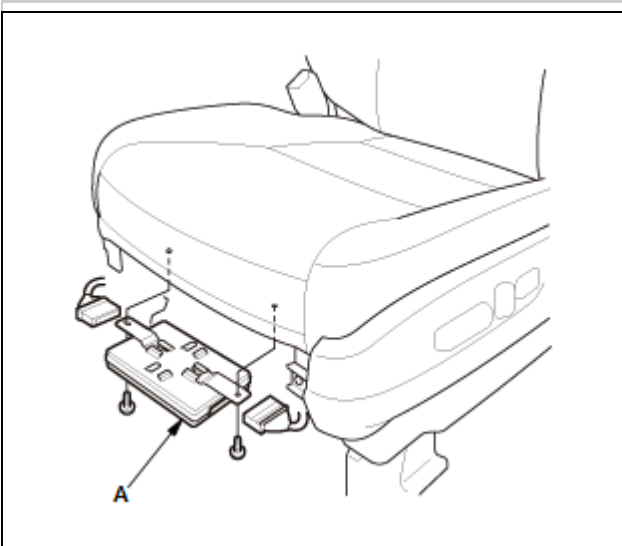


Courtesy of HONDA, U.S.A., INC.

1. Disconnect the power seat control unit connectors
2. Remove the power seat control unit (A).

Installation

1. Power Seat Control Unit - Install

1. Install the power seat control unit (A)
2. Connect the power seat control unit connectors.

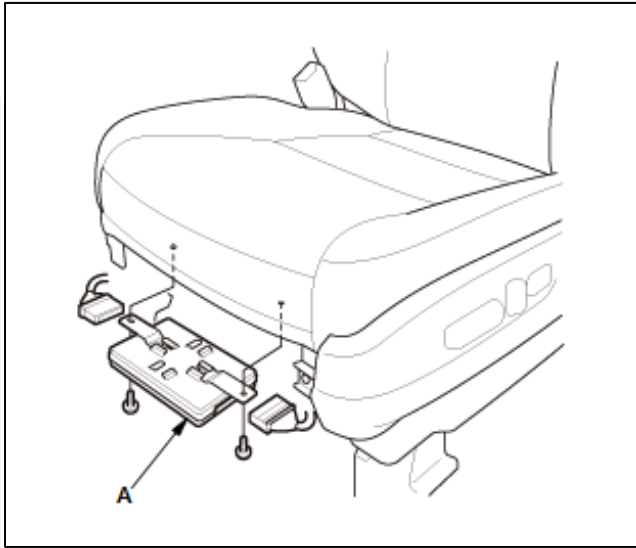

Courtesy of HONDA, U.S.A., INC.

2. Driver's Seat Front Cover - Install

1. Install the driver's seat front cover .