

**REMOVAL & INSTALLATION > LINE PRESSURE SWITCH REMOVAL
AND INSTALLATION (2013-18) > REMOVAL**

1. Air Cleaner - Remove

1. Remove the air cleaner .


2. Battery - Remove

1. Do the battery removal procedure .

3. Battery Base - Remove

1. Remove the battery base .


4. Line Pressure Switch - Remove

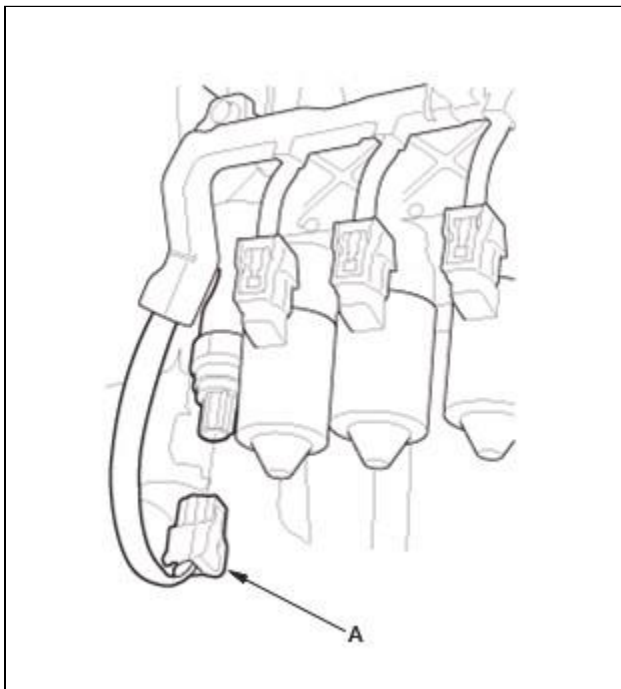

1. Disconnect the line pressure switch connector (A).

Courtesy of HONDA, U.S.A., INC.

2. Remove the line pressure switch (A) with the sealing washer (B).

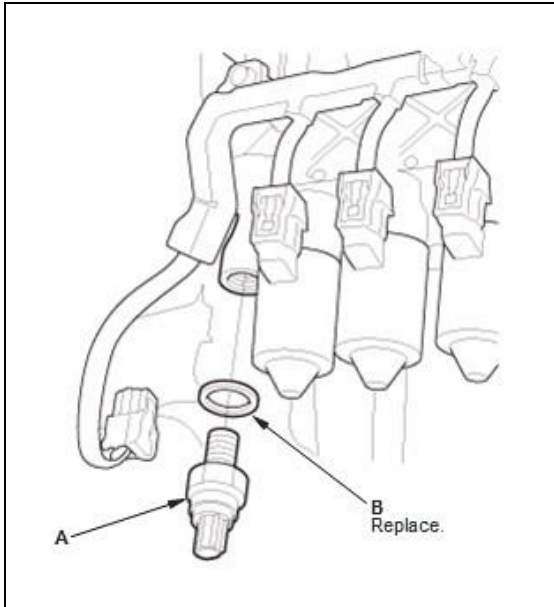


Courtesy of HONDA, U.S.A., INC.

REMOVAL & INSTALLATION > LINE PRESSURE SWITCH REMOVAL AND INSTALLATION (2013-18) > INSTALLATION

1. Line Pressure Switch - Install


Fig 1: Line Pressure Switch With Torque Specifications

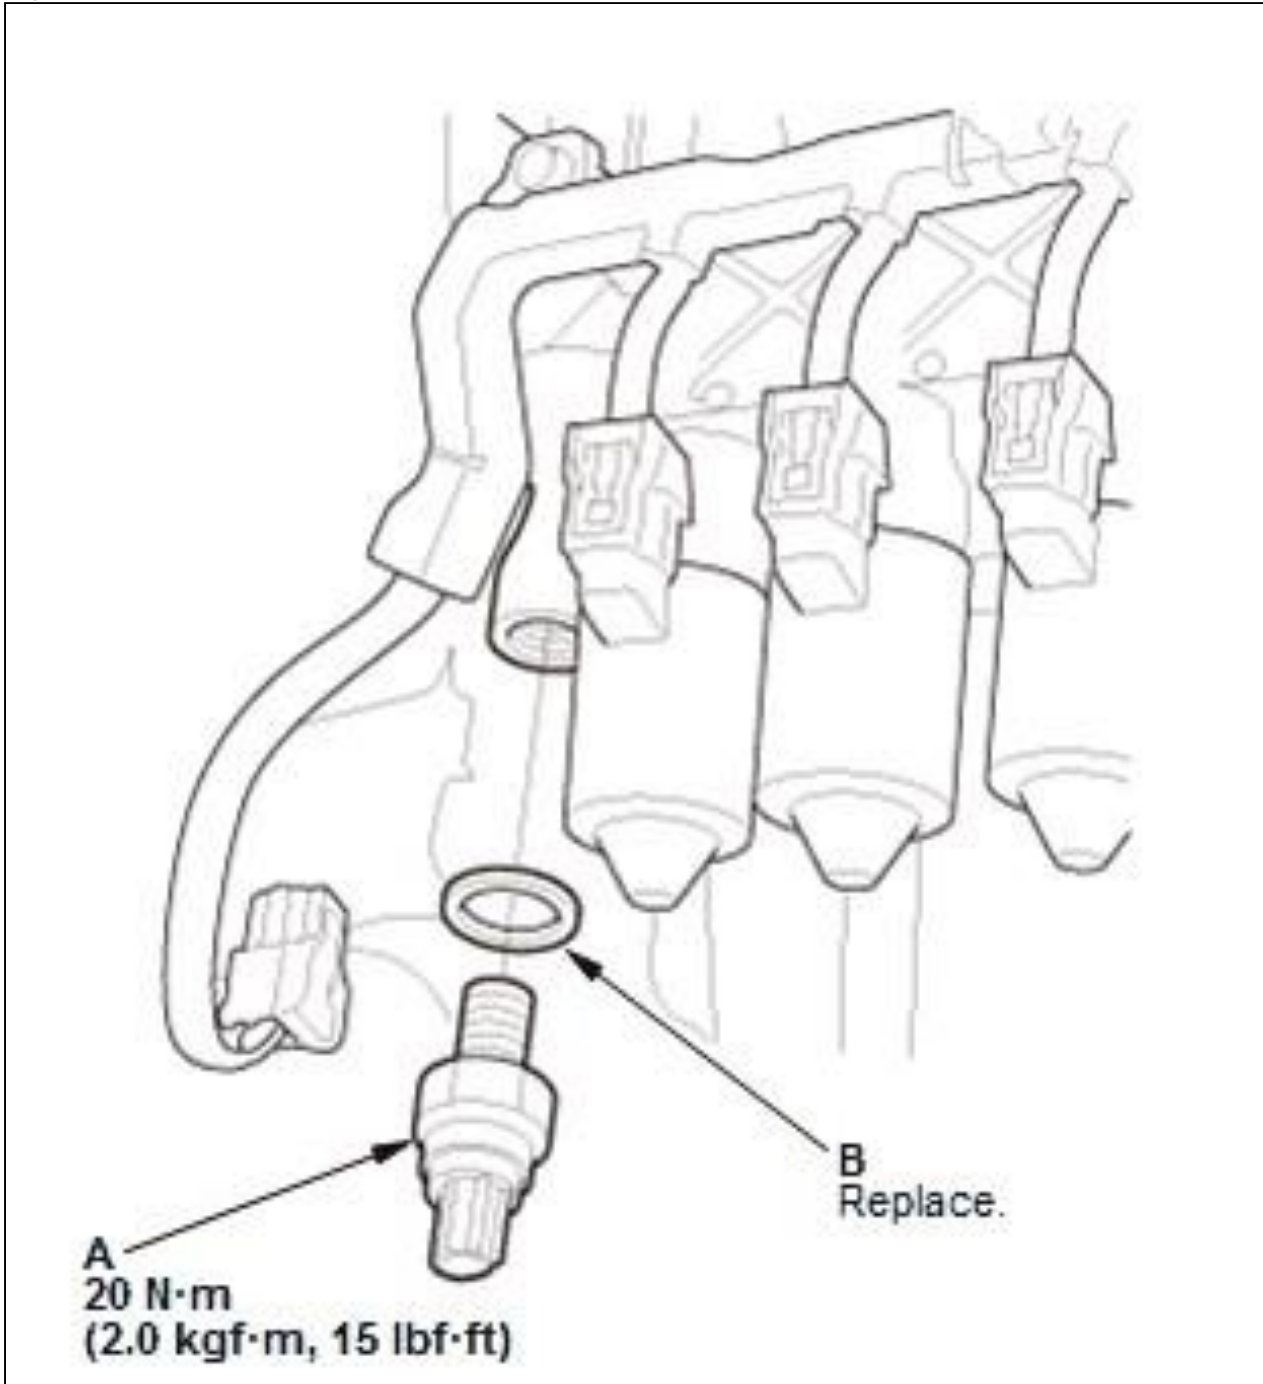

Courtesy of HONDA, U.S.A., INC.

1. Install the line pressure switch (A) using a new sealing washer (B). Tighten the switch by gripping the metal part, not the plastic part.

2. Connect the line pressure switch connector (A) securely. **NOTE:** Check the connector for corrosion, dirt, or oil, and clean or repair if necessary.

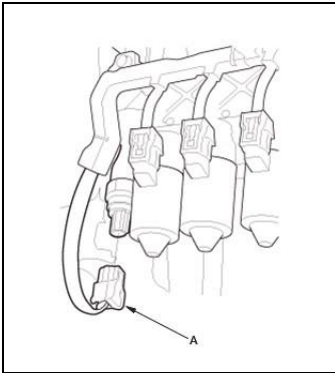

Courtesy of HONDA, U.S.A., INC.

2. Battery Base - Install

1. Install the battery base .

3. Battery - Install

1. Do the battery installation procedure .

4. Air Cleaner - Install

1. Install the air cleaner .