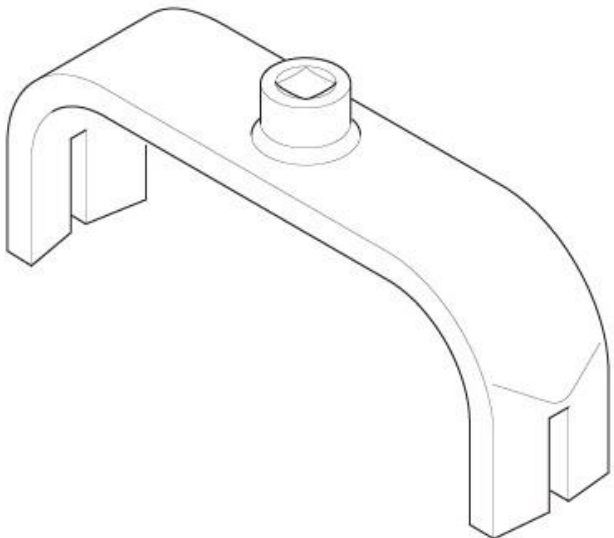


REMOVAL & INSTALLATION > FUEL TANK UNIT REMOVAL AND INSTALLATION

(2013-18)

Special Tools Required

Image	Description/Tool Number
 <p data-bbox="164 1113 470 1144">Courtesy of HONDA, U.S.A., INC.</p>	<p data-bbox="1101 798 1421 871">Fuel Nut Wrench 07AAA-T0AA100</p>

REMOVAL & INSTALLATION > FUEL TANK UNIT REMOVAL AND INSTALLATION

(2013-18) > REMOVAL

1. Fuel Pressure - Relieve


1. Relieve the fuel pressure .

2. Rear Seat Cushion - Remove

1. Remove the rear seat cushion - Refer to: Rear Seat Removal and Installation (2013-18), or Rear Seat Removal and Installation(With Seat Heater) (2016-18) .

3. Fuel Tank Unit Access Panel - Remove


	1. Remove the access panel (A) from the floor
--	---

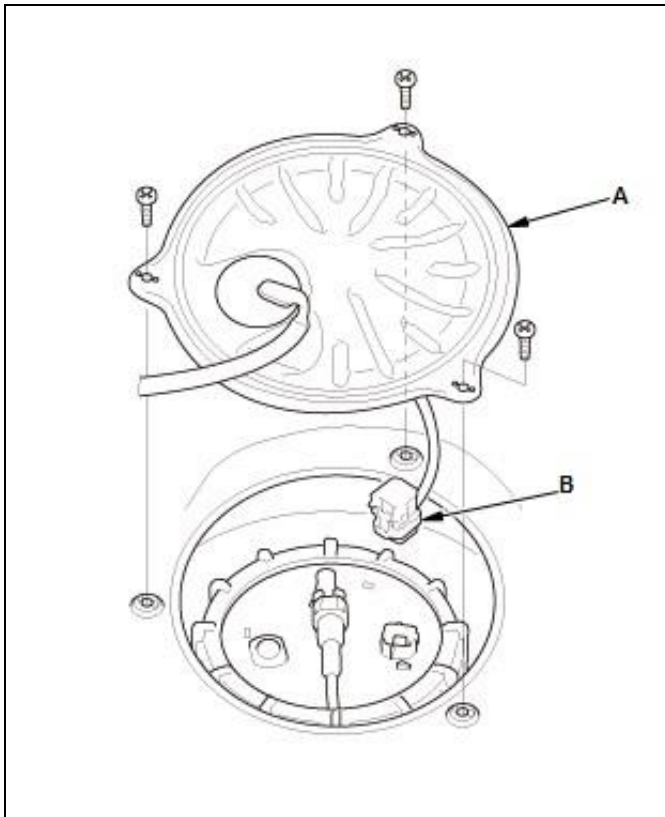

2. Disconnect the fuel tank unit connector (B).

Courtesy of HONDA, U.S.A., INC.

4. Fuel Line Quick-Connect Fitting - Disconnect

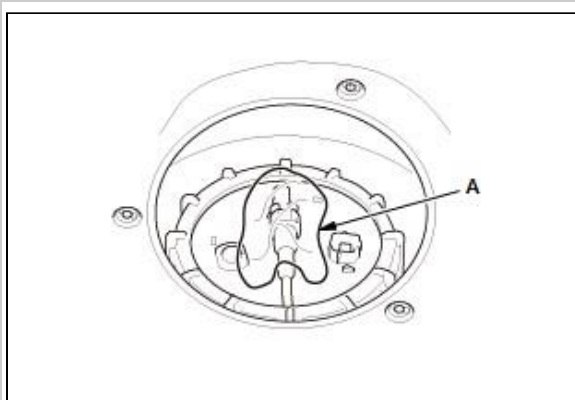


1. Place a rag or shop towel (A) over the quick-connect fitting.
2. Disconnect the quick-connect fitting from the fuel tank unit .

Courtesy of HONDA, U.S.A., INC.

5. Fuel Tank Unit Locknut - Loosen




1. Using the fuel nut wrench, loosen the fuel tank unit locknut (A).

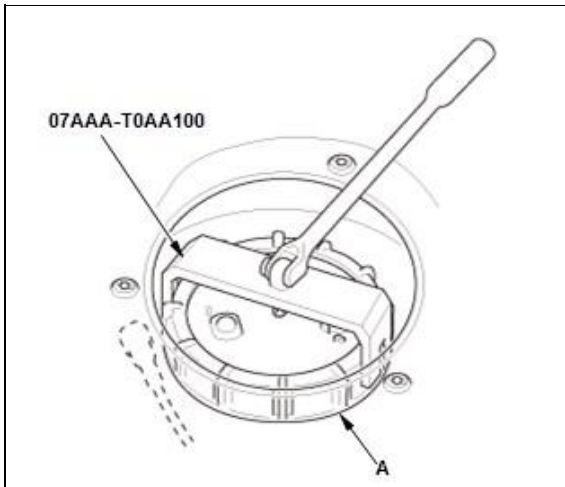

Courtesy of HONDA, U.S.A., INC.

6. Fuel Tank Unit - Remove

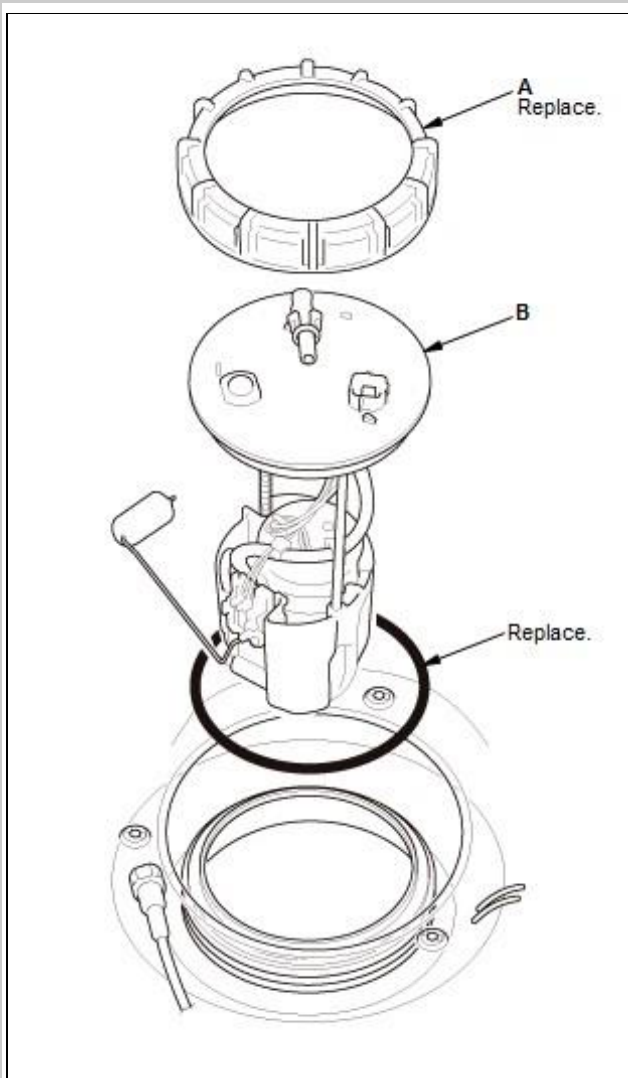


1. Remove the locknut (A) and the fuel tank unit (B).

Courtesy of HONDA, U.S.A., INC.

REMOVAL & INSTALLATION > FUEL TANK UNIT REMOVAL AND INSTALLATION

(2013-18) > INSTALLATION

1. Fuel Tank Unit - Temporarily Insert

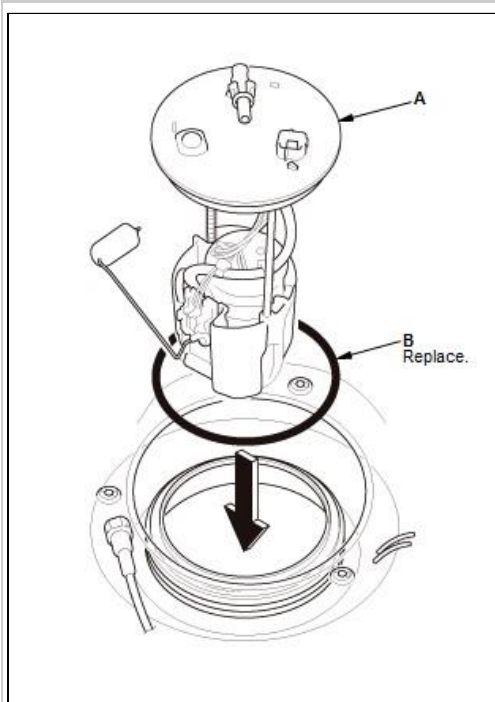


1. Temporarily insert the fuel tank unit (A) into the fuel tank with a new O-ring (B).

1. Be careful not to damage the new O-ring.
2. Be careful not to bend the fuel gauge sending unit.
3. Do not coat the base gasket with oil.

Courtesy of HONDA, U.S.A., INC.

2. Fuel Tank Unit - Align

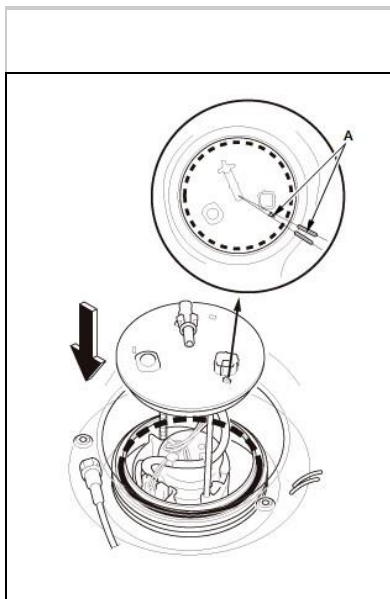


1. Align the marks (A) on the fuel tank and fuel tank unit, then insert the fuel tank unit into the fuel tank.

NOTE: To avoid a fuel leak, check the base gasket, visually or by hand, to make sure it is not pinched.

Courtesy of HONDA, U.S.A., INC.

3. Fuel Tank Unit - Install


1. Tighten a new locknut (A) by hand holding the fuel tank unit vertically.

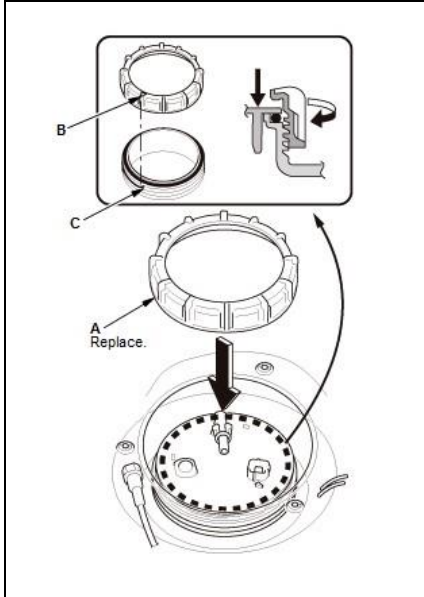

NOTE: Before tightening, align the mark (B) on the locknut to the start of the thread (C).

Courtesy of HONDA, U.S.A., INC.

Fig 1: Fuel Pump Locknut With Torque Specifications

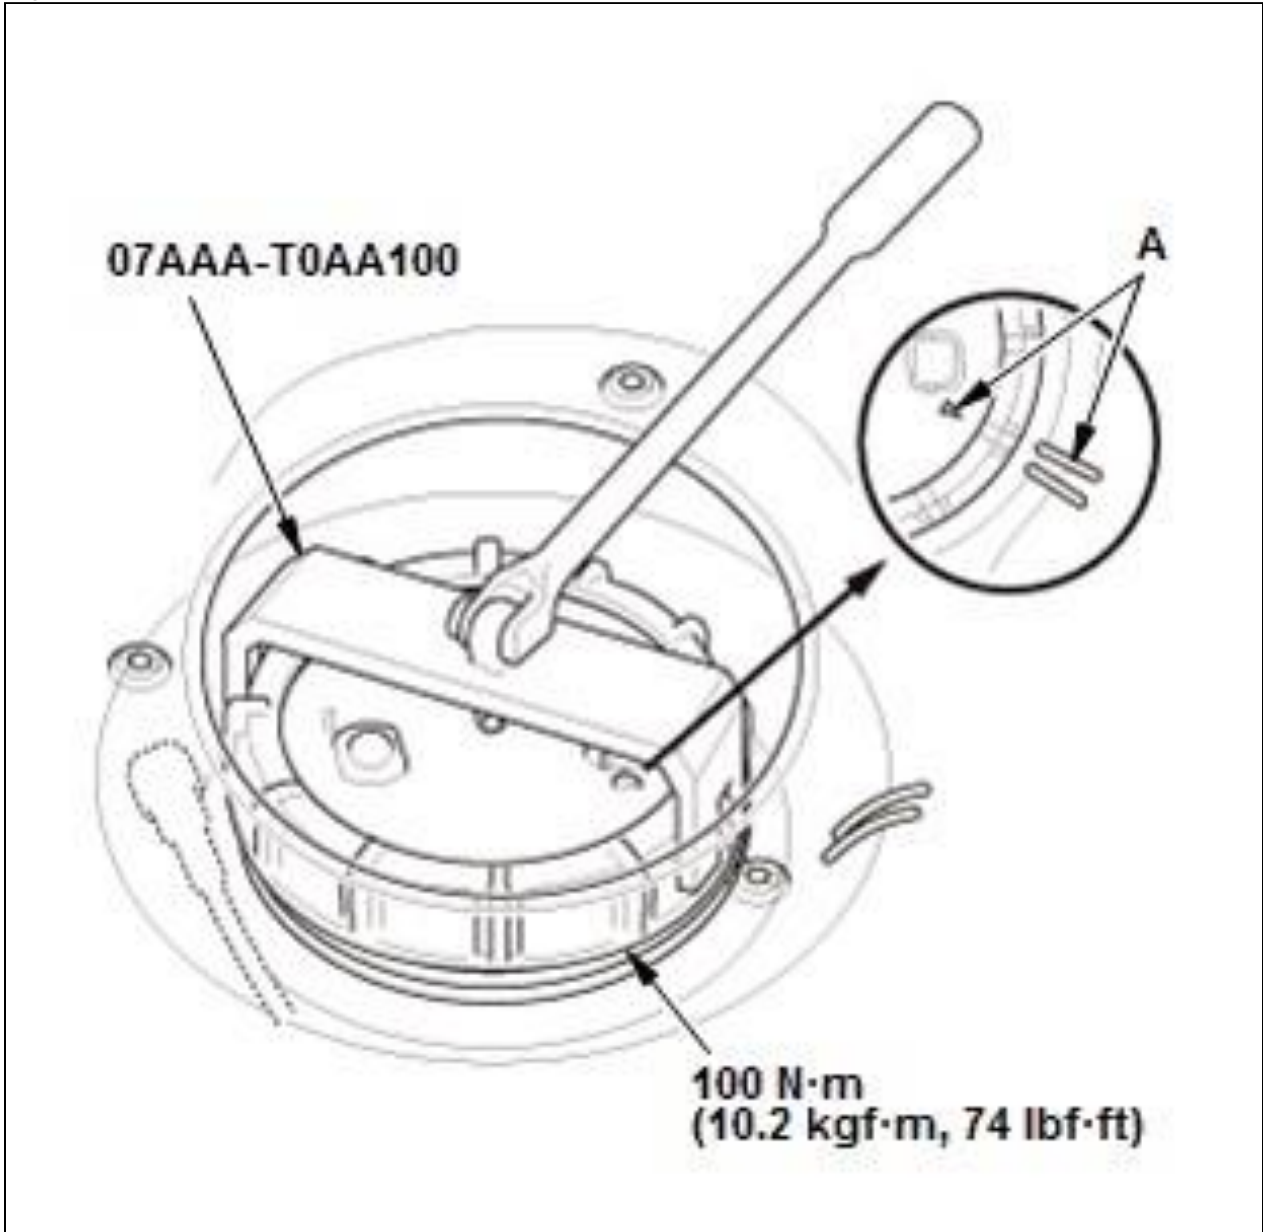

Courtesy of HONDA, U.S.A., INC.


2. Using the fuel nut wrench, tighten the locknut to the specified torque.

NOTE:

1. After tightening, make sure the marks (A) are still aligned.
2. After installation, check the base gasket, visually or by hand, to make sure it is not pinched.


4. Fuel Line Quick-Connect Fitting - Connect

	1. Connect the quick-connect fitting (A) to the fuel tank unit .
--	--

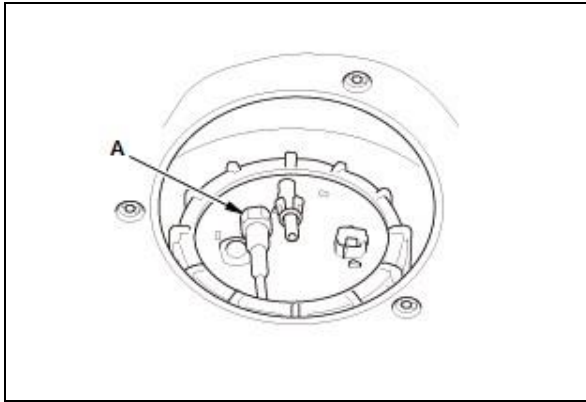

Courtesy of HONDA, U.S.A., INC.


5. Fuel Leak - Check

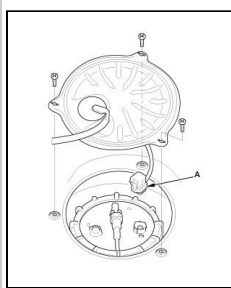

Courtesy of HONDA,
U.S.A., INC.

1. Connect the fuel tank unit connector (A)
2. Press the engine start/stop button to select the ON mode (but do not operate the starter motor). The fuel pump runs for about 2 seconds, and fuel pressure rises. Repeat this two or three times, then make sure there are no fuel leaks.

6. Fuel Tank Unit Access Panel - Install

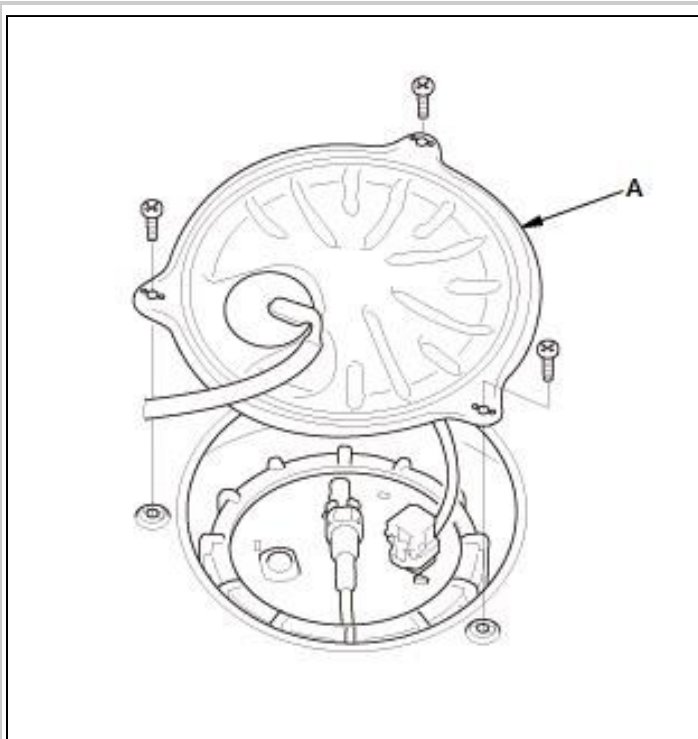

1. Install the access panel (A) to the floor.

Courtesy of HONDA, U.S.A., INC.

7. Rear Seat Cushion - Install

1. Install the rear seat cushion - Refer to: Rear Seat Removal and Installation (2013-18), or Rear Seat Removal and Installation(With Seat Heater) (2016-18) .