

**REMOVAL & INSTALLATION > TRANSFER ASSEMBLY FLUID REPLACEMENT  
(2013-  
18) > REPLACEMENT**

1. Engine - Warm Up


1. Start the engine. Hold the engine speed at 3,000 rpm without load (in P or N) until the radiator fan comes on, then let it idle.

2. Vehicle - Lift

1. Raise and support the vehicle .

3. Transfer Assembly Fluid - Drain

Fig 1: Transfer Assembly Fluid Drain Plug With Torque Specifications

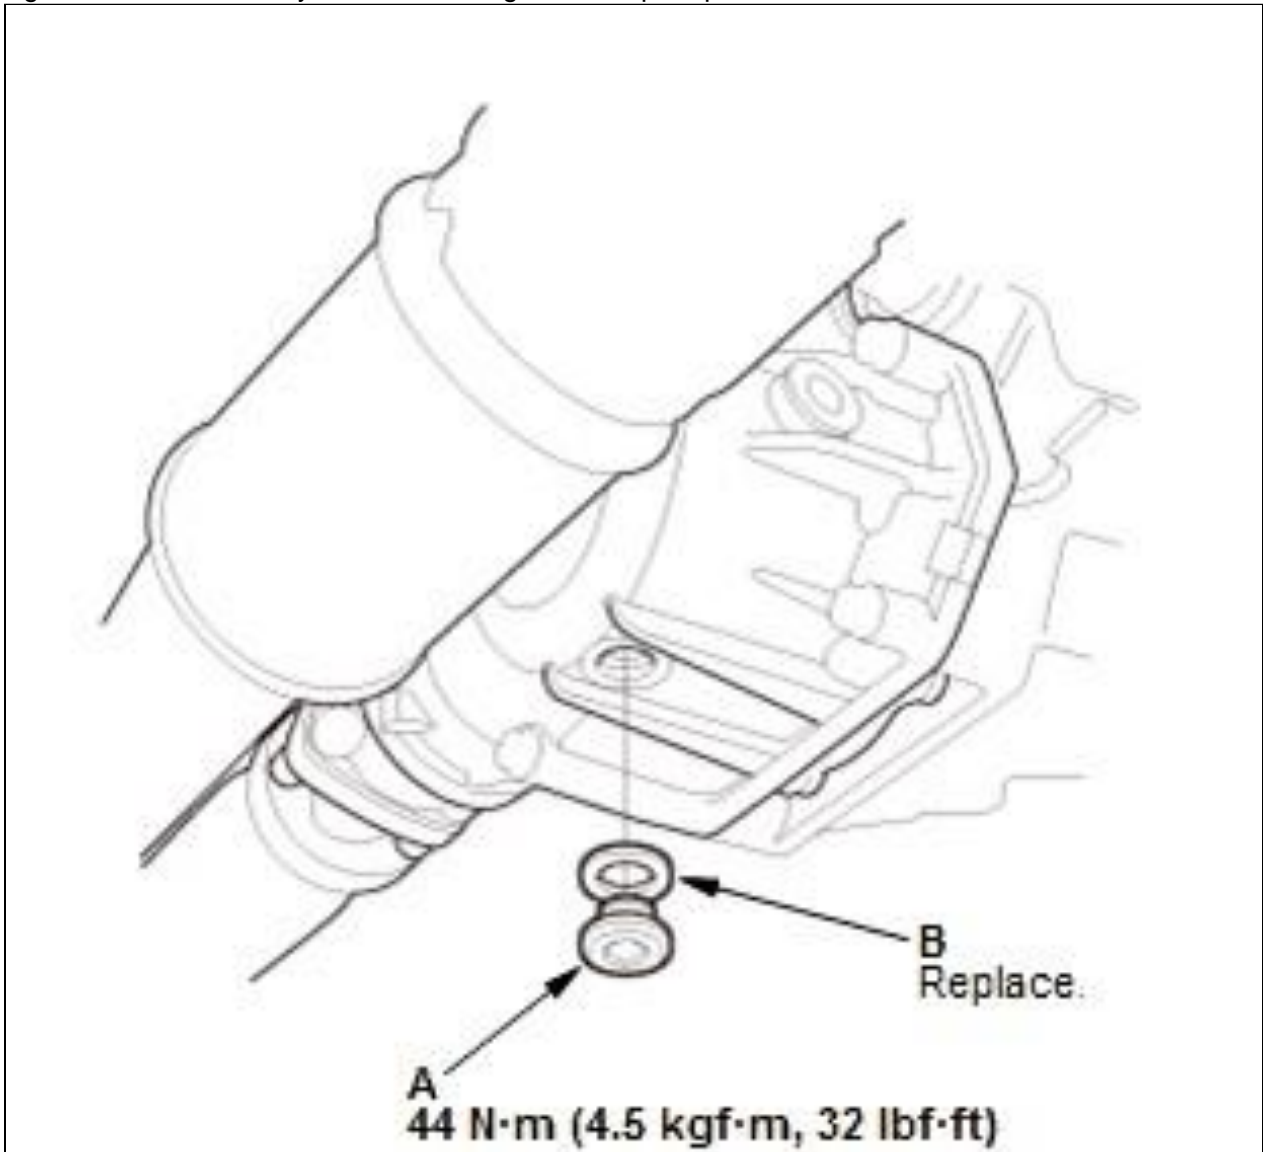

Courtesy of HONDA, U.S.A., INC.

1. Remove the drain plug (A)
2. Drain the transfer fluid
3. Reinstall the drain plug using a new sealing washer (B).


#### 4. Transfer Assembly Fluid - Refill

1. Remove the filler plug (A)
2. Refill the transfer assembly with the recommended fluid through the filler hole (B) until the fluid flows out. Use an Acura HGO-1.

**Transfer Assembly Fluid Capacity:**

**0.41 L (0.43 US qt) at fluid change**

Fig 2: Transfer Assembly Fluid Filler Plug With Torque Specifications

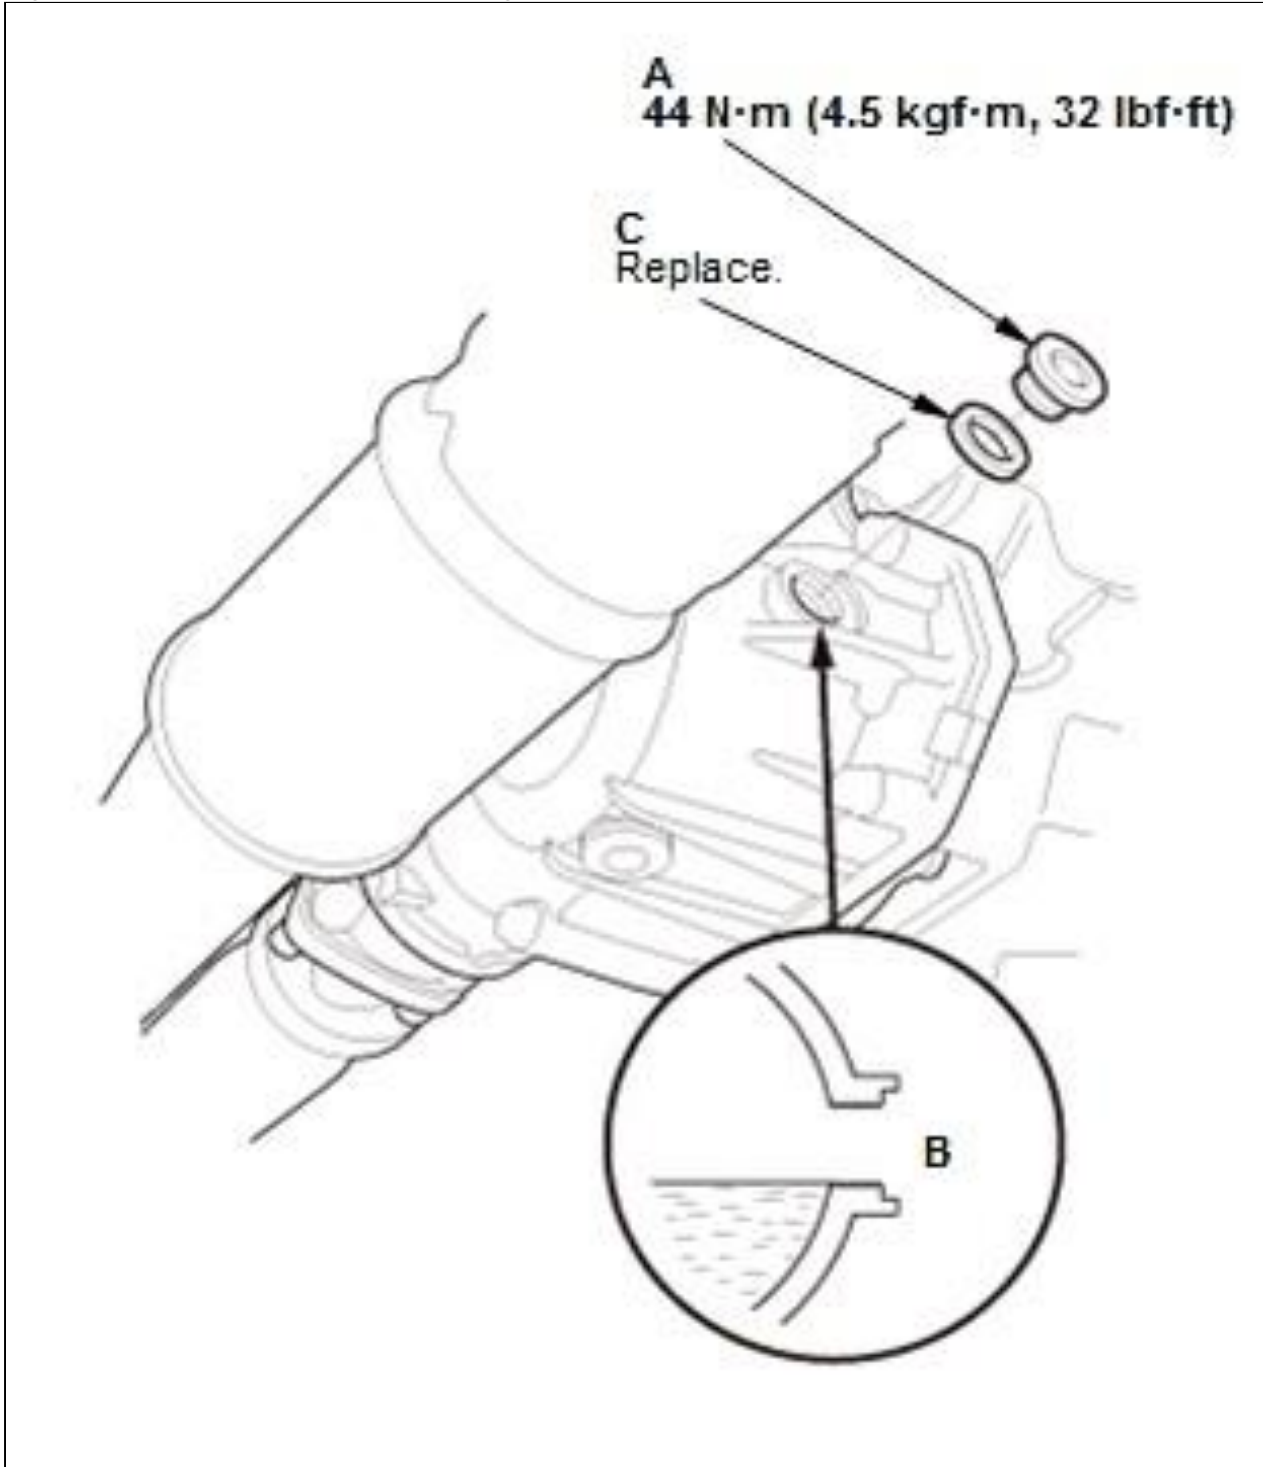

**0.45 L (0.48 US qt) at overhaul**

3. Reinstall the filler plug using a new sealing washer (C).