


## Timing Belt Drive Pulley Removal And Installation (2016-18)

### Removal / Installation

1. Timing Belt - Remove
2. Timing Belt Drive Pulley - Remove

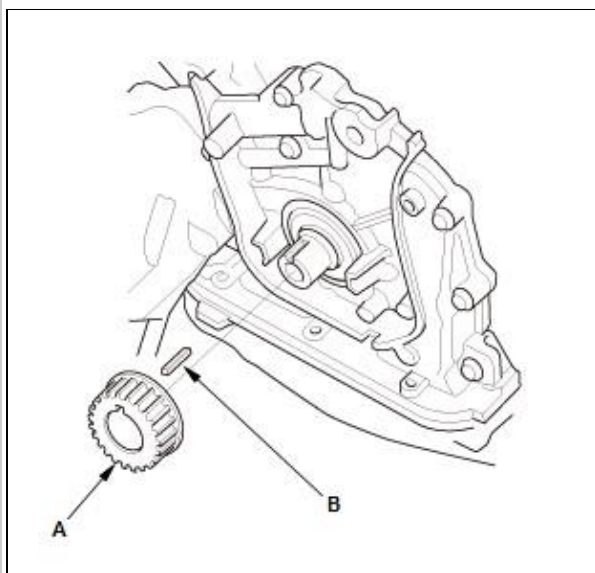

1. Remove the timing belt drive pulley (A) and the key (B).

Courtesy of HONDA, U.S.A., INC.

3. All Removed Parts - Install

1. Install the removed parts in the reverse order of removal.

**NOTE:** Inspect the timing belt drive pulley and the key for damage. If it is cracked or damaged, replace the timing belt drive pulley and the key.