


REMOVAL INSTALLATION > VENTILATED SEAT CONTROL UNIT REMOVAL AND INSTALLATION (2016-18) > REMOVAL INSTALLATION

1. Center Console - Remove
2. Ventilated Seat Control Unit - Remove

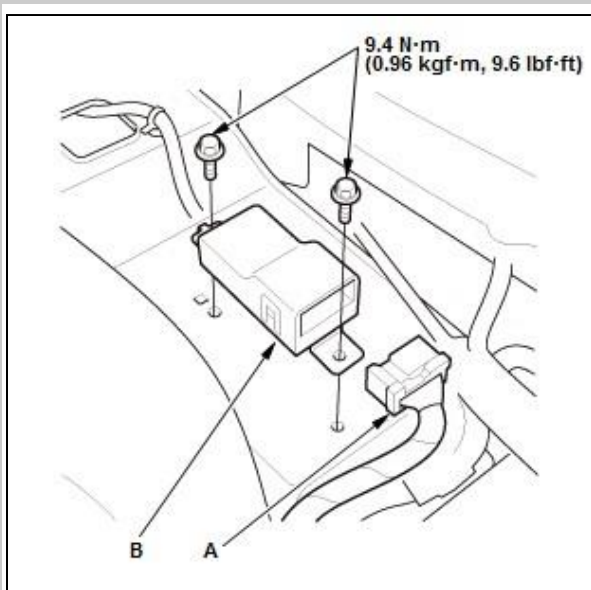

Courtesy of HONDA, U.S.A., INC.

1. Disconnect the ventilated seat control unit connector (A)
2. Remove the ventilated seat control unit (B).

3. All Removed Parts - Install

1. Install the parts in the reverse order of removal.