
TESTING > VENTILATED SEAT SWITCH TEST (2016-18) > TEST

- 1. Center Console Panel Remove
- 2. Ventilated Seat Switch Test
 - 1. When an LED is located between terminals, check if the LED lights up by connecting power and ground to the LED.
 - 2. Note this important operating characteristic; diode bias causes a diode to fully conduct electricity in one direction (forward), while not at all in the opposite direction (reverse).

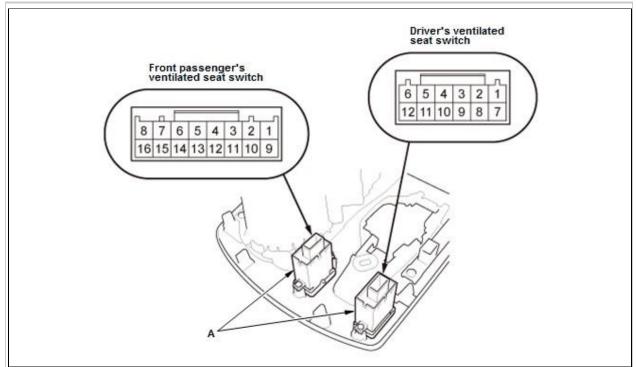

Courtesy of HONDA, U.S.A., INC.

ON 0	э	+
/ENTILATION Indicator	-0	0
ON OT	Э	
HEAT		
	э	

- 2. If the result is not as specified, replace the ventilated seat switch(s) .
- 3. All Removed Parts Install

1. Install the parts in the reverse order of removal.