





- Front A/F Sensor (Bank 2, Sensor 1)
- Rear A/F Sensor (Bank 1, Sensor 1)
- Front Secondary HO2S (Bank 2, Sensor 2)
- Rear Secondary HO2S (Bank 1, Sensor 2)
- Under-Hood Fuse/Relay Box

- No. 2 Ignition Coil
- No. 4 Ignition Coil
- No. 6 Ignition Coil
- No. 1 Ignition Coil
- No. 3 Ignition Coil
- No. 5 Ignition Coil

RDX Under-Hood Fuse/Relay Box 3 of 3

