


Ignition Coil and Spark Plug Removal and Installation

Removal


1. Engine Cover - Remove

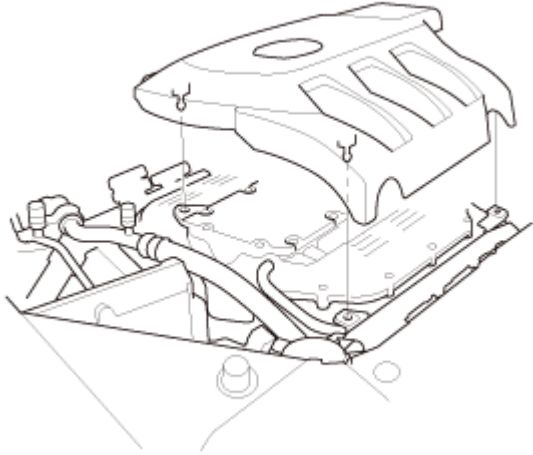

1. Remove the engine cover.


2. Ignition Coil - Remove

FRONT

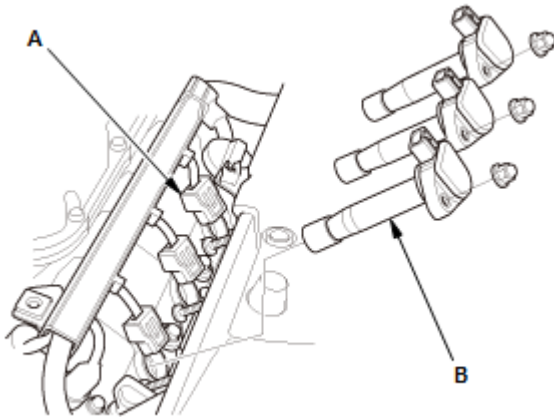

1. Disconnect the ignition coil connectors (A).
2. Remove the ignition coils (B).


REAR

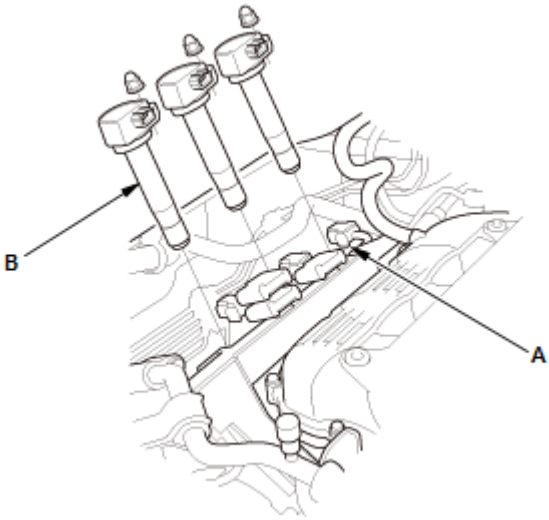

3. Spark Plug - Remove

FRONT

1. Remove the spark plugs.

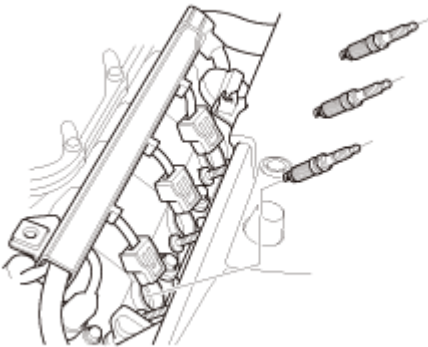


REAR



Installation

1. Spark Plug - Install


FRONT

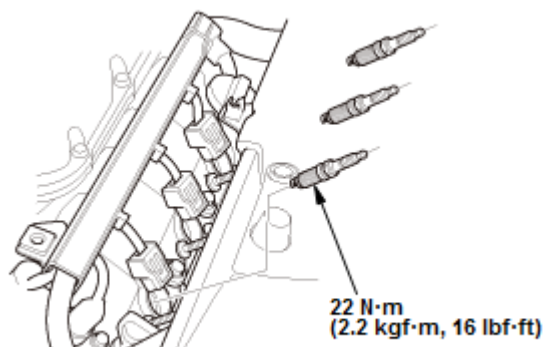

1. Apply a small amount of anti-seize compound to the plug threads, and screw the plugs into the cylinder head, finger tight, then tighten the plugs to the specified torque.


Specified Torque:
22 N·m (2.2 kgf·m, 16 lbf·ft)

REAR

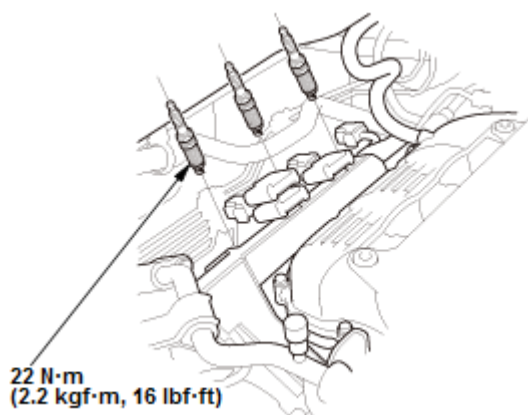


2. Ignition Coil - Install

FRONT

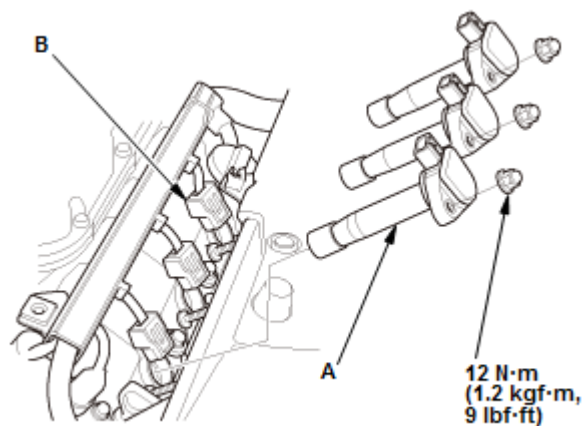

1. Install the ignition coils (A).
2. Connect the ignition coil connectors (B).

REAR

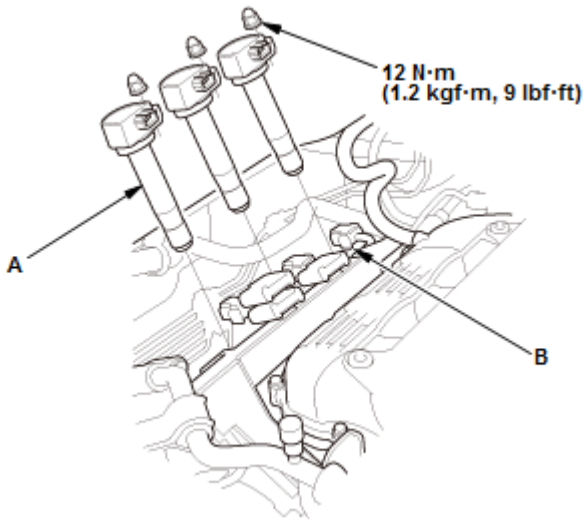

3. Engine Cover - Install

1. Install the engine cover.

