

REMOVAL & INSTALLATION > REAR BRAKE DISC REMOVAL AND INSTALLATION > REMOVAL**NOTE:** Keep grease away from the brake disc and the brake pads.

1. Vehicle - Lift

1. Raise and support the vehicle .


2. Rear Wheel - Remove

1. Remove the rear wheel .

3. Parking Brake - Release

1. Release the parking brake lever fully.

4. Brake Caliper - Remove

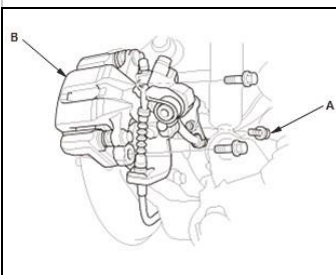


Courtesy of HONDA, U.S.A., INC.

1. Remove the brake hose mounting bolt (A)
2. Remove the brake caliper assembly (B).

NOTE:

1. To prevent damage to the caliper assembly or brake hose, use a short piece of wire to hang the caliper assembly from the undercarriage.
2. Do not twist the brake hose and the parking brake cable excessively.

5. Brake Disc - Remove

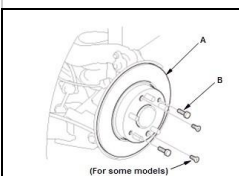Courtesy of HONDA,
U.S.A., INC.


1. Remove the brake disc (A).

NOTE: If the brake disc is stuck to the hub bearing unit, thread two 8 x 1.25 mm bolts (B) into the brake disc to push it away from the hub bearing unit. Turn each bolt 90 degrees at a time to prevent the brake disc from binding.

REMOVAL & INSTALLATION > REAR BRAKE DISC REMOVAL AND INSTALLATION > INSTALLATION**NOTE:** Keep grease away from the brake disc and the brake pads.

1. Brake Disc - Install

Fig 1: Brake Disk Retaining Bolts Torque Specifications

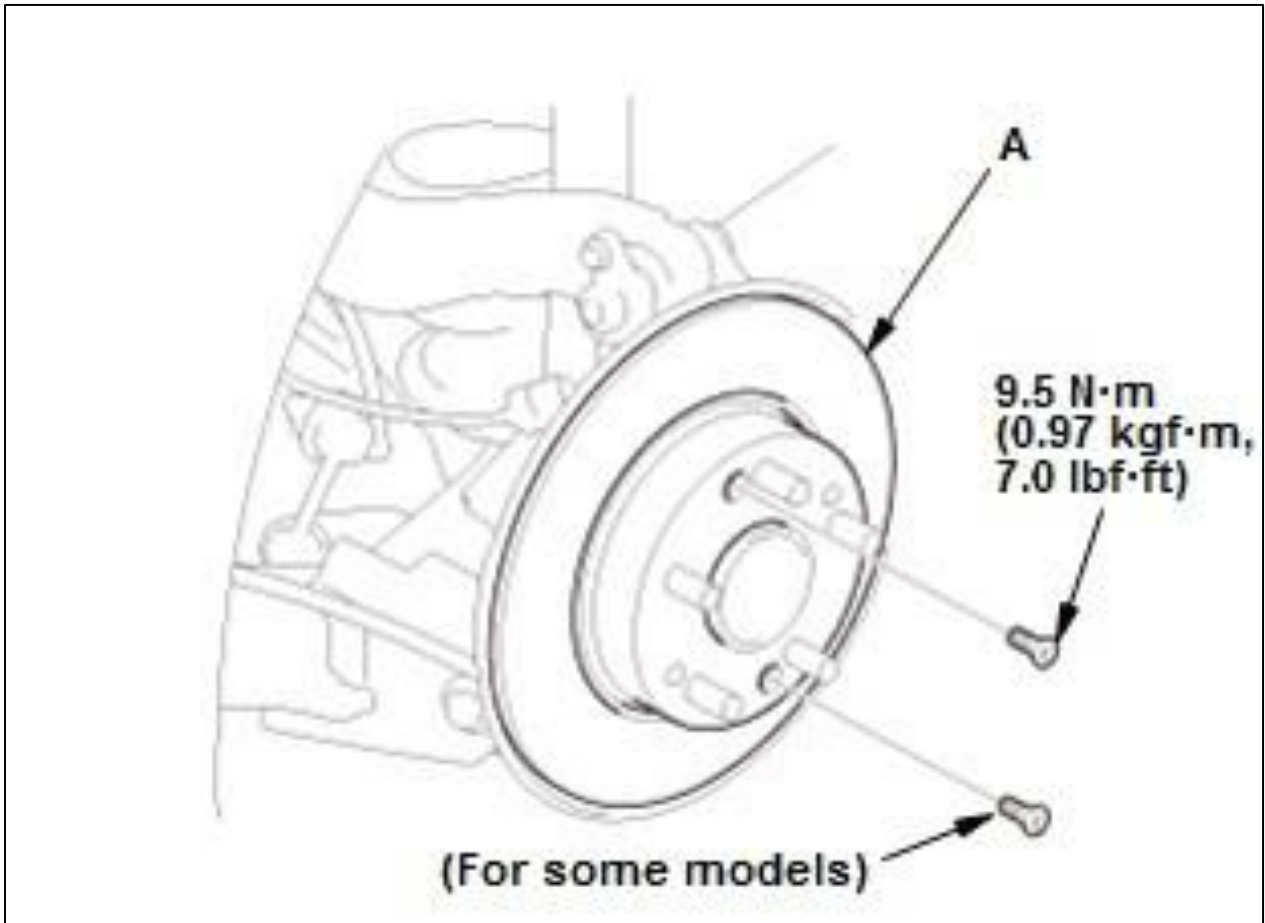


Courtesy of HONDA, U.S.A., INC.

1. Install the brake disc (A).

NOTE: Before installing the brake disc, clean the mating surfaces between the hub bearing unit and the inside of the brake disc.

2. Brake Caliper - Install

Fig 2: Disk Brake Caliper Mounting Bolts With Torque Specifications

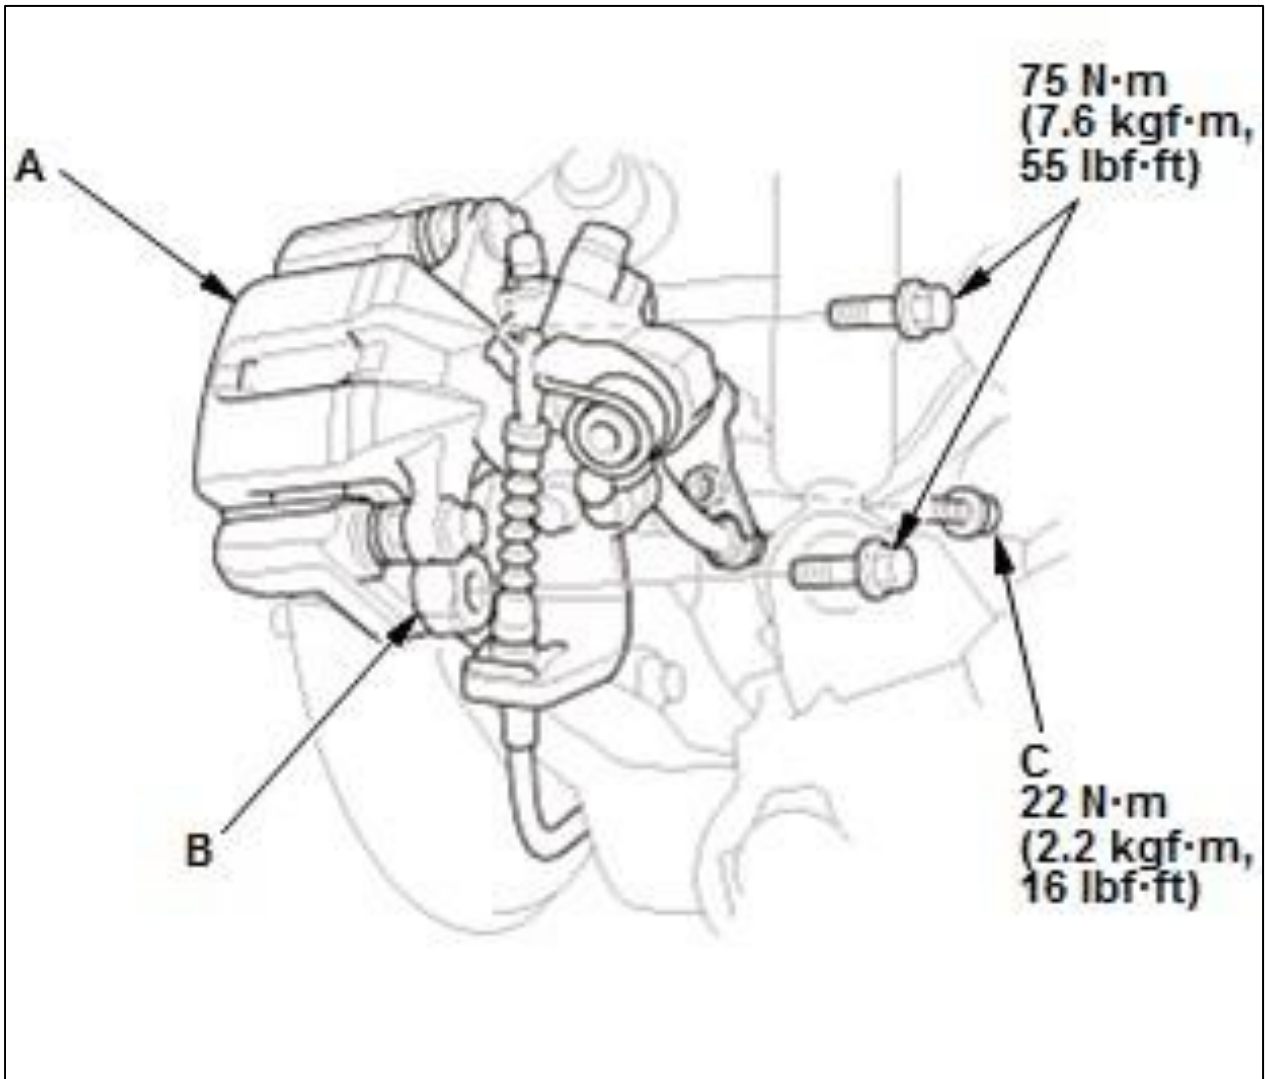

Courtesy of HONDA, U.S.A., INC.

1. Install the brake caliper assembly (A).
NOTE: Make sure the washers (B) are in position.
2. Install the brake hose mounting bolt (C).

3. Rear Wheel - Install

1. Install the rear wheel .

4. Parking Brake - Adjust

1. Adjust the parking brake .