


# Cylinder Head


## Timing Belt Installation (cont'd)

9. Install the timing belt in a counterclockwise sequence starting with the drive pulley.

- 1 Drive pulley (A).
- 2 Idler pulley (B).
- 3 Front camshaft pulley (C).
- 4 Water pump pulley (D).
- 5 Rear camshaft pulley (E).
- 6 Adjusting pulley (F).

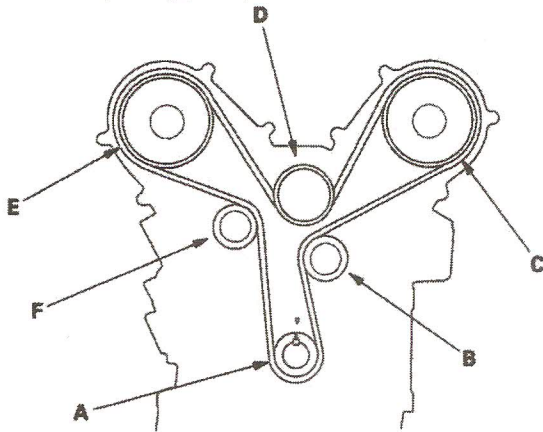

10. Tighten the idler pulley bolt.

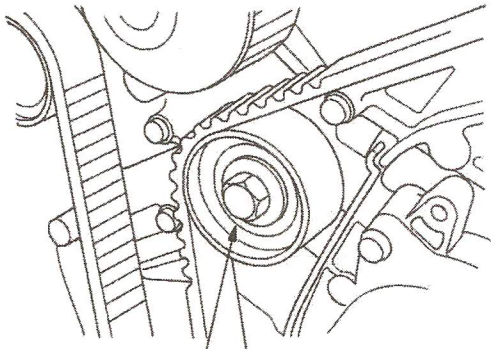

10 x 1.25 mm  
44 N·m (4.5 kgf·m, 33 lbf·ft)

11. Remove the pin from the auto-tensioner.

