


Fuel Supply System

Fuel Pressure Relieving

Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the fuel pulsation damper on top of the fuel rail.

1. Make sure you have the anti-theft code for the radio, then write down the frequencies for the radio's preset buttons.
2. Disconnect the battery negative cable from the battery negative terminal.
3. Remove the fuel fill cap.
4. Use a wrench on the fuel pulsation damper (A).

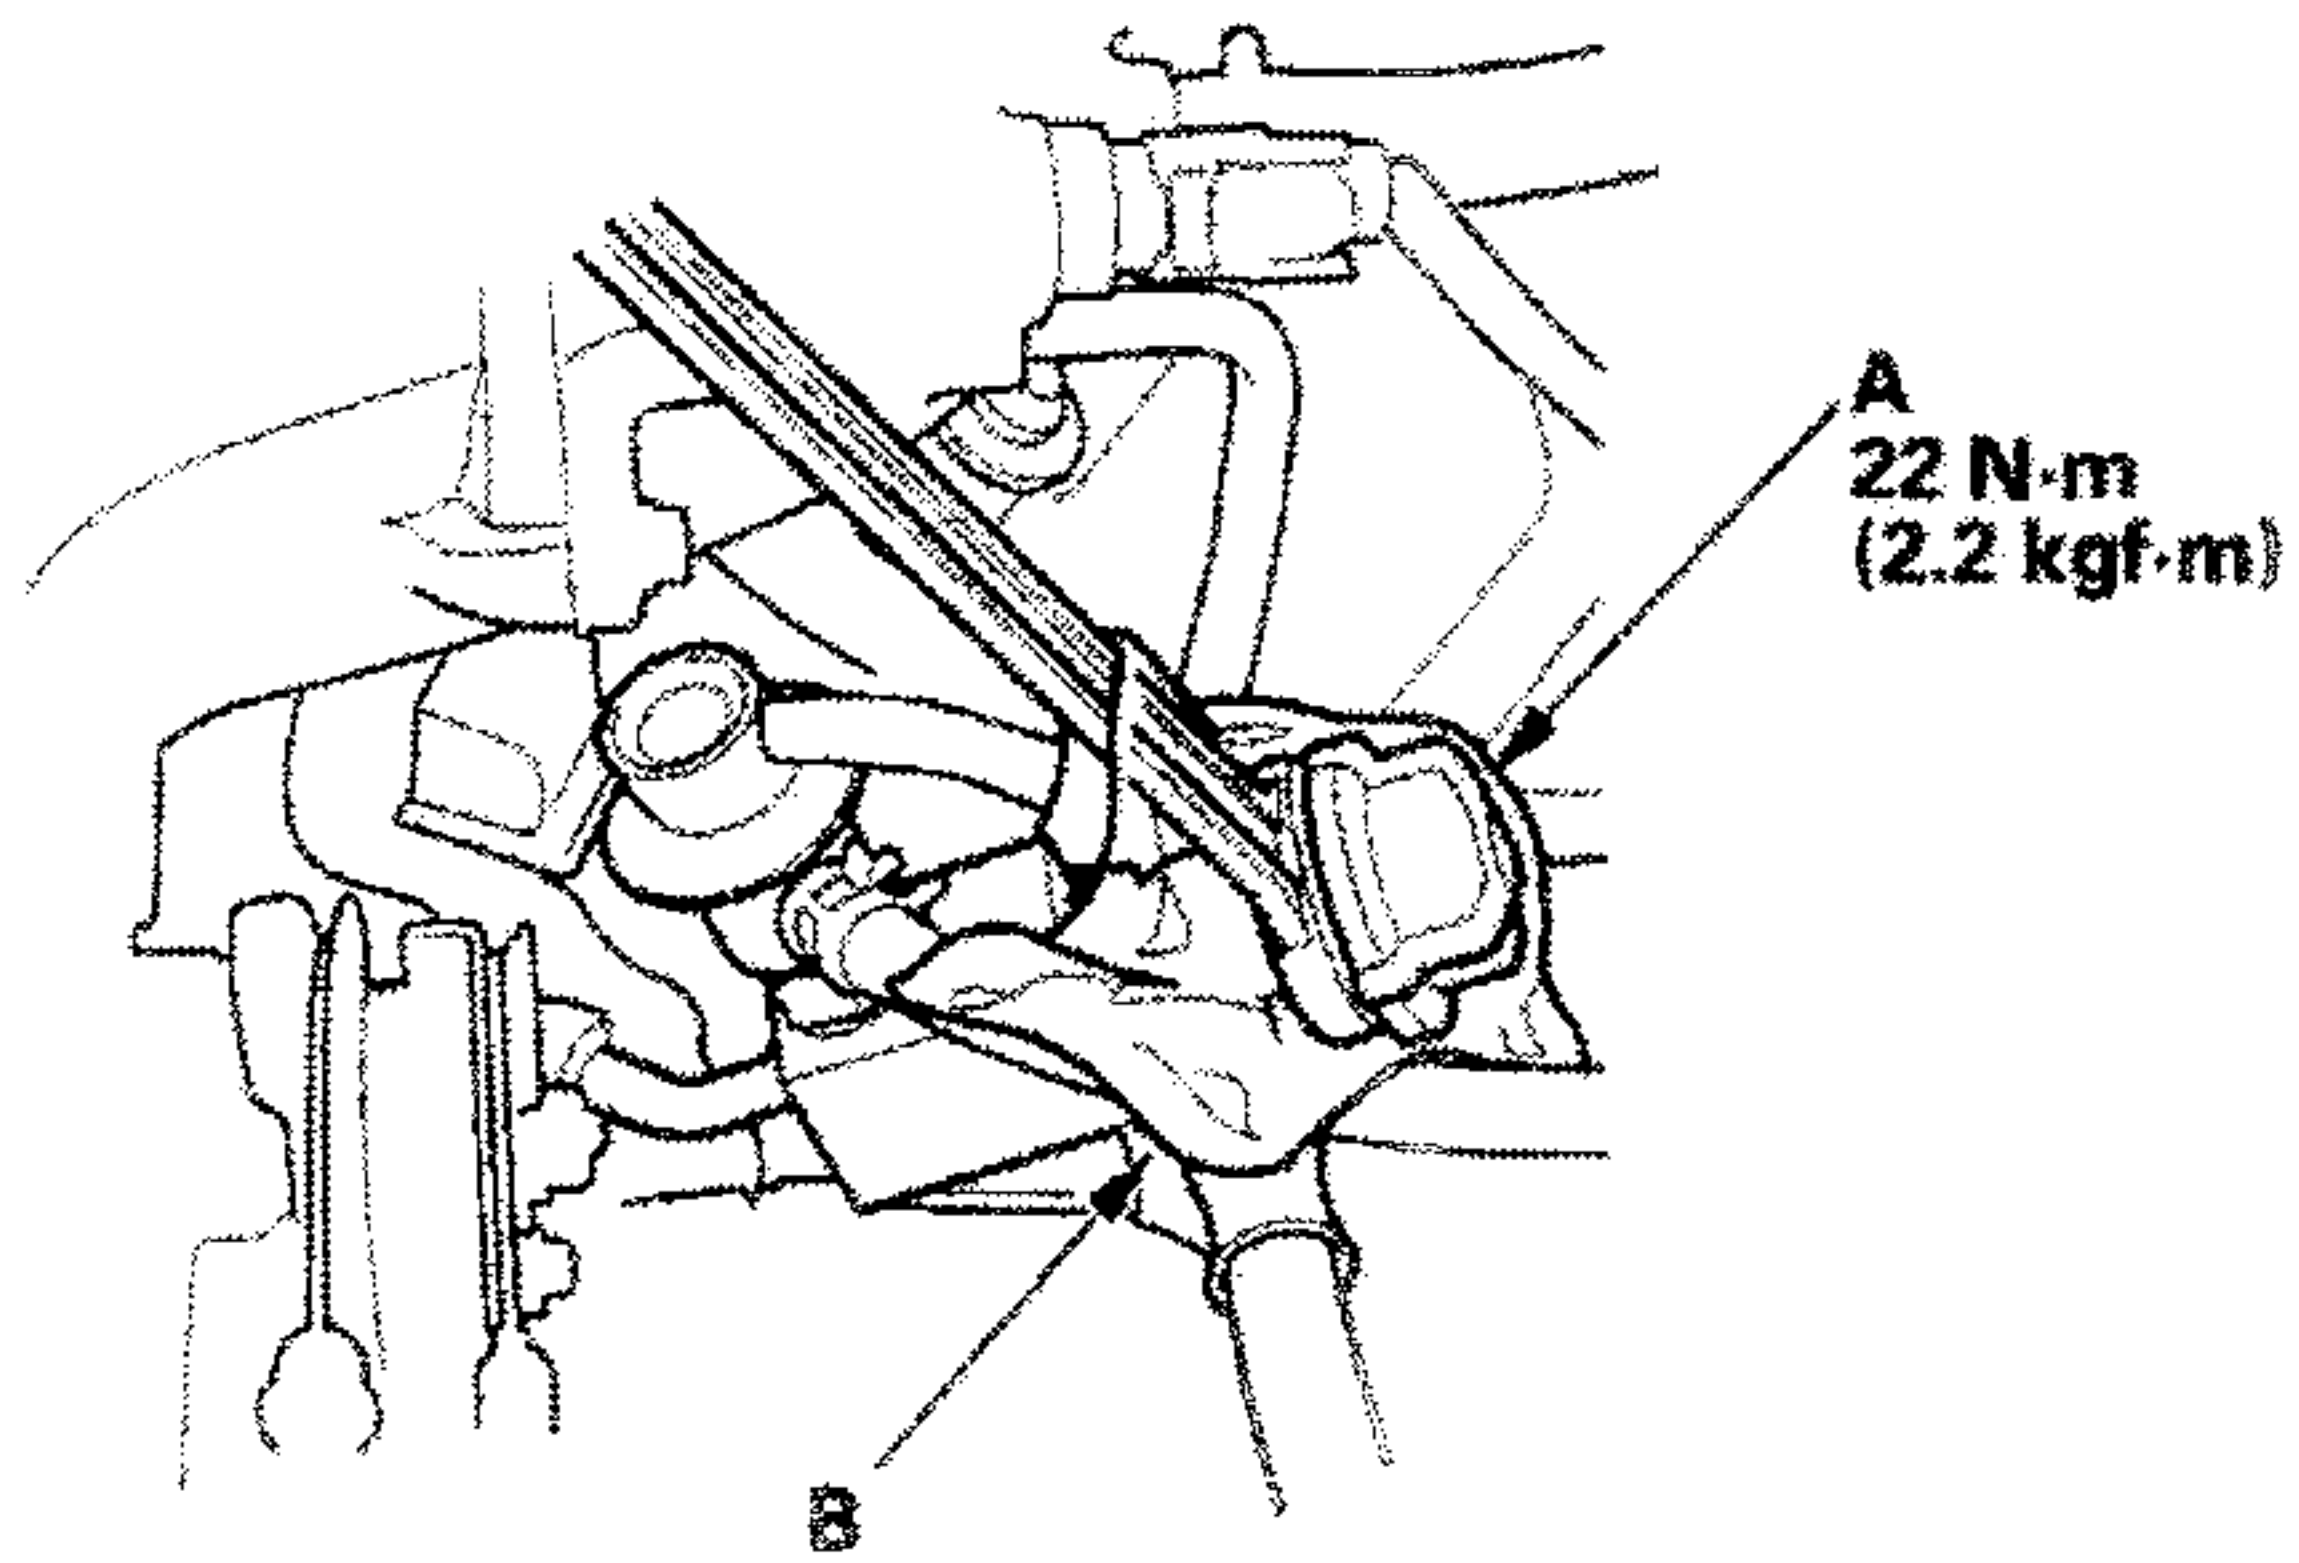

5. Place a rag or shop towel (B) over the fuel pulsation damper.
6. Slowly loosen the fuel pulsation damper one complete turn.

NOTE: Replace all washers whenever the fuel pulsation damper is loosened or removed.