



# Exterior Lights

## Combination Light Switch Test/Replacement

1. Remove the driver's dashboard undercover (see page 20-121), then remove the dashboard lower cover (see page 20-120).
2. Remove the steering column covers (see page 20-134).
3. Disconnect the 12P connector (A) from the combination light switch (B).

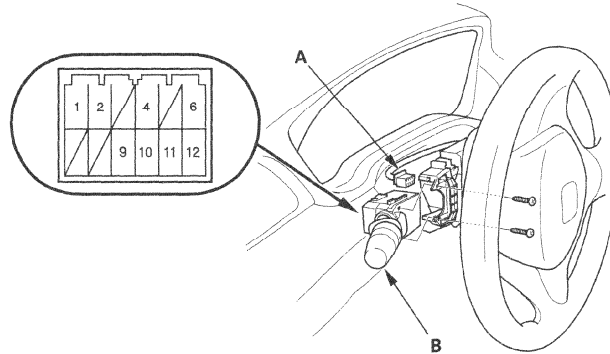

4. Remove the two screws, then slide out the combination light switch.
5. Inspect the connector terminals to be sure they are all making good contact.
  - If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
  - If the terminals look OK, check for continuity between the terminals in each switch position according to the tables.

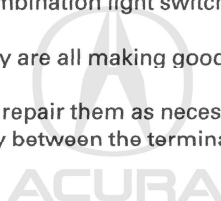

Light switch

		Terminal	4	6	9	10	11	12
Headlight switch	OFF				○	—		○
	☰						○	○
	☷	LOW				○	○	○
		HIGH	○			○	○	○
Passing switch	OFF							
	ON		○					○

Turn signal switch

		Terminal	1	2	12
LEFT				○	○
Neutral					
RIGHT		○			○

Fog light switch

		Terminal	8	9	12
ON		○			○
OFF			○		○

6. If all the continuity is not as specified, remove the two screws and replace the switch.
7. Install the parts in the reverse order of removal.