

Connectors and Harnesses

Connector to Harness Index (cont'd)

Left Engine Compartment Wire Harness (Engine compartment branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
A/C condenser fan motor	27	2	Front of engine compartment		
Brake fluid level switch	5	2	Left side of engine compartment		
ECM connector A	14	49	Left side of engine compartment		M/T
Engine coolant temperature (ECT) sensor 2	23	2	Front of engine compartment		
Horn (high)	26	1	Front of engine compartment		
Horn (low)	29	1	Front of engine compartment		
Keyless buzzer	9	2	Left front of fenderwell		'09 model
Keyless buzzer	18	2	Behind left side of front bumper		'10 model
Left fog light	16	2	Behind left side of front bumper		* 1
Left front impact sensor	17	2	Behind left side of front bumper		
Left front TPMS initiator	10	3	Left front of fenderwell		
Left front parking/side marker/turn signal light	12	3	Behind left headlight		
Left front wheel speed sensor	8	2	Left side of engine compartment		
Left headlight (high)	21	2	Behind left headlight		
Left headlight (low)	13	3	Behind left headlight		* 3
Left headlight (low)	13	2	Behind left headlight		* 4
Optional connector (for fog light)	20	1	Left front of engine compartment		* 2
Optional connector (for parking and back-up sensor system)	19	3	Left front of engine compartment		
Outside air temperature sensor	30	2	Front of engine compartment		
PCM connector A	14	49	Left side of engine compartment		A/T
Radiator fan motor	22	2	Front of engine compartment		
Security hood switch	28	2	Front of engine compartment		
Under-hood fuse/relay box connector A (electrical load detector) (see page 22-69)	4	3	Left side of engine compartment		
Under-hood fuse/relay box connector B (see page 22-69)	2	14	Left side of engine compartment		
Under-hood fuse/relay box connector D (see page 22-69)	3	10	Left side of engine compartment		
Windshield wiper motor	6	4	Left side of engine compartment		
C101	11	23	Left side of engine compartment	Engine wire harness M/T (see page 22-22) A/T (see page 22-24)	
C151	1	1	Left side of engine compartment	Starter subharness (see page 22-20)	
C201	31	2	Right front of engine compartment	Right engine compartment wire harness (Engine compartment branch) (see page 22-33)	
C251	25	1	Left front of engine compartment	EPS ground subharness	'10 model
C354	7	6	Left side of engine compartment	EPS subharness (see page 22-27)	
G301	15		Behind left side of front bumper	Body ground, via left engine compartment wire harness	

* 1: With fog light

* 2: Without fog light

* 3: With HID

* 4: Without HID

EPS Ground Subharness ('10 model)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
C251	25	1	Left front of engine compartment	Left engine compartment wire harness (Engine compartment branch)	
T9	24		Left front of engine compartment	Front suspension subframe	

