



INSTALLATION INSTRUCTIONS

Accessory
REMOTE ENGINE STARTER
P/N 08E92-TJB-200

Application
2019 RDX

Publications No.
VERSION 1
Issue Date
MAY 2018

PARTS LIST

Remote A
(DRIVER 1)



Remote B
(DRIVER 2)



Transceiver



Transceiver bracket



Flange bolt



2 Clips




TOOLS AND SUPPLIES REQUIRED

- 10 mm Socket
- Phillips screwdriver
- Rubber mallet
- Shop towel
- 10 mm Open end wrench
- Ratchet
- Masking tape
- Small flat-tip screwdriver
- i-HDS

The following tools are available through the Acura Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Remote Engine Starter in the Vehicle

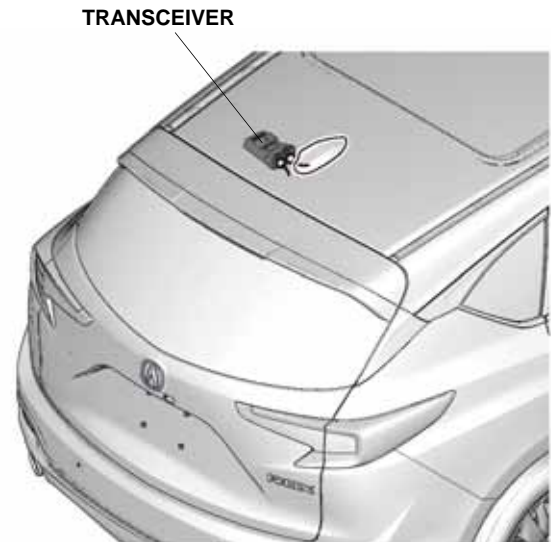


QG02501AX

INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

1. Disconnect the negative cable from the battery.
2. Release and pull up on the rear seat cushion.
NOTE: Place a piece of masking tape as shown to prevent the hook from re-engaging.

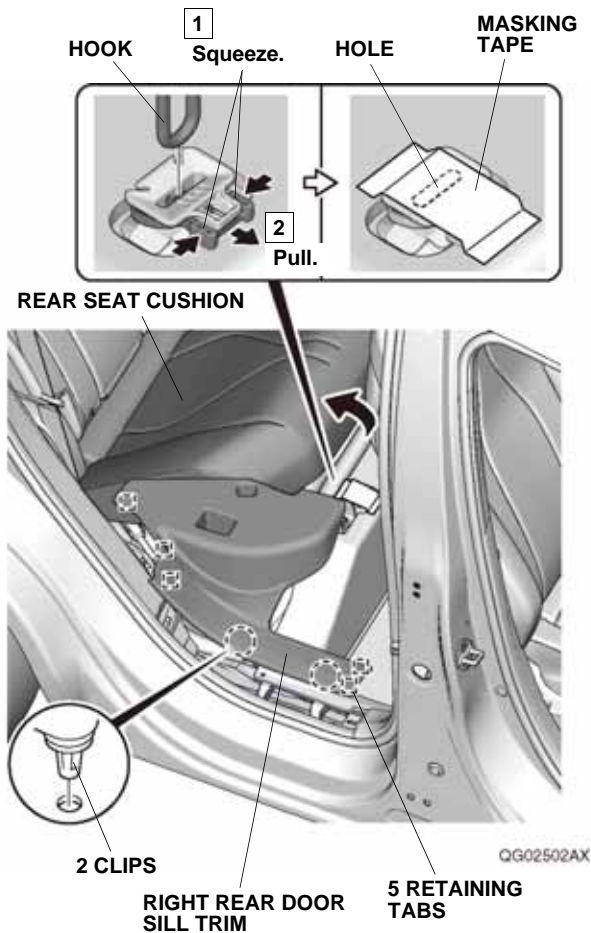


3. Remove the right rear door sill trim.

4. Release and pull up on the rear seat cushion.
NOTE: Place a piece of masking tape as shown to prevent the hook from re-engaging.

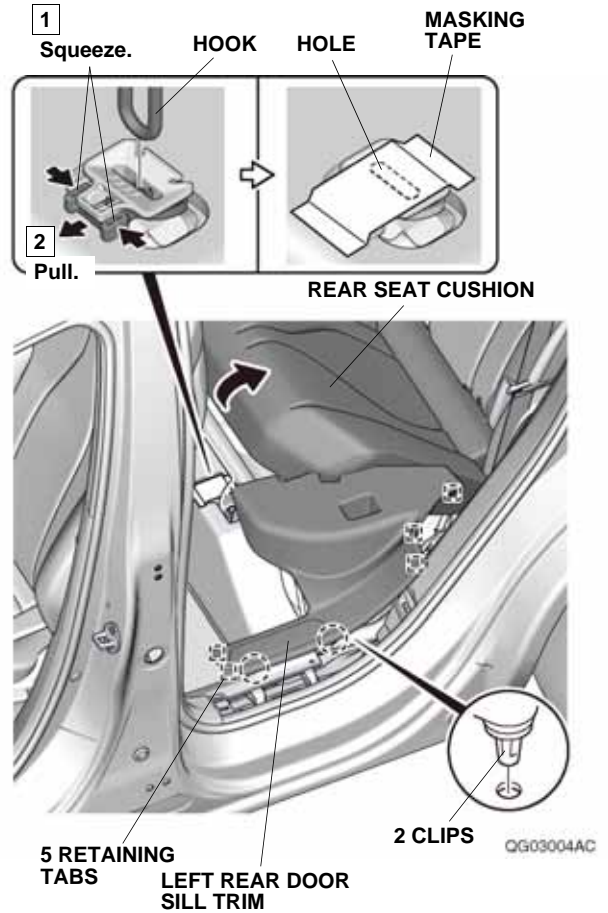


5. Remove the left rear door sill trim.


6. Remove the cargo floor board.

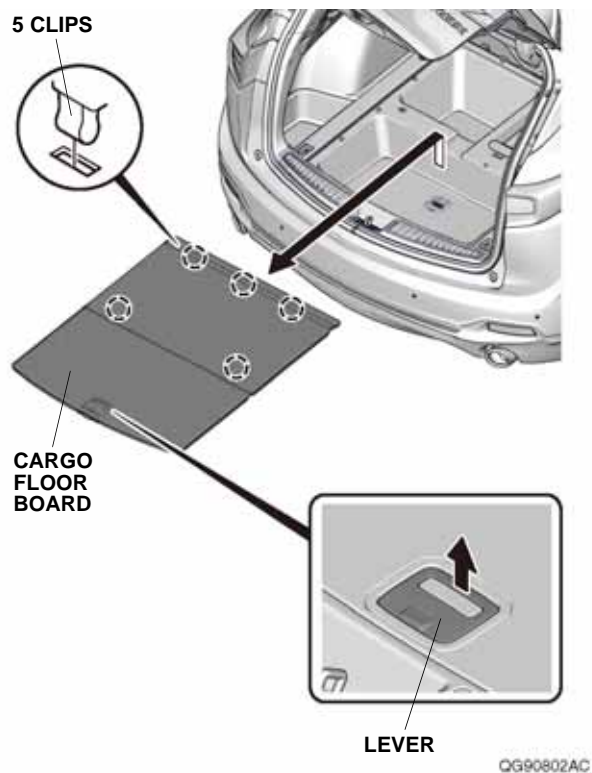


7. Remove the four tie-down hooks.

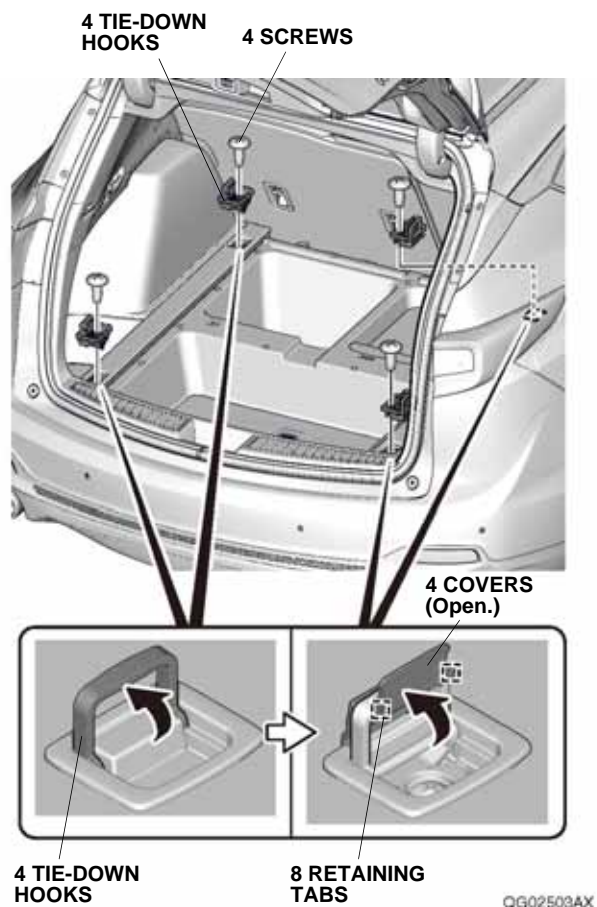


8. Remove the left and right cargo strips.

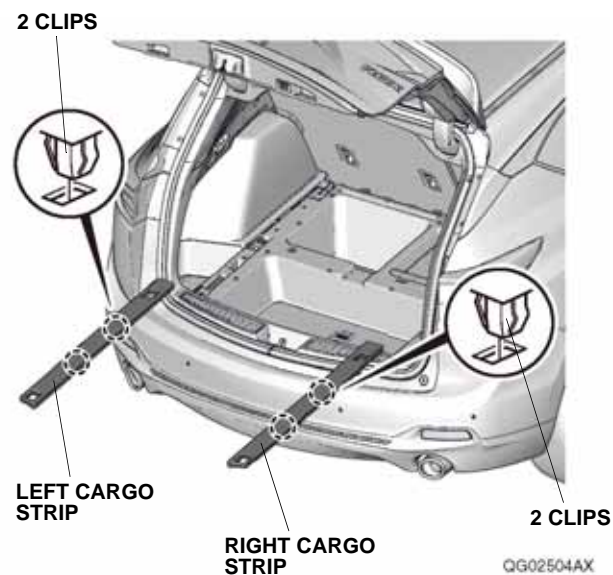


9. Remove the cargo bin.

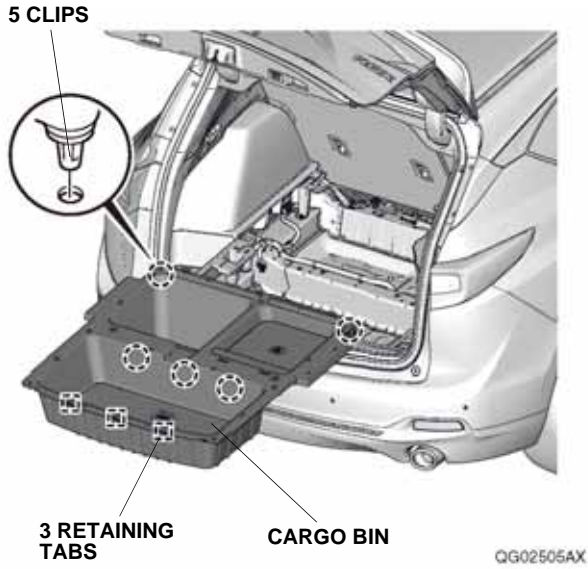


10. Remove the rear panel lining.

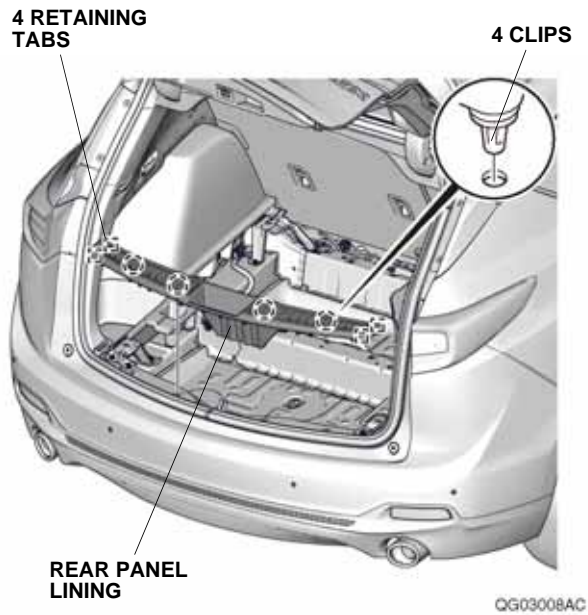


11. Remove the two bolts. Loosen one bolt, and turn the left bracket as shown.

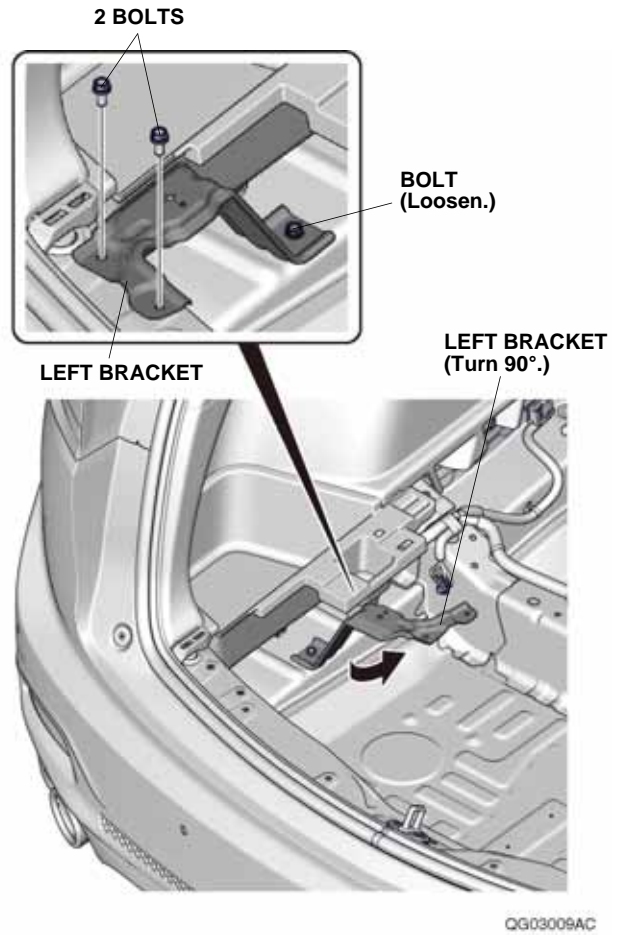

12. Fold down the left and right rear seat-backs.

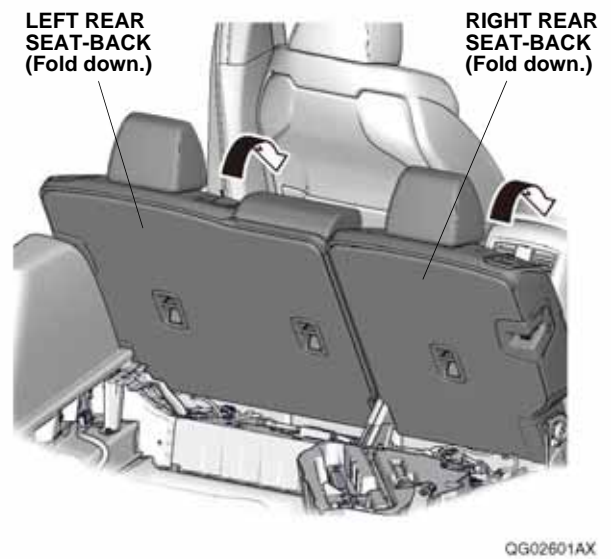


- Gently pull the inner handle on the left rear side trim panel, and use a small flat-tip screwdriver wrapped with a shop towel to remove the inner handle cap.

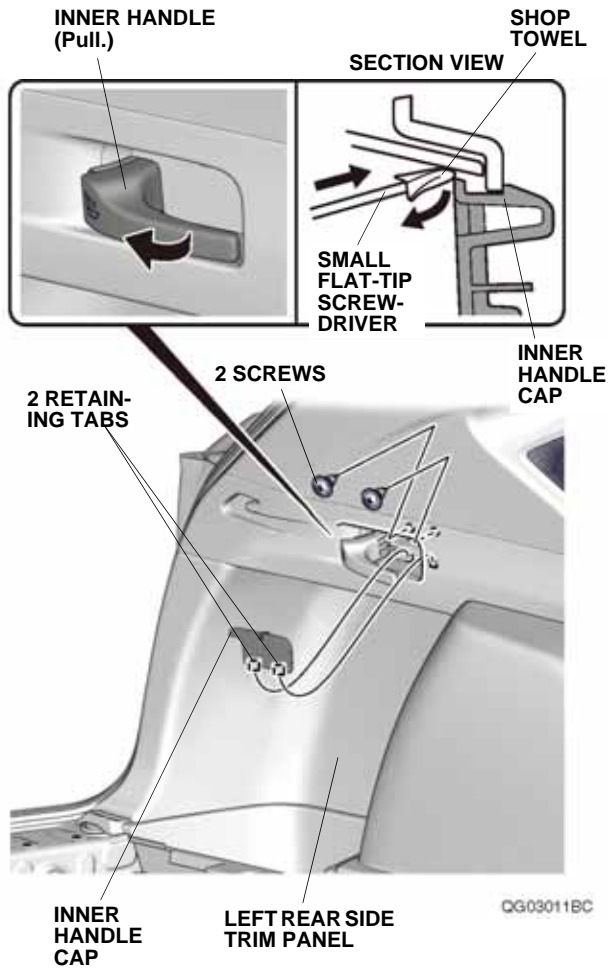


- Remove the two screws from the left rear side trim panel.


- Pull away the door opening seal, and weatherstrip from around the left rear side trim panel. Remove the trim panel.

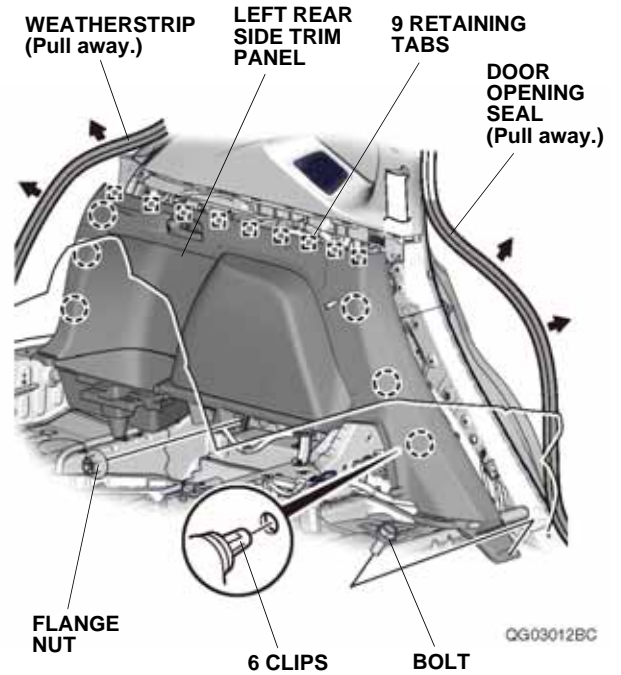

- Release the cable from the left rear side trim panel, then remove the inner handle.

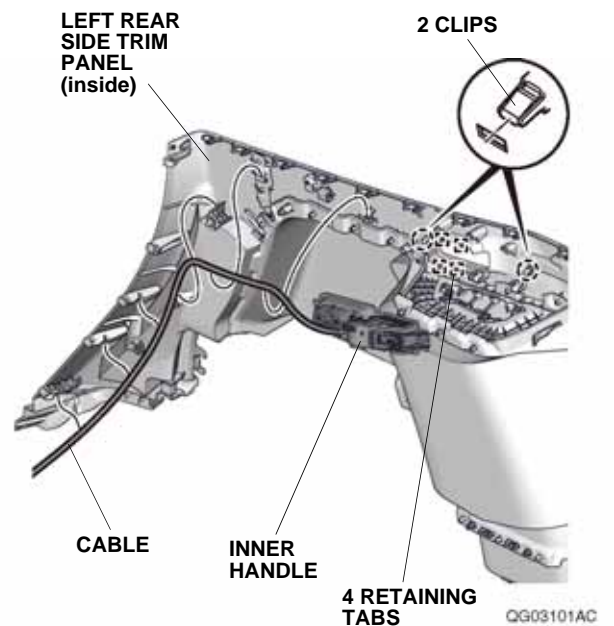


- Pull away the door opening seal and weatherstrip from around the left quarter pillar trim.

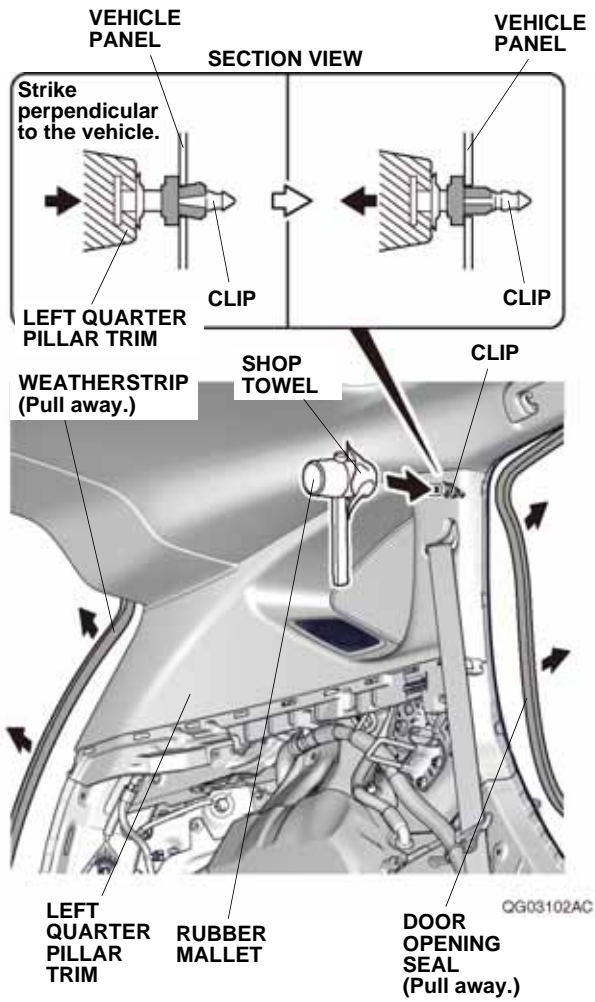


- Using a rubber mallet wrapped with a shop towel, lightly tap the area marked **SIDE CURTAIN AIRBAG** on the left quarter pillar trim to push in the clip. **NOTE:** Make sure you strike the area perpendicular to the vehicle.

- Remove the left quarter pillar trim.

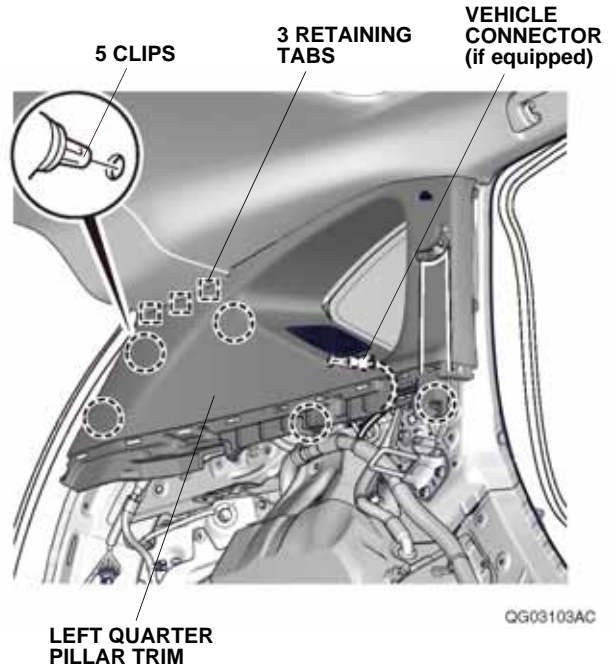


20. Gently pull the inner handle on the right rear side trim panel, and use a small flat-tip screwdriver wrapped with a shop towel to remove the inner handle cap.

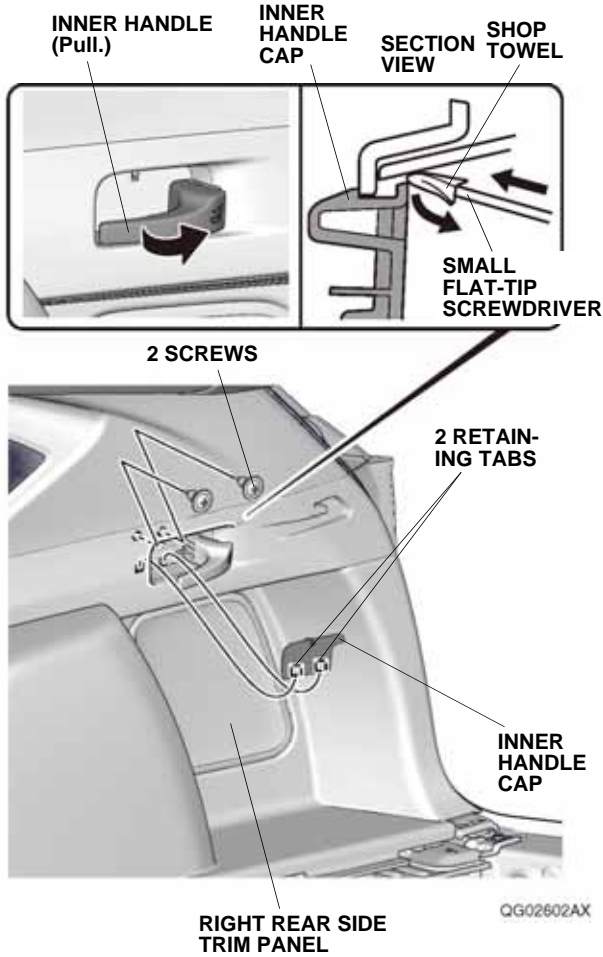


21. Remove the two screws from the right rear side trim panel.


22. Pull away the door opening seal and weatherstrip from around the right rear side trim panel. Remove the trim panel.

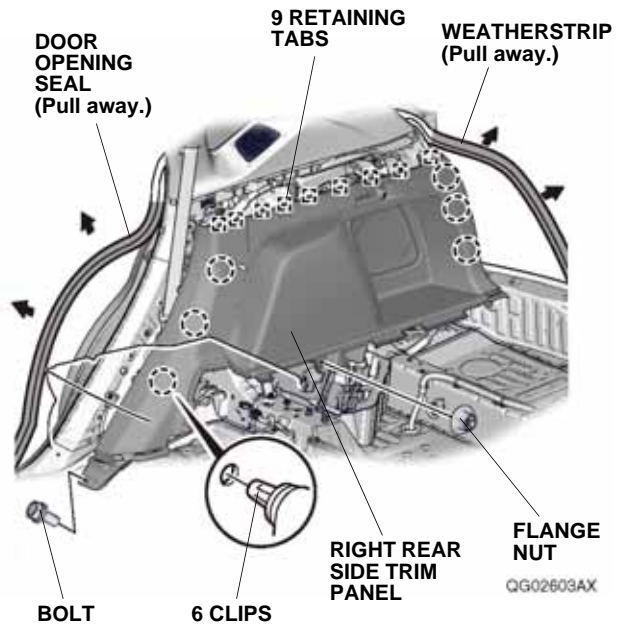

23. Release the cable from the right rear side trim panel, then remove the inner handle.

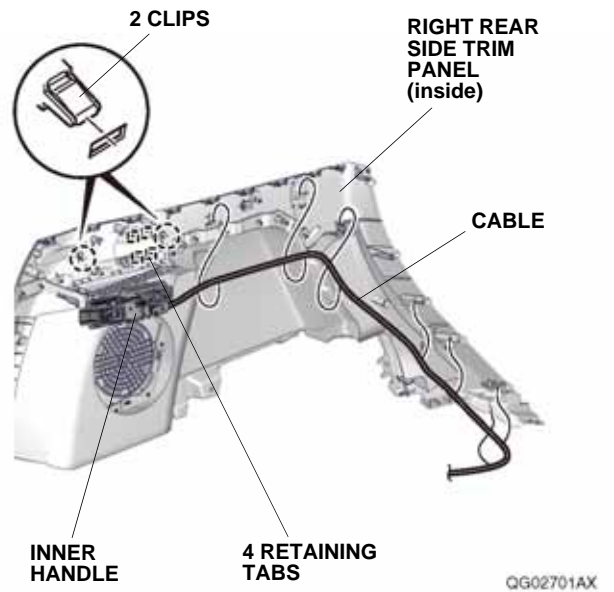


24. Pull away the door opening seal, and weatherstrip from around the right quarter pillar trim.

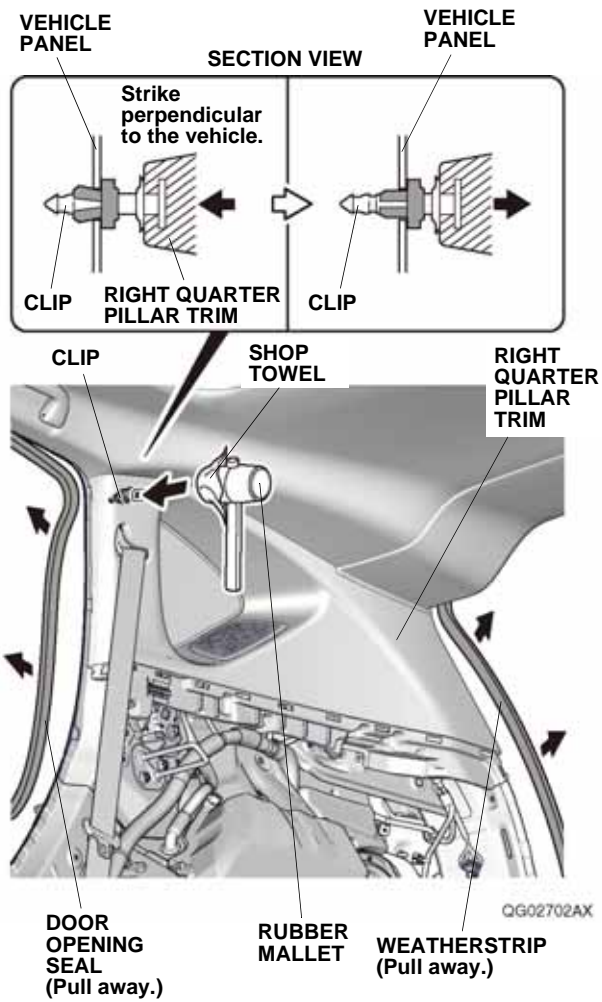


25. Using a rubber mallet wrapped with a shop towel, lightly tap the area marked **SIDE CURTAIN AIRBAG** on the right quarter pillar trim to push in the clip.
NOTE: Make sure you strike the area perpendicular to the vehicle.


26. Remove the right quarter pillar trim.

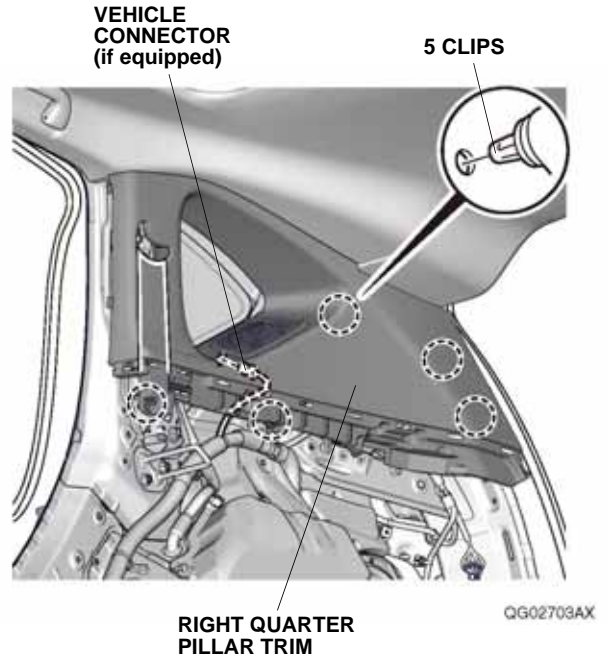


27. Remove the roof end trim panel.

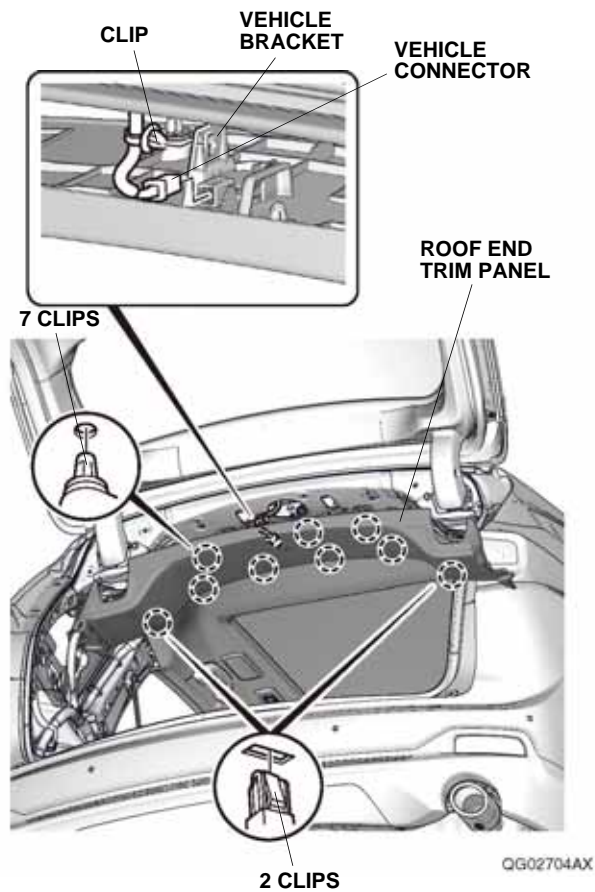

28. Remove the two clips.

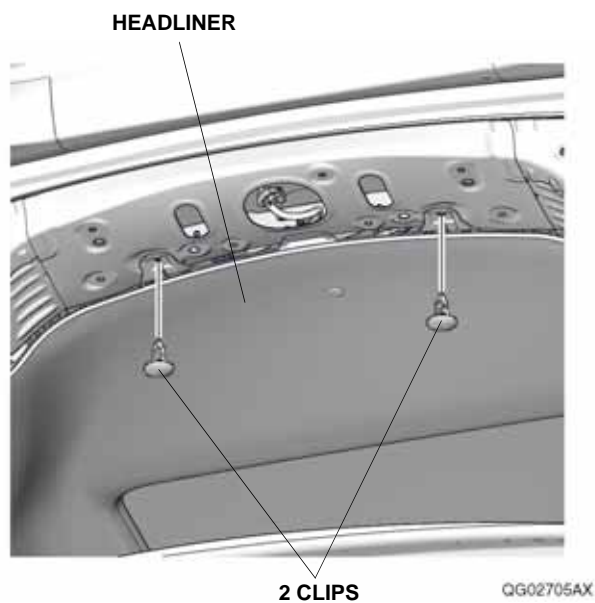


29. Lower the headliner. Install the transceiver bracket to the vehicle panel with one flange bolt.
NOTE: Be careful not to crease the headliner.

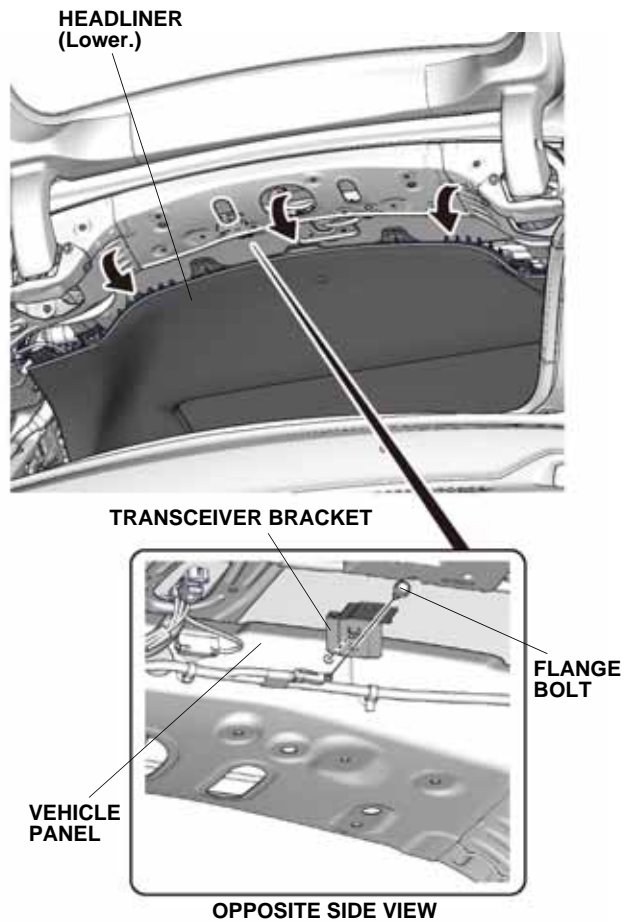

30. Install the transceiver to the transceiver bracket as shown.
NOTE: Be careful not to crease the headliner.



TRANSCEIVER

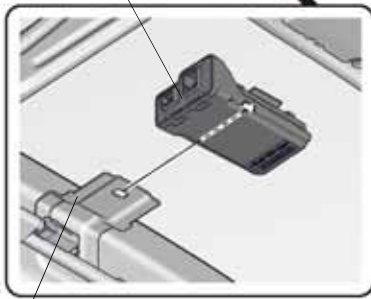

OPPOSITE SIDE VIEW

TRANSCEIVER BRACKET


QG02707AX

31. Remove the tape to free the vehicle 3-pin connector.
NOTE: Be careful not to crease the headliner.



TAPE (Remove.)

TRANSCEIVER

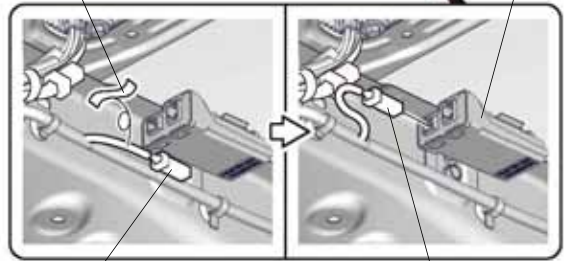

OPPOSITE SIDE VIEW


VEHICLE 3-PIN CONNECTOR

VEHICLE 3-PIN CONNECTOR


QG02708BX

32. Plug the vehicle 3-pin connector into the transceiver.
NOTE: Be careful not to crease the headliner.

33. Release the vehicle 1-pin connector, and plug it into the transceiver.
 NOTE: Be careful not to crease the headliner.

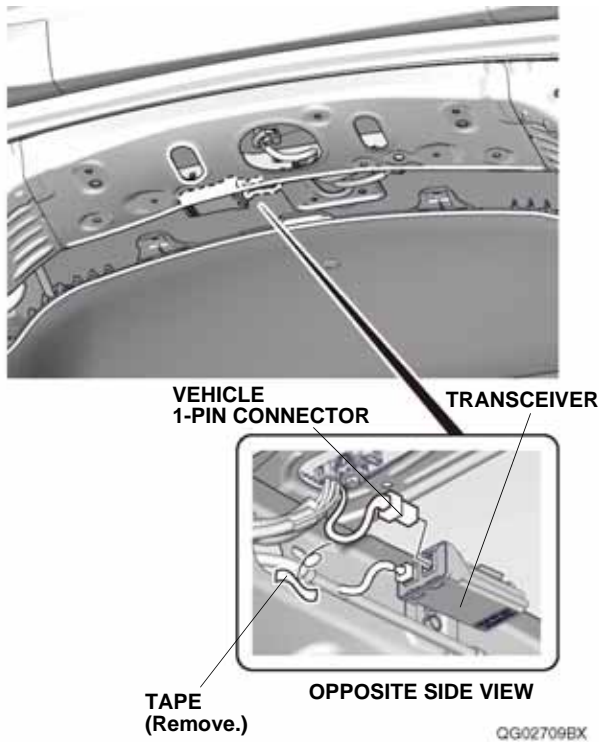


34. Install the headliner and roof end trim panel.

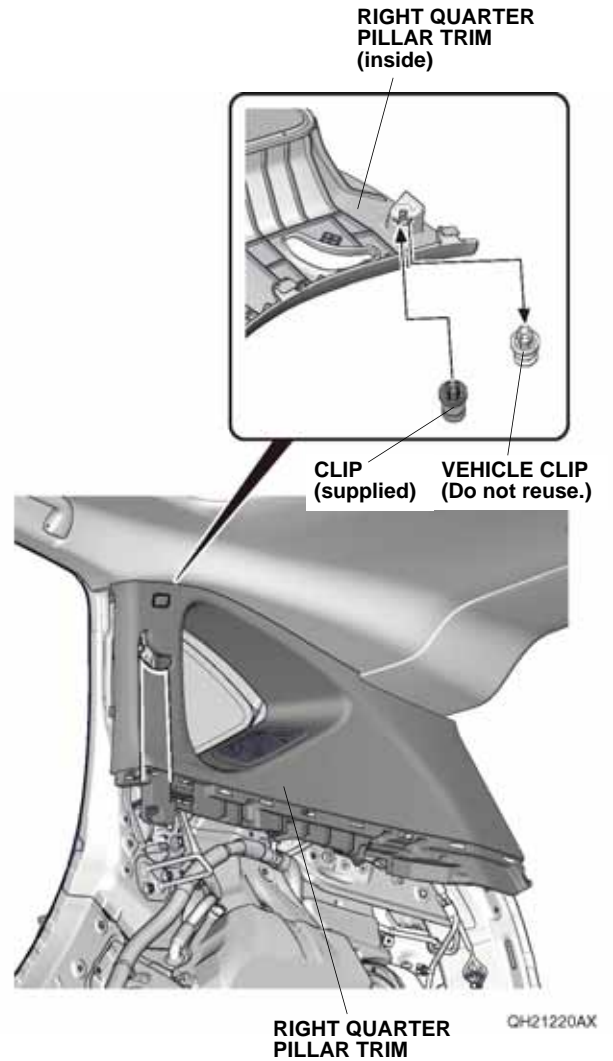

35. Remove the vehicle clip, and install the new clip to the right quarter pillar trim.
36. Check the overlap between the headliner and the right quarter pillar trim.
 NOTE: Check and adjust the overlap as described in the service information.
37. Install the right quarter pillar trim.
 NOTE:
- Make sure the side curtain airbag is not tucked under the clip.
 - Do not push too hard on the right quarter pillar trim.

38. Remove the vehicle clip, and install the new clip to the left quarter pillar trim.

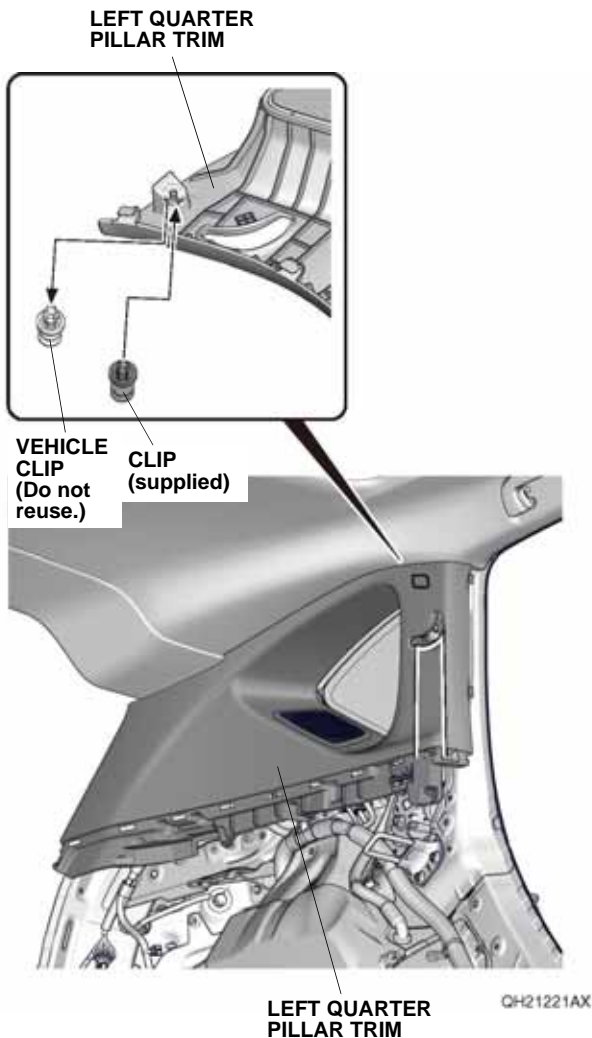

39. Check the overlap between the headliner and the left quarter pillar trim.
NOTE: Check and adjust the overlap as described in the service information.
40. Install the left quarter pillar trim.
NOTE:
 - Make sure the side curtain airbag is not tucked under the clip.
 - Do not push too hard on the right quarter pillar trim.
41. Check that all wire harnesses are routed properly and all connectors are plugged in.
42. Install all removed parts.
43. Connect the negative cable to the battery.
44. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.

45. Set the clock on vehicles without navigation.
46. If necessary, restore the systems back to normal operation as described in the service information.

Engine Remote Start System Registration

47. Connect the i-HDS to the data link connector.
48. Load the Honda Diagnostic System Software, select **Immobilizer Setup Tool**.
49. From the **Registration Menu**, select **KEYLESS ACCESS Remotes**, then select **2-WAY KEYLESS SETUP**. Change the setting to **2-WAY KEYLESS mode**. Get the PCM code either through manual mode or automatically through immobilizer code inquiry. Use the original remote, not the remote starter remote, and make sure the remote starter remote is away from the vehicle.
50. Go back to **KEYLESS ACCESS Remotes**, select Add a **KEYLESS ACCESS Remote**, and follow the instructions on the i-HDS screen. Do not bring the remote starter remote into the vehicle until the i-HDS asks for the new remote.
51. Repeat step 50 for the second remote starter remote.
52. After registration, verify all remote-related systems work normally with all remotes.

Check the Operation of the Remote Engine Starter

Remote Engine Start

53. Press Lock, then press and hold ENGINE. The amber LED blinks, and the green LED stays on for 1 second when the engine starts. You can repeat this once at any time within 10 minutes of the initial remote start for a 10-minute extension.
54. While remote engine start is on, the following applies:
 - The climate control system can warm or cool the interior, depending on the ambient temperature.
 - The security system remains on.
 - Exterior lights and accessories remain off.
55. To start driving after you enter the vehicle, press the brake pedal and press the ENGINE/START/STOP button.

Stopping the Engine

56. Press and hold ENGINE. The red LED stays on for 1 second.
NOTE: The engine will stop if it has been running for more than 10 minutes or any door is opened without using the remote or keyless access.