

Engine Oil Replacement

Replacement

[How to use this manual.](#)

1. Engine Oil - Replacement

■ **Preconditions**


- Engine Warmed Up
- [Right Engine Undercover Lid Removed](#)

■ **Procedure/Specifications**

1. Remove the bolt (A), and drain the oil.
2. Reinstall the bolt with a new washer (B) and torque to specification.
3. [Refill the engine with the recommended oil.](#)

Engine Oil Capacity

Operation	Specifications
At Oil Change	4.4 L (4.6 US qt)
At Oil Change including Filter	4.8 L (5.1 US qt)
After Engine Overhaul	6.0 L (6.3 US qt)

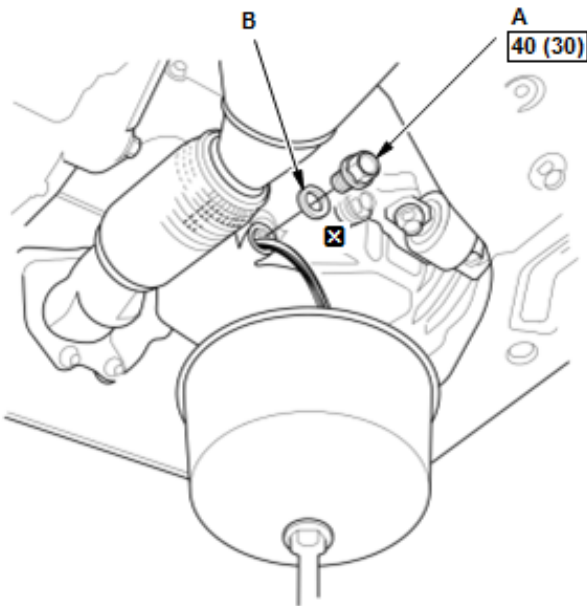

■ **After Replacement**

- [Engine Oil Level Check](#)

- **Maintenance Minder Reset (With Maintenance Minder System)**

- If the Maintenance Minder requires the engine oil to be replaced, [reset the Maintenance Minder with the gauge](#) (see "Resetting the Maintenance Minder"). If the Maintenance Minder did not require the engine oil to be replaced, [reset the Maintenance Minder with the HDS](#) (see "Resetting the Individual Maintenance Items").

- **Engine Oil Monitor Reset (With Engine Oil Monitor System)**

- [Reset the engine oil monitor system with the gauge](#)