

- ATF is poisonous. If ingested, get medical attention immediately.


1. ATF - Replace

■ Preconditions

- [Engine Undercover Removed](#)

■ Procedure/Specifications

- Remove the drain plug (A) with the sealing washer (B), and drain the ATF.

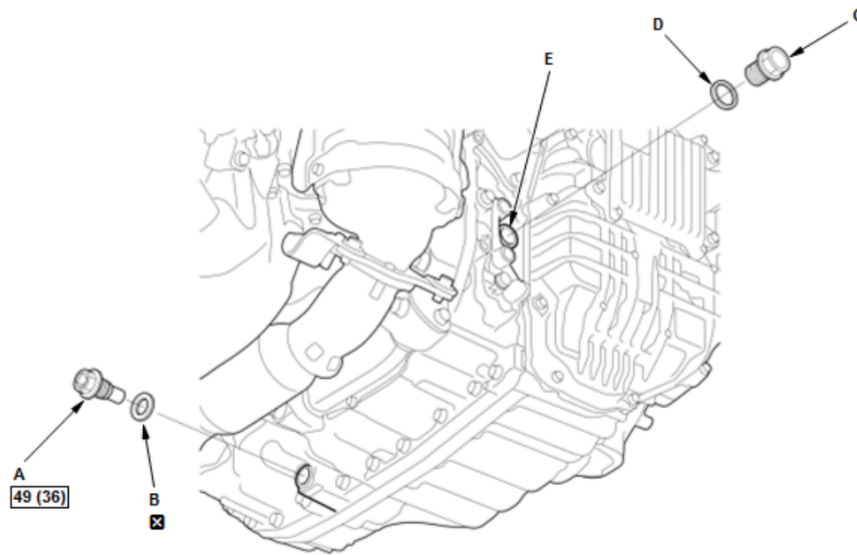

- Reinstall the drain plug with a new sealing washer.
- Remove the filler plug (C) with the sealing washer (D).
- Refill the transmission with the recommended fluid through the filler plug hole (E).

NOTE: Using the wrong type of fluid will damage the transmission.

Transmission Fluid (ATF) Capacity

Type	Operation	Specifications
Without AWD	At Fluid Change	4.3 L (4.5 US qt)
	At Overhaul	8.3 L (8.8 US qt)
With AWD	At Fluid Change	4.8 L (5.1 US qt)
	At Overhaul	8.8 L (9.3 US qt)

Transmission Fluid (ATF) Type

Specifications
Acura ATF TYPE 2

- Temporarily install the filler plug with the old sealing washer.

■ After Replacement

- ATF Level Check
NOTE: Refer to the Check procedure for more details.
- Maintenance Minder Reset (With Maintenance Minder System)
NOTE: If the Maintenance Minder required to replace the ATF, [reset the Maintenance Minder with the gauge \(see "Resetting the Maintenance Minder"\)](#). If the Maintenance Minder did not require to replace the ATF, [reset the Maintenance Minder with the HDS \(see "Resetting Individual Maintenance Items"\)](#).