



Front Door Glass Outer Weatherstrip Replacement

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program


NOTE:

- The door glass outer weatherstrip will need replacement because it will bend during removal.
- Put on gloves to protect your hands.
- Take care not to scratch the door.
- Use the appropriate tool from the KTC trim tool set to avoid damage when prying components.


1. Remove these items:

- Door panel
- Power mirror

2. Remove lower portion of the weatherstrip.

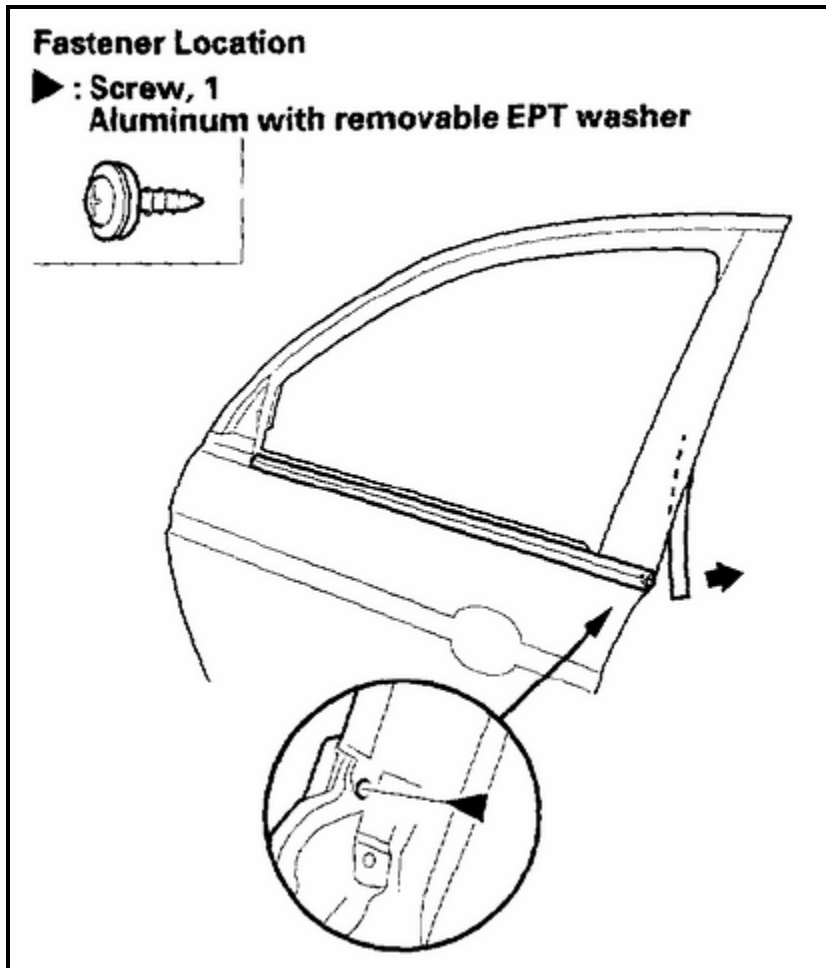

3. Remove the screw from the rear edge of the door.

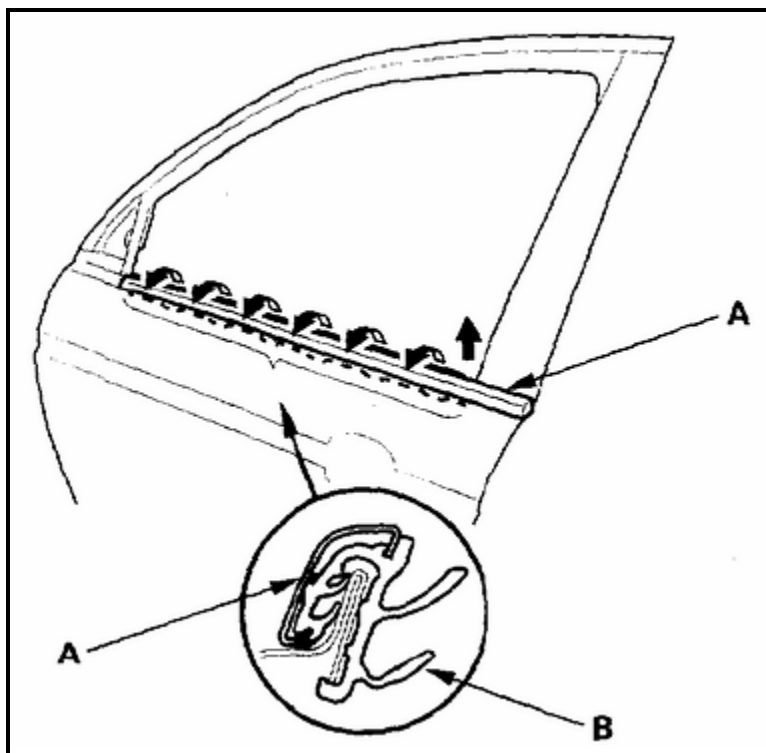

4. Starting at the rear, pull the door glass outer weatherstrip (A) up at each portion where the inner molding (B) catches the inside edge of the window slot, then remove the weatherstrip.
5. Install a new weatherstrip in the reverse order of removal.

© 2014 ALldata, LLC. All Rights Reserved. (Version 2.0.13637)

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.