




Warm Up TWC Removal/Installation

FRONT

1. Remove the condenser fan shroud (see page 10-10).
2. Disconnect the front fuel air ratio (A/F) sensor connector and front secondary heated oxygen sensor (secondary HO2S) connector.
3. Remove the front WU-TWC.

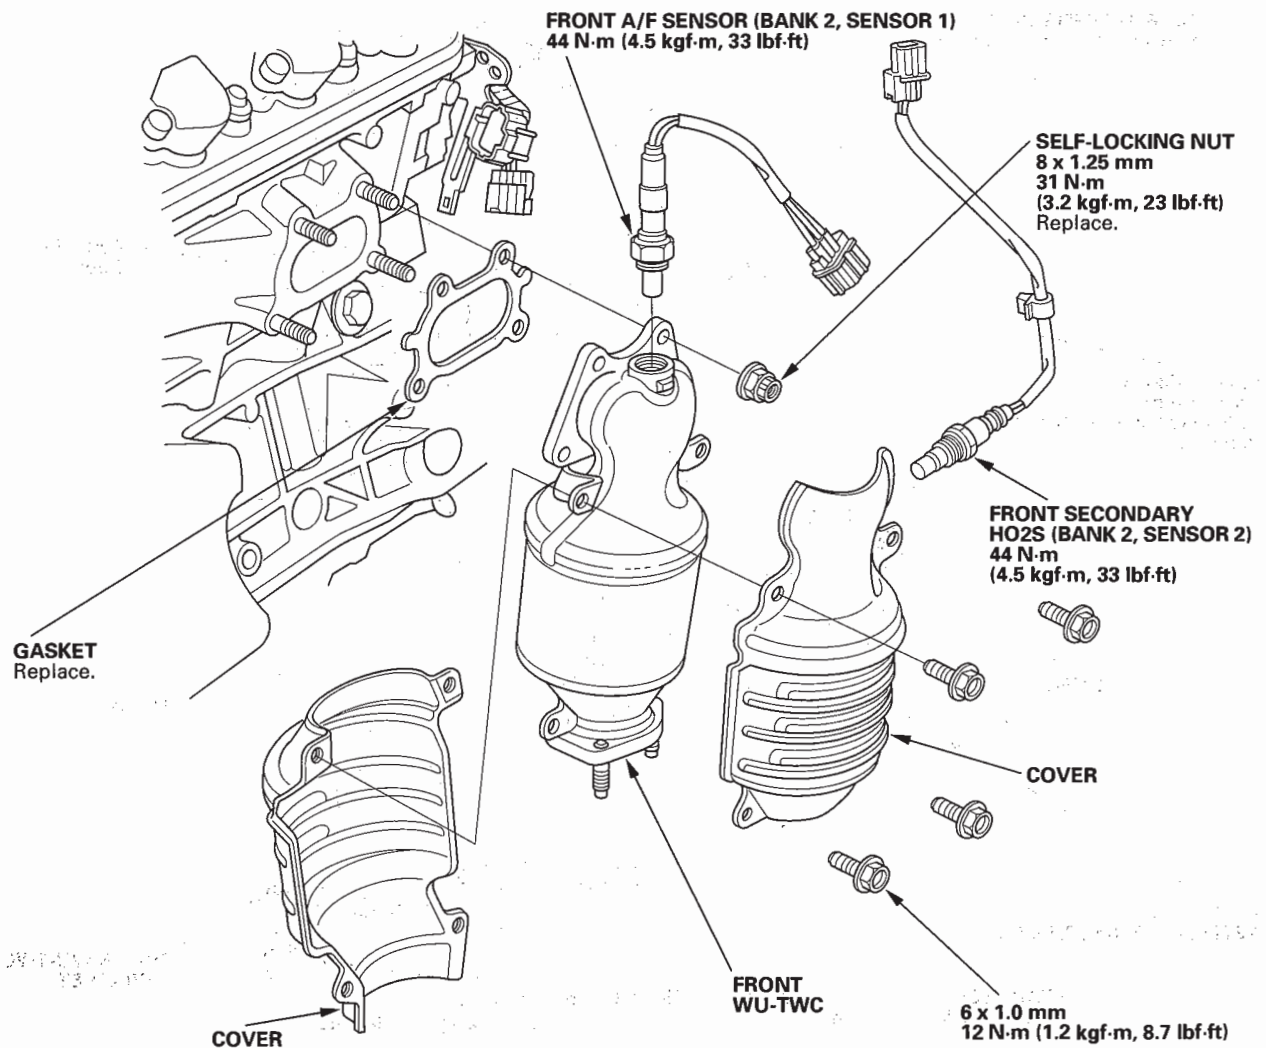

4. Install the front WU-TWC, and tighten the nuts in a crisscross pattern in two or three steps.
5. Install the other parts in the reverse order of removal.


(cont'd)

Catalytic Converter System

Warm Up TWC Removal/Installation (cont'd)

REAR

1. Remove the intermediate shaft (see page 16-21).
2. Disconnect the rear air fuel ratio (A/F) sensor connector and rear secondary heated oxygen sensor (secondary HO2S) connector.
3. Remove the rear WU-TWC bracket, then remove the rear WU-TWC.

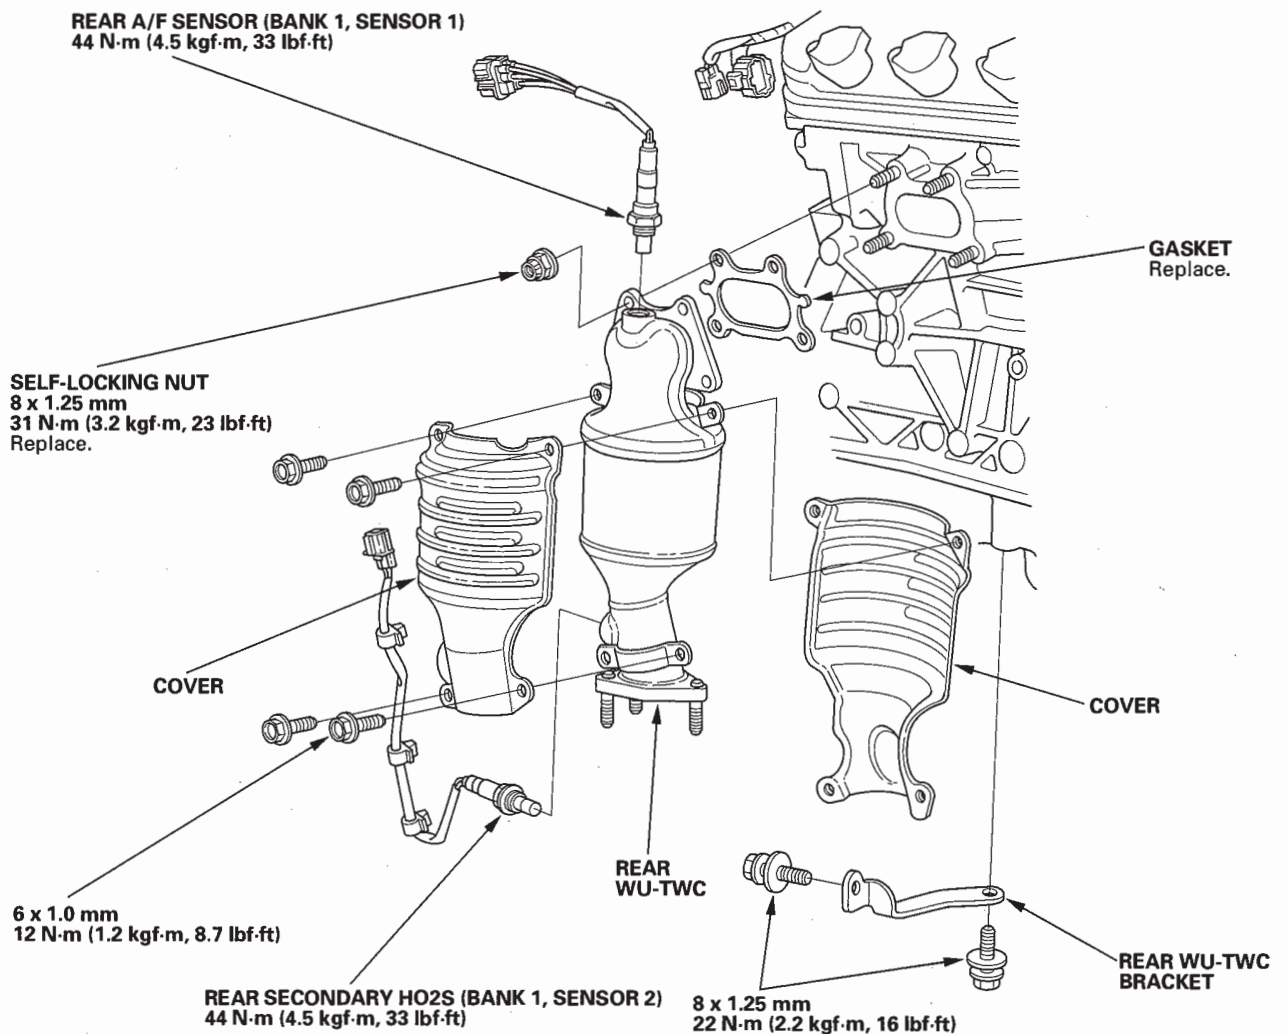

4. Install the rear WU-TWC, and tighten the nuts in a crisscross pattern in two or three steps.
5. Install the other parts in the reverse order of removal.

Intake Manifold and Exhaust System

Exhaust Pipe and Muffler Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

