




Power Distribution

Fuse to Components Index

Under-hood Fuse/Relay Box

Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
1	15A	RED/YEL	Left headlight (igniter unit)
2	30A	Internal connection	Relay control module
3	7.5A	WHT/YEL	Left headlight (high/low switching solenoid)
4	10A	RED/BLK	Audio-HVAC display module light, A/T gear position console light, Center pocket light, Dash lights brightness control switch light, Driver's and front passenger's door lock switch light, Driving position memory switch light, Glove box light, Hazard warning switch light, Front parking lights, License plate lights, Moonroof switch light, Navigation unit, Power mirror switch light, Relay control module, Rear side marker lights, Roof console, Seat heater switches lights, Select/reset/information switch light, Side marker lights, Taillights, Trunk lid opener switch light, VSA OFF switch light
5	7.5A	WHT/GRN	Right headlight (high/low switching solenoid)
6	15A	RED/GRN	Right headlight (igniter unit)
7	7.5A	Internal connection	Relay control module
8	15A	WHT/GRN	CKP sensor A/B, CMP sensor, Data link connector (DLC), ECM/PCM (2 wires), Injectors, PGM-FI main relay 1, PGM-FI main relay 2, Throttle actuator control module relay
9	30A	BLU/YEL	Condenser fan motor (via condenser fan relay)
10	20A (USA)	BLU/RED	Fog lights relay, Fog lights
	15A (Canada)		Daytime running lights relay, Daytime running lights
11	30A	BLU/BLK	Radiator fan motor (via radiator fan relay)
12	7.5A	BLU/RED	A/C compressor clutch (via A/C compressor clutch relay)
13	20A	RED	Brake lights, ECM/PCM, High mount brake light, Multiplex integrated control unit (MICU)
		Internal connection	Horn relay, Horns
14	40A	BLK/YEL	Rear window defogger (via rear window defogger relay)
15	40A	YEL	No. 5 through No. 9 fuses in the under-dash fuse/relay box
		Internal connection	No. 7 fuse in the under-hood fuse/relay box
16	15A	WHT/BLK	Multiplex integrated control unit (MICU), Turn signal/hazard relay
17	30A	WHT/RED	VSA modulator-control unit (+B-MR)
18	40A	WHT	VSA modulator-control unit (+B-FSR)
19	40A	GRN/WHT	No. 1 through No. 4 fuses in the under-dash fuse/relay box
20	40A	BLU	No. 12 through No. 17 fuses in the under-dash fuse/relay box
21	40A	WHT/BLU	Blower motor (via blower motor relay)
22	120A	---	Battery, Power distribution
23	50A (IG)	WHT	Ignition switch (BAT)
	50A (P/W)	WHT/BLU	Power window relay, No. 24 through No. 28 fuses in the under-dash fuse/relay box

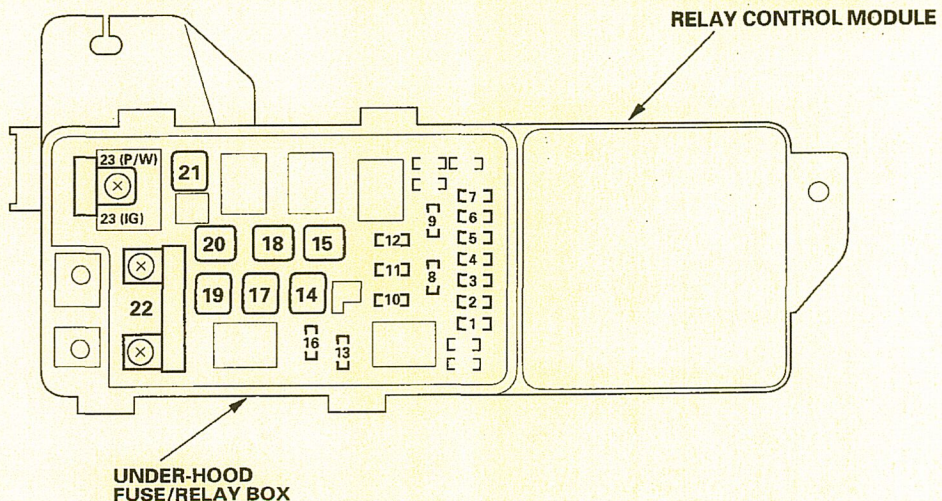

(cont'd)