


Oil Seal Replacement


Special Tools Required

- Driver 07749-0010000
- Oil seal driver attachment 07947-SD90101
- Oil seal driver attachment 07JAD-PH80101


1. Remove the oil seal from the transmission housing.

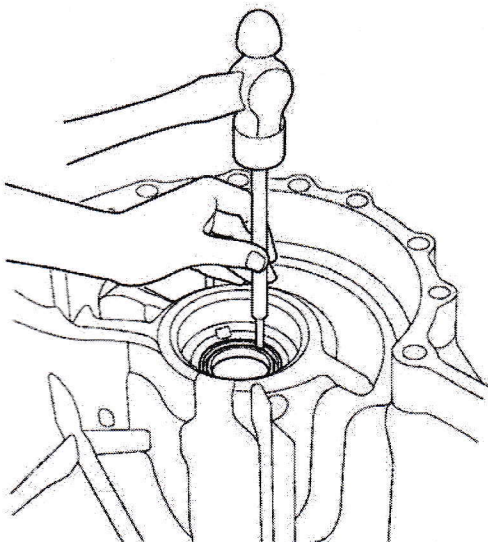

2. Remove the oil seal from the torque converter housing.

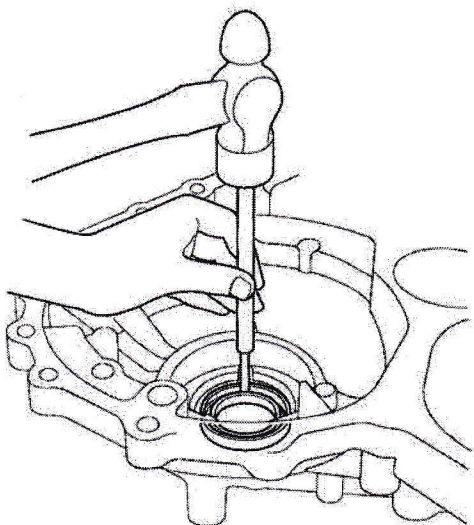

3. Install a new oil seal flush to the transmission housing using the driver and the oil seal driver attachment.

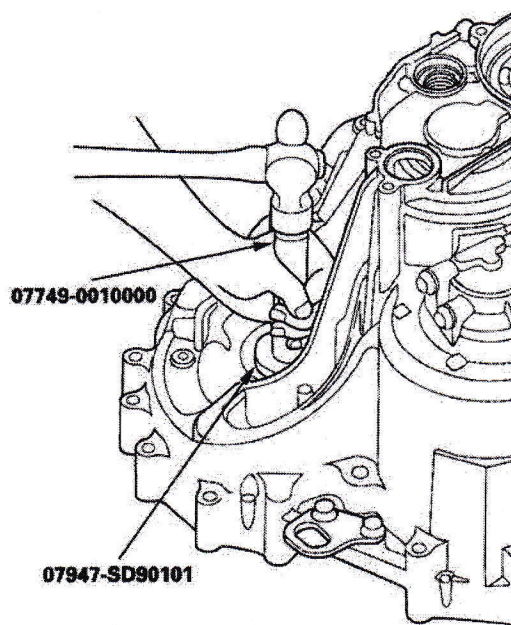

4. Install a new oil seal to the torque converter housing using the driver and the oil seal driver attachment.

