


346. Stereo Amplifier

- GRY
- Right Side of Trunk
- On Right Side Wire Harness

Connector A

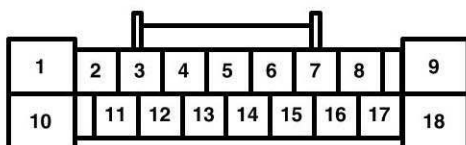

without Navigation:


1. BLU (SUR L SP-)
2. BLU (FL SP-)
3. LT BLU (SUBW SP -)
4. —
5. YEL (SUR R SP-)
6. BRN (FR SP-)
7. YEL (CTR SP-)
8. —
9. BLK (G653)
10. YEL (SUR L SP+)
11. LT GRN (FL SP +)
12. GRY (SUBW SP+)
13. —
14. BLU (SUR R SP+)
15. GRY (FR SP+)
16. BRN (CTR SP+)
17. —
18. WHT
(Fuse 15 – Passenger's Under-dash)

Navigation:

1. LT BLU (SUBW SP-)
2. YEL (CTR SP-)
3. GRY (RR SP-)
4. GRN (RL SP-)
5. YEL (SUR R SP-)
6. BRN (FR SP-)
7. BLU (FL SP-)
8. BLU (SUR L SP-)
9. BLK (G653)
10. GRY (SUBW SP+)
11. BRN (CTR SP+)
12. BRN (RR SP+)
13. RED (RL SP+)
14. BLU (SUR R SP+)
15. GRY (FR SP +)
16. LT GRN (FL SP+)
17. YEL (SUR L SP+)
18. WHT
(Fuse 15 – Passenger's Under-dash)


Connector B

without Navigation:

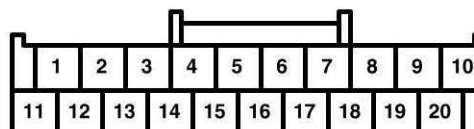

- | | |
|----------------------|----------------------------|
| 1. WHT (SWD +B) | 11. LT GRN (DPL II ON/OFF) |
| 2. — | 12. — |
| 3. BLK (CTR PRE +) | 13. WHT (CTR PRE -) |
| 4. GRN (SUBW PRE+) | 14. RED (SUBW PRE-) |
| 5. — | 15. — |
| 6. GRN (FL PRE+) | 16. RED (FL PRE -) |
| 7. GRN (FR PRE+) | 17. RED (FR PRE -) |
| 8. — | 18. WHT (CTR PRE -) |
| 9. GRN (SUR L PRE+) | 19. RED (SUR L PRE-) |
| 10. BLK (SUR R PRE+) | 20. WHT (SUR R PRE-) |

 Navigation:



- | | |
|----------------------|----------------------|
| 1. RED (ELS DATA -) | 15. GRN (ELS DATA +) |
| 2. — | 16. — |
| 3. WHT (SWD +B) | 17. — |
| 4. BLK (CTR PRE +) | 18. WHT (CTR PRE -) |
| 5. — | 19. RED (SUBW PRE-) |
| 6. GRN (SUBW PRE+) | 20. — |
| 7. — | 21. WHT (RG L +) |
| 8. — | 22. — |
| 9. BLK (RG L GND) | 23. — |
| 10. GRN (FL PRE+) | 24. RED (FL PRE -) |
| 11. GRN (FR PRE+) | 25. RED (FR PRE -) |
| 12. — | 26. — |
| 13. GRN (SUR L PRE+) | 27. RED (SUR L PRE-) |
| 14. BLK (SUR R PRE+) | 28. WHT (SUR R PRE-) |