


NOTE:


- | Put on gloves to protect your hands.
- | Take care not to tear or damage the seat covers.

1. [Remove the seat cushion.](#)

2. From the back of the seat cushion (A), release all the upholstery rings (B), then remove the insulators (C).

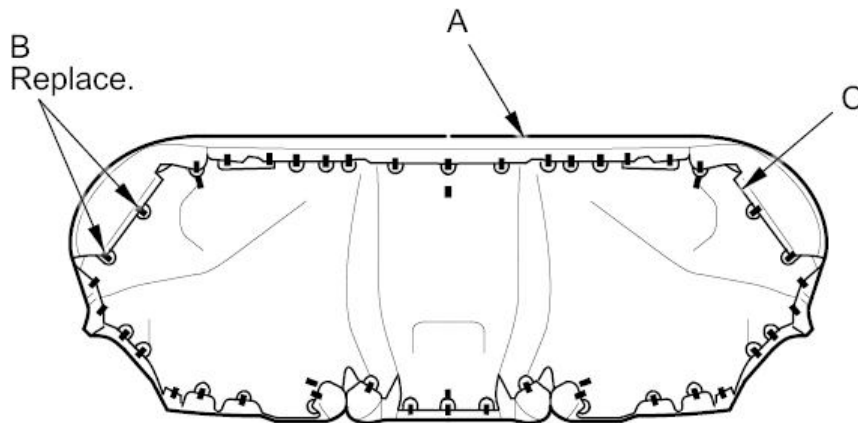

3. Pull back the edge of the seat cushion cover (A) all the way around, and release the upholstery rings (B). Release the hooks (C) of the lateral wires (D) from the longitudinal wires (E) on the pad, then remove the seat cushion cover.

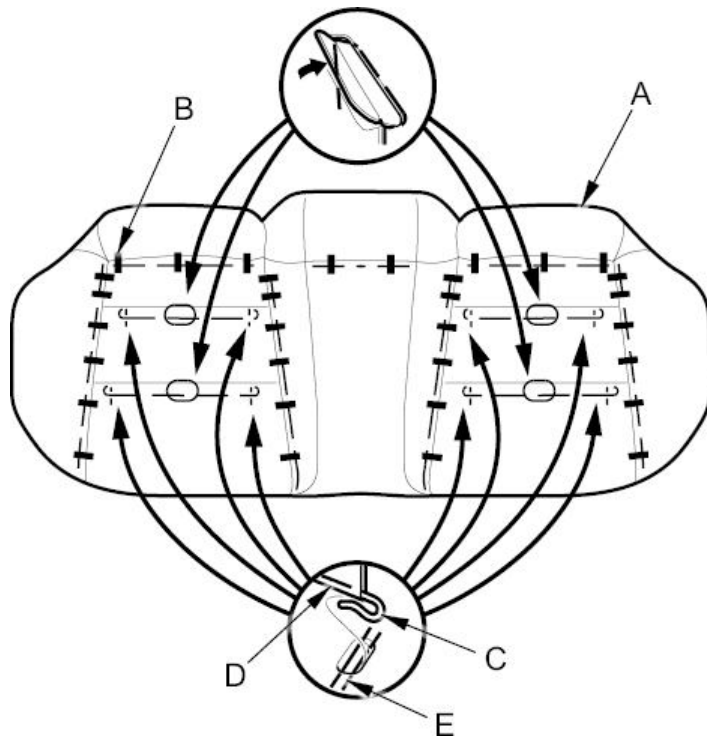

4. Install the cover in the reverse order of removal, and note these items:

- ▮ To prevent wrinkles when installing a seat cushion cover, make sure the material is stretched evenly over the pad before securing the upholstery rings and hook strips.
- ▮ Replace all of the upholstery rings (A) fastening the seat cushion cover (B) to the pad wires (C) with new ones using commercially available upholstery ring pliers (D).

