

Mirror Housing Cover Removal and Installation


Removal/Installation

1. Mirror Holder - Remove

2. Mirror Housing Cover - Remove

Fastener Locations

A ▶ : 4

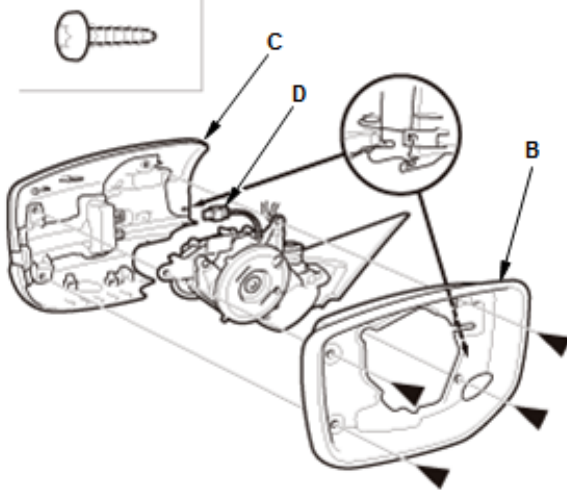

1. Remove the screws (A) with a TORX T15 bit.

2. Remove the visor (B) and the mirror housing cover (C).

3. Disconnect the connector (D).

3. All Removed Parts - Install

1. Install the parts in the reverse order of removal.