


Center Console Panel Removal and Installation


Removal

1. Shift Lever Knob and Shift Lever Boot Ring (M/T) - Remove

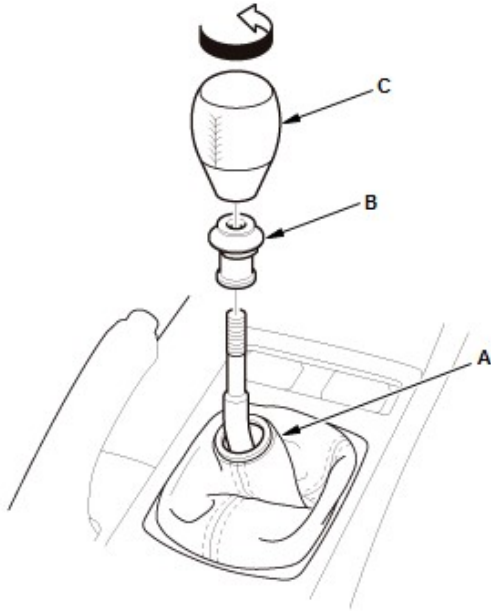

1. Lower the shift lever boot (A).
2. Loosen the shift lever boot ring (B).
3. Remove the shift lever knob (C) and the shift lever boot ring.

2. A/T Shift Panel (A/T) - Remove

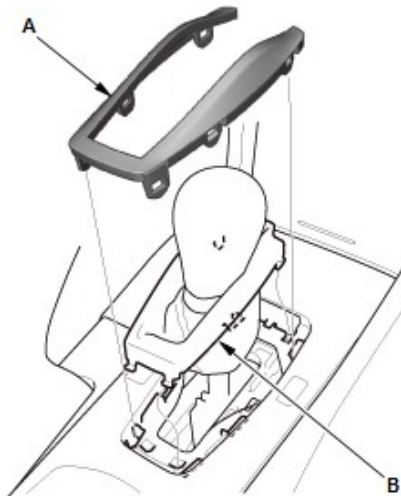


1. Shift the shift lever to N.
2. Remove the A/T shift panel (A).
3. Roll up the shift lever boot (B).

3. Center Console Panel - Remove


Fastener Locations

D ▷ : 6

E ▷ : 2

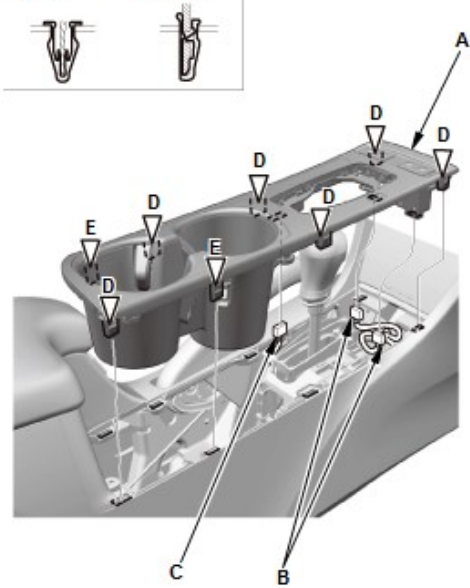


1. Remove the center console panel (A).
2. With seat heater: Disconnect the seat heater switch connectors (B).
3. A/T: Disconnect the A/T gear position indicator panel light connector (C).

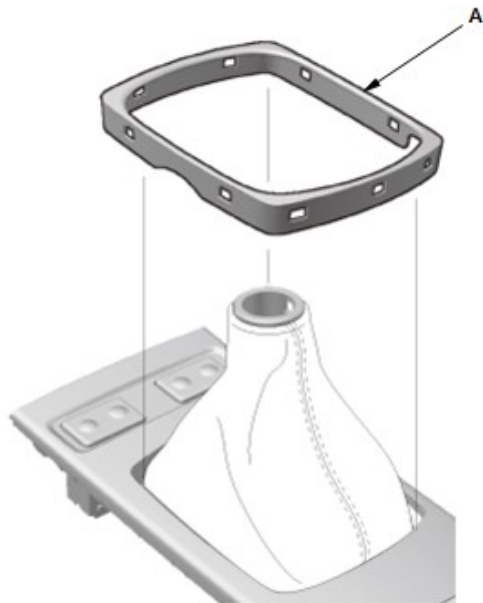

4. M/T: If necessary, remove the shift ring (A).


5. A/T: If necessary, remove the A/T shift front panel (A).

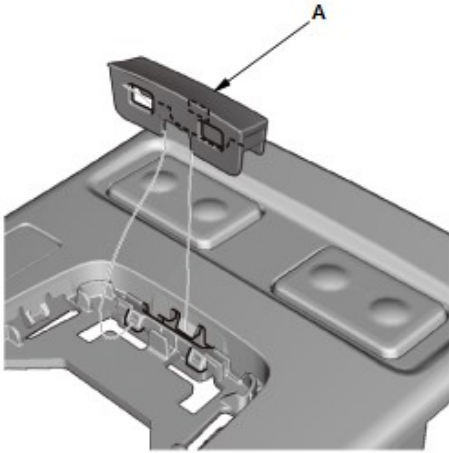


Installation

1. Center Console Panel - Install

1. M/T: Install the shift ring (A).

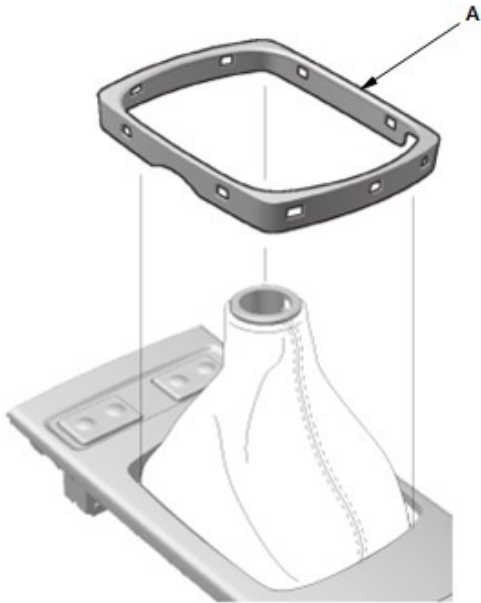


2. A/T: Install the A/T shift front panel (A).

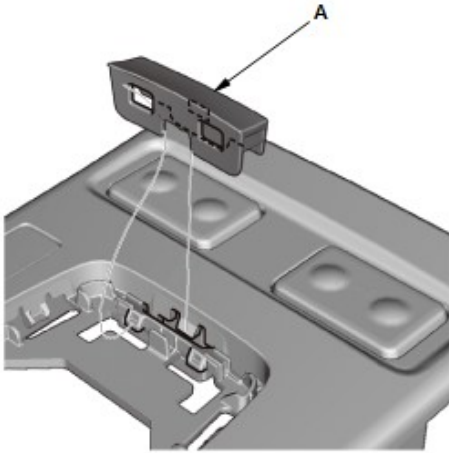


Fastener Locations

D ▷ : 6 E ▷ : 2

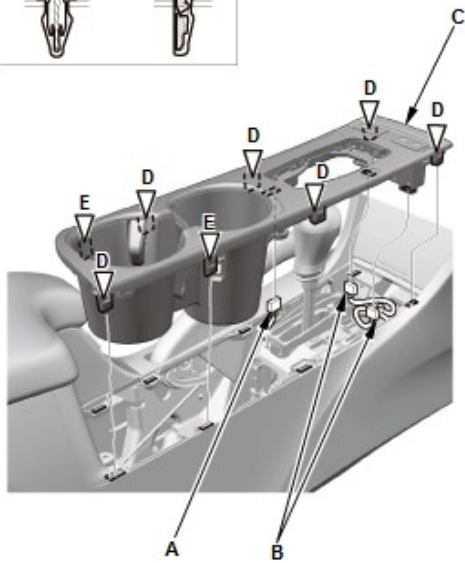


3. A/T: Connect the A/T gear position indicator panel light connector (A).
4. With seat heater: Connect the seat heater switch connectors (B).
5. Install the center console panel (C).

2. A/T Shift Panel (A/T) - Install

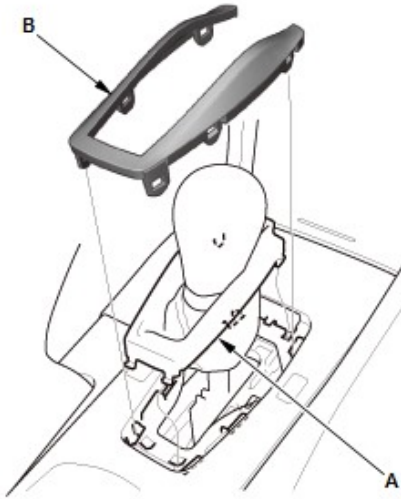

1. Install the shift lever boot (A).
2. Install the A/T shift panel (B).

3. Shift Lever Knob and Shift Lever Boot Ring (M/T) - Install

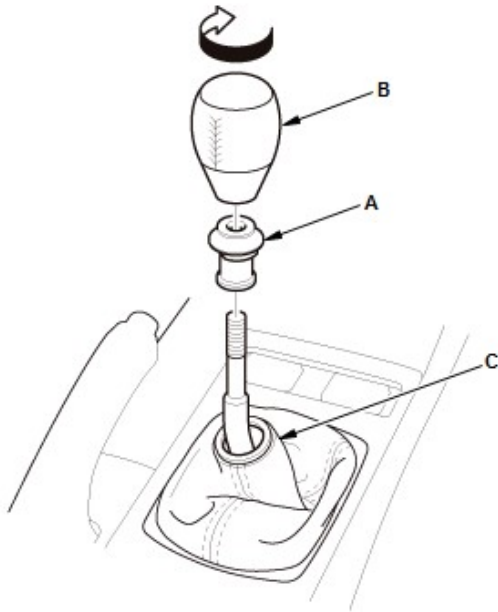

1. Install the shift lever boot ring (A) and shift lever knob (B).
2. Tighten the shift lever boot ring.
3. Install the shift lever boot (C) to the shift lever boot ring.