

## ANC/Active Sound Control Unit Removal and Installation


### Removal

SRS components are located in this area. Review the [SRS component locations](#) and the [precautions and procedures](#) before doing repairs or service.

#### 1. Glove Box - Remove

1. [Remove the glove box.](#)

#### 2. ANC/Active Sound Control Unit - Remove

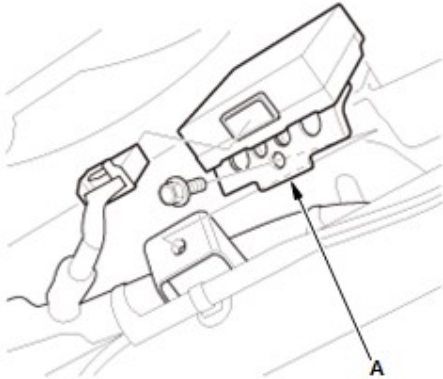


1. Disconnect the ANC/active sound control unit connector.
2. Remove the ANC/active sound control unit (A).

### Installation

SRS components are located in this area. Review the [SRS component locations](#) and the [precautions and procedures](#) before doing repairs or service.

#### 1. ANC/Active Sound Control Unit - Install

1. Install the ANC/active sound control unit (A).

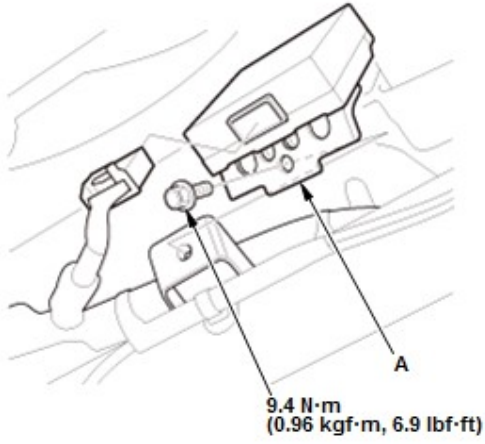

## 2. Glove Box - Install

2. Connect the ANC/active sound control unit connector.

1. [Install the glove box.](#)