


Air Cleaner Element Removal, Installation, and Inspection

Removal/Installation

1. Air Cleaner Element - Remove

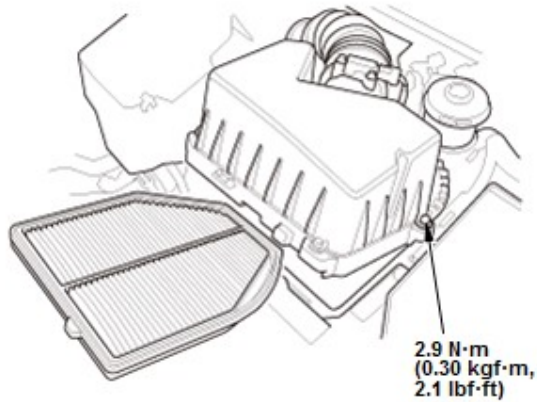

2. All Removed Parts - Install

1. Install the parts in the reverse order of removal.

NOTE: [If the idle speed fluctuates, do the idle speed inspection.](#)

3. Maintenance Minder - Reset (With Maintenance Minder System)

1. If the Maintenance Minder required to replace the air cleaner element, [reset the Maintenance Minder with the gauge.](#)

Inspection

1. Air Cleaner Element - Inspect

1. Check the air cleaner element for damage or clogging. If it is damaged or clogged, replace it.

NOTE: Do not use compressed air to clean the air cleaner element.

2. Clean and remove any debris from inside the air cleaner.