


Dashboard Center Speaker Trim Removal and Installation

Removal

1. Center Speaker Trim - Remove

Fastener Locations

▷ : 6

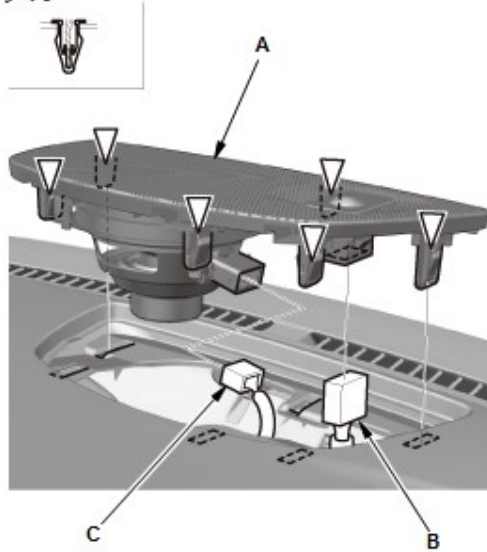


1. Remove the center speaker trim (A).
2. Disconnect the automatic lighting/sunlight sensor connector (B).
3. With navigation: Disconnect the center speaker connector (C).

Installation

1. Center Speaker Trim - Install

Fastener Locations

▷ : 6

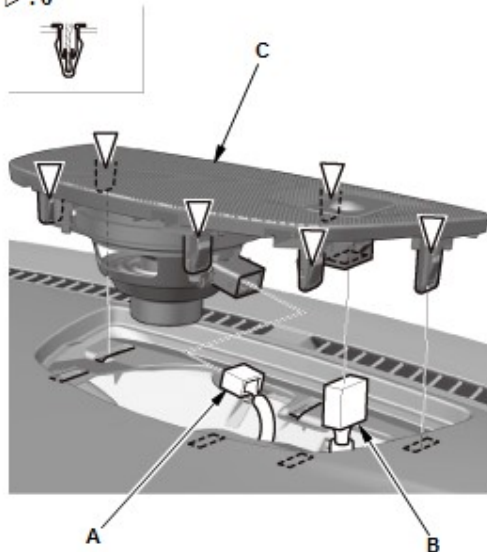

1. With navigation: Connect the center speaker connector (A).
2. Connect the automatic lighting/sunlight sensor connector (B).
3. Install the center speaker trim (C).

