


Driver's Inner Dashboard Trim Removal and Installation

Removal

1. Driver's Inner Dashboard Trim - Remove

Fastener Locations

▷ : 4

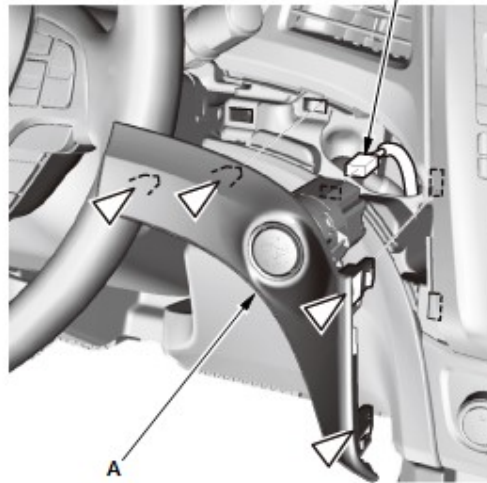


1. Remove the driver's inner dashboard trim (A); do this by first lowering and fully extending the steering column; this creates clearance to access the pull point on the trim panel. Then, working from left to right, gently pull out on the left corner of the trim panel to release the clips.
2. Disconnect the engine start/stop switch connector (B).

Installation

1. Driver's Inner Dashboard Trim - Install

Fastener Locations

▽ : 4

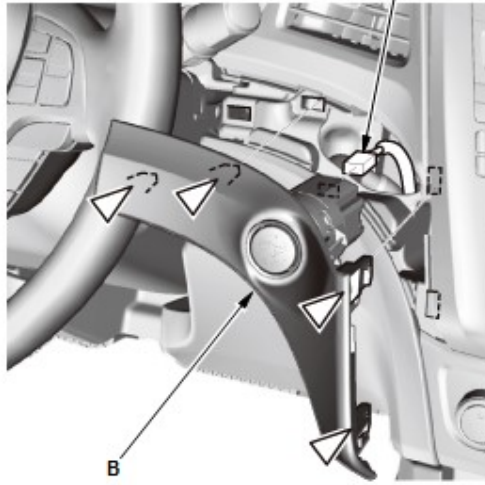

1. Connect the engine start/stop switch connector (A).
2. Install the driver's inner dashboard trim (B).