

Engine Oil Replacement


Replacement

1. Engine - Warm Up


1. Allow the engine to reach operating temperature (fan comes on at least twice).

2. Vehicle - Lift

3. Engine Undercover Plate - Remove

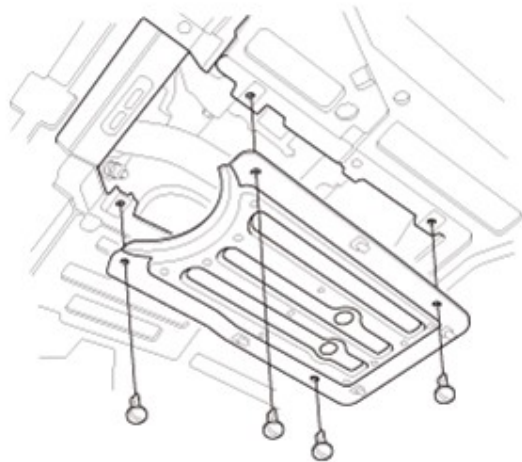


4. Engine Oil - Drain

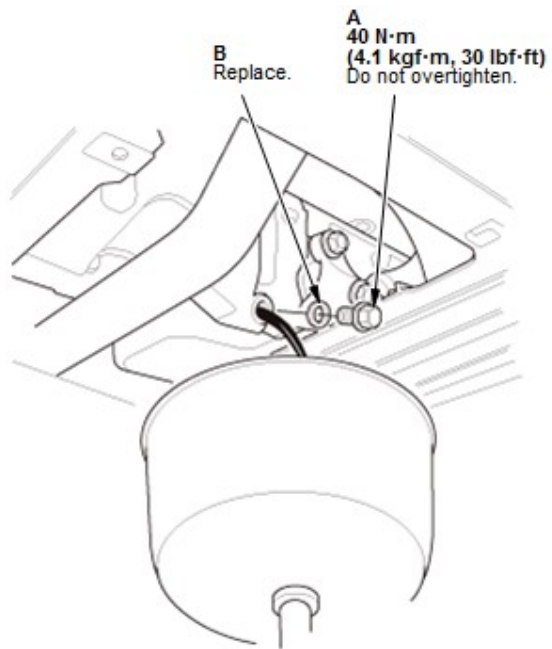

1. Remove the drain bolt (A), and drain the engine oil.
2. Reinstall the drain bolt with a new washer (B) and torque to specification.

5. Engine Undercover Plate - Install

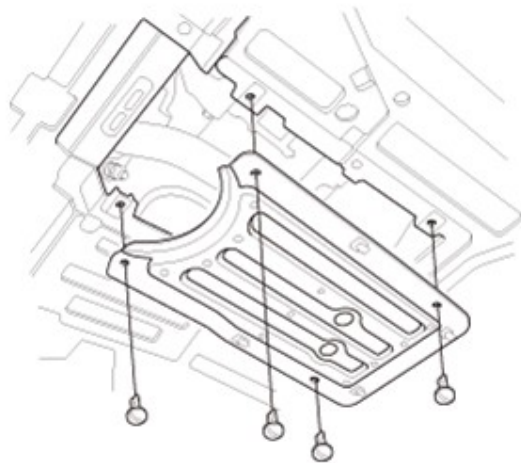


6. Engine Oil - Refill

1. [Refill the engine with the recommended engine oil.](#)

Capacity	
At Oil Change:	4.2 L (4.4 US qt)
At Oil Change including Filter:	4.4 L (4.6 US qt)

**After Engine
Overhaul:**

5.4 L (5.7 US qt)

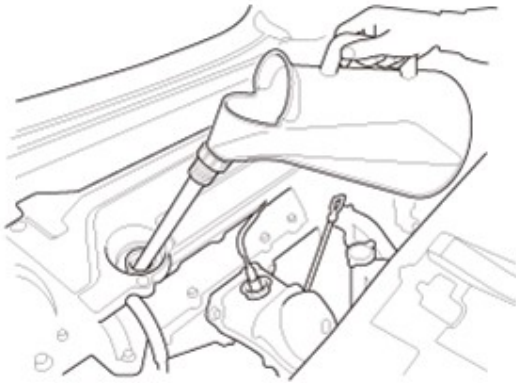

7. Engine Oil Level - Check

1. Run the engine for more than 3 minutes, then check the oil level and the oil leakage.

8. Maintenance Minder - Reset (With Maintenance Minder System)

1. If the Maintenance Minder required to replace the engine oil, [reset the Maintenance Minder with the gauge](#). If the Maintenance Minder did not require to replace the engine oil, [reset the Maintenance Minder with the HDS](#).