


Exterior Lights Bulb Removal and Installation

Removal/Installation

Front Side Marker Light

1. Front Side Marker Light Bulb - Remove

Front Side Marker Light: 3 CP

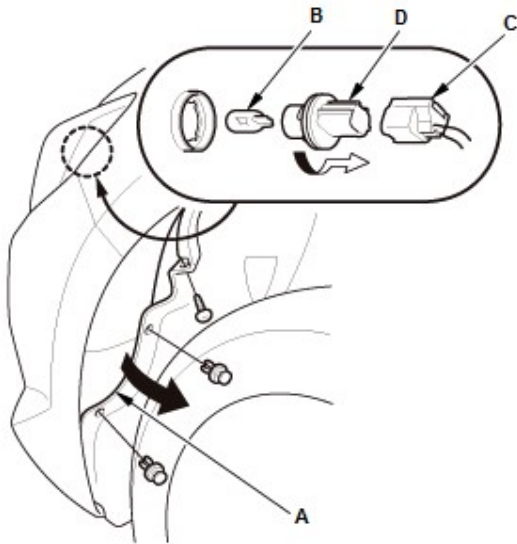

1. Turn the front wheel inward on the headlight side being removed.
2. Pull back the front inner fender (A) as needed to access the bulb (B).
3. Disconnect the front side marker light connector (C).
4. Turn the bulb socket (D) counterclockwise to remove the bulb.

2. All Removed Parts - Install


1. Install the parts in the reverse order of removal.

Rear Turn Signal Light

1. Taillight - Remove

2. Rear Turn Signal Light Bulb - Remove

Rear Turn Signal Light: 21 W

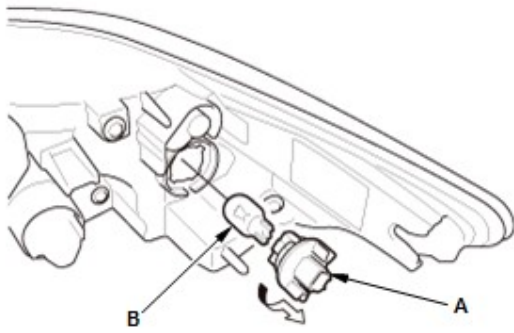

1. Turn the bulb socket (A) counterclockwise to remove the bulb (B).

3. All Removed Parts - Install


1. Install the parts in the reverse order of removal.

Back-Up Light

1. Trunk Lid Trim Panel - Remove

2. Back-Up Light Bulb - Remove

Back-Up Light: 16 W

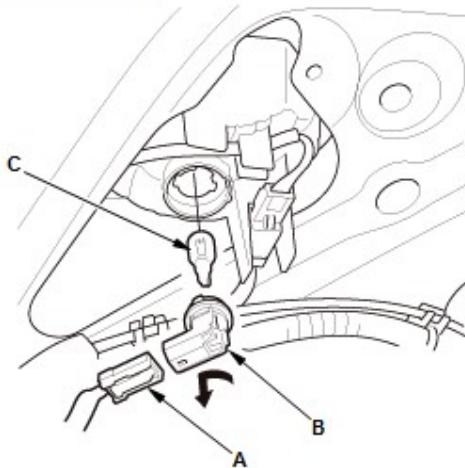

1. Disconnect the back-up light connector (A).
2. Turn the bulb socket (B) counterclockwise to remove the bulb (C).

3. All Removed Parts - Install

1. Install the parts in the reverse order of removal.