


Interior Trim Removal and Installation - Door Areas

Removal

Front Door Sill Area

1. Front Door Sill Trim - Remove

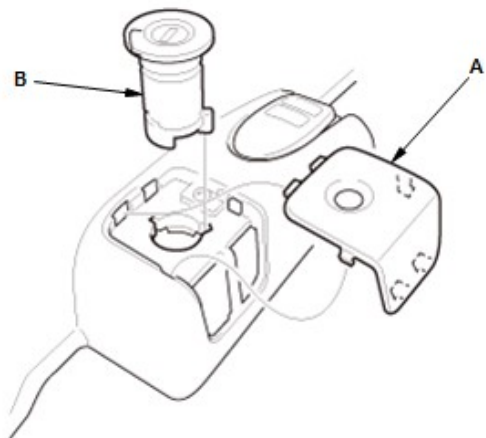


Driver's side

1. Remove the cap (A).
2. Remove the opener lock cylinder (B).

Fastener Location

A ▶ : 1

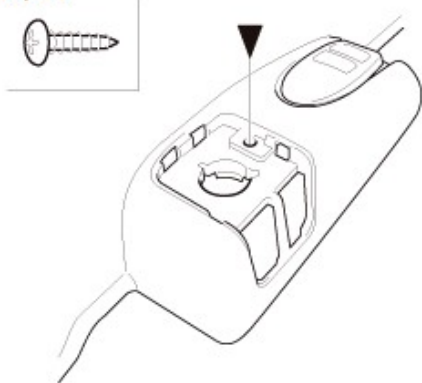


3. Remove the screw (A).
-

Driver's side

Fastener Locations

▽ : 6

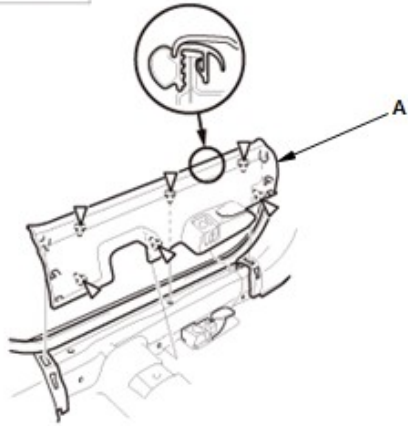


4. Remove the front door sill trim (A).

Passenger's side

Fastener Locations

▽ : 6

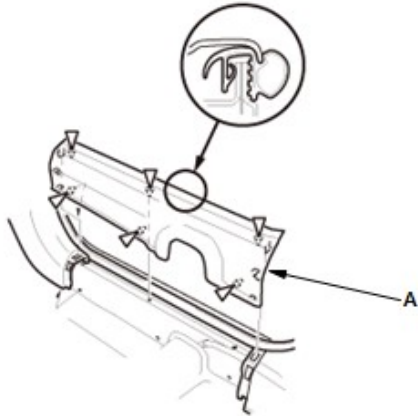



2. Kick Panel - Remove

Driver's side

Fastener Locations

C ▷ : 1

D ▷ : 1

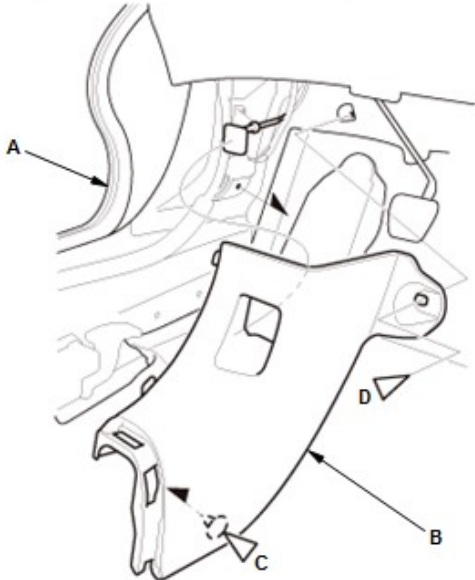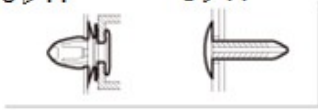

1. Remove the front door opening seal as needed (A).


2. Remove the kick panel (B).

Passenger's side

Fastener Locations


C ▷ : 1

D ▷ : 1

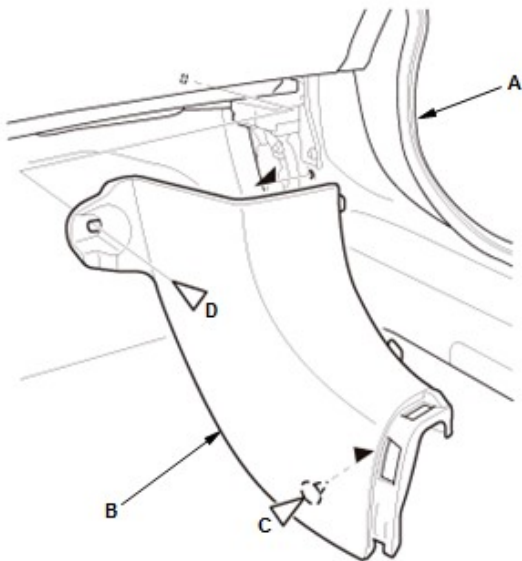

3. Front Door Opening Seal - Remove

1. If necessary, remove the front door opening seal (A).

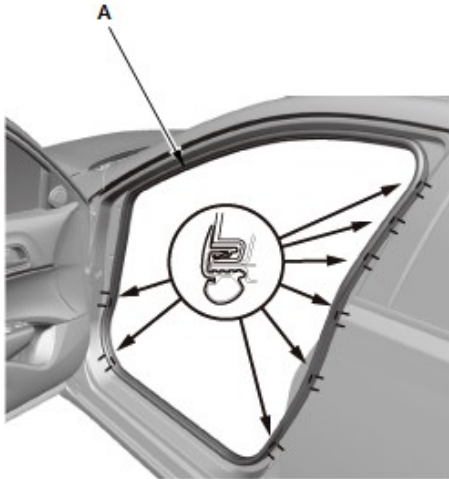


Rear Door Sill Area

1. Rear Door Sill Trim - Remove

Fastener Locations
 E ▷ : 2 (Yellow) F ▷ : 1 (Green)



1. While pushing down on the rear seat cushion (A), pull the seat hook handle (B) to release the hook (C).
2. While pulling up the seat cushion, remove the rear door sill trim (D).

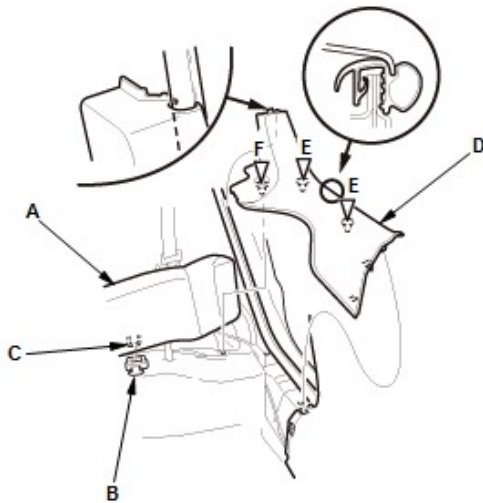

2. Rear Door Opening Seal - Remove


1. If necessary, remove the rear door opening seal (A).



Installation

Front Door Sill Area

1. Front Door Opening Seal - Install

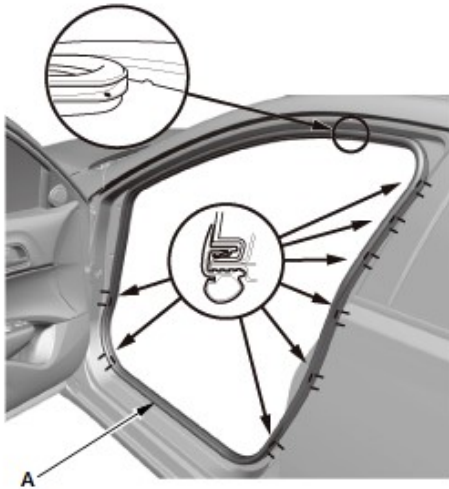

1. Install the front door opening seal (A).



2. Kick Panel - Install

Driver's side

Fastener Locations

C ▷ : 1

D ▷ : 1

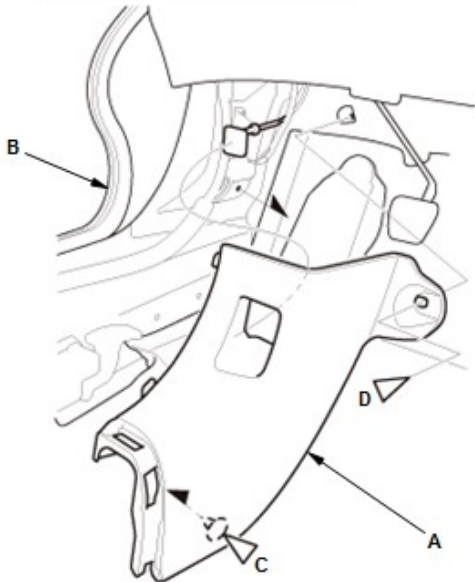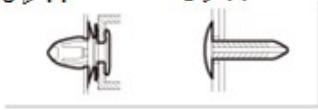



1. Install the kick panel (A).
2. Install the front door opening seal (B).

Passenger's side

Fastener Locations

C ▷ : 1

D ▷ : 1

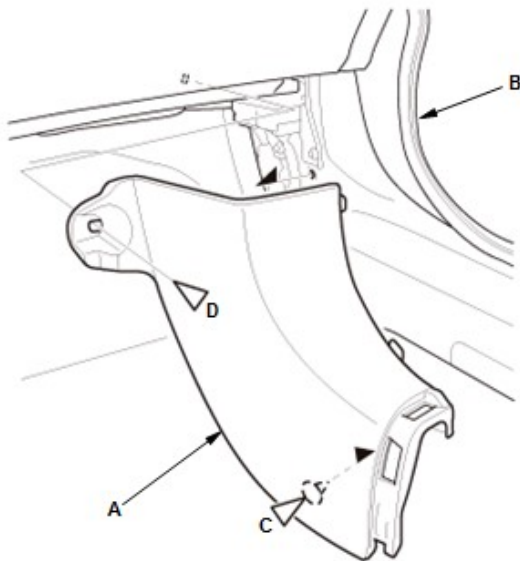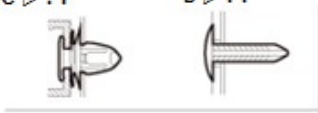


3. Front Door Sill Trim - Install

Driver's side

Fastener Locations

▽ : 6

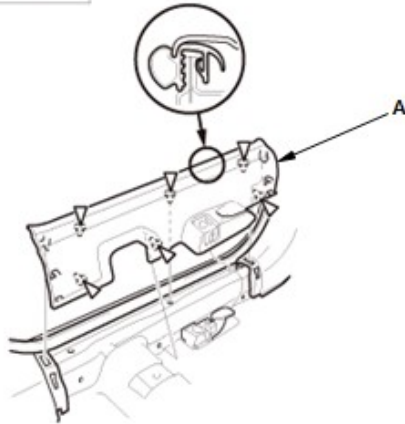


1. Install the front door sill trim (A).

Passenger's side

Fastener Locations


▽ : 6

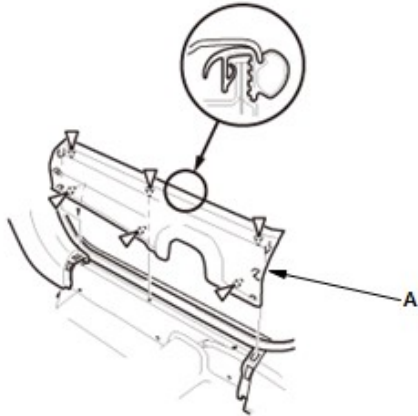

Driver's side

Fastener Location

A ▶ : 1

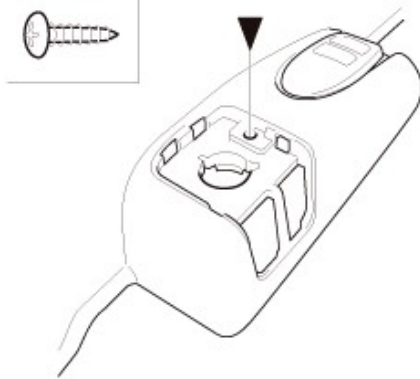

2. Install the screw (A).




3. Install the opener lock cylinder (A).

4. Install the cap (B).

Rear Door Sill Area

1. Rear Door Opening Seal - Install

1. Install the rear door opening seal (A).

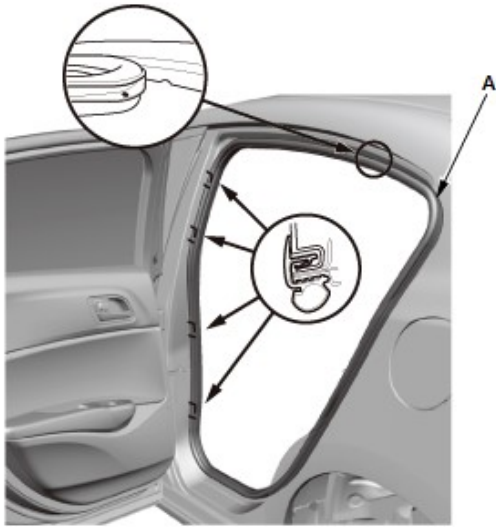

2. Rear Door Sill Trim - Install

Fastener Locations
E ▷ : 2 (Yellow) F ▷ : 1 (Green)



1. While pulling up the rear seat cushion (A), install the rear door sill trim (B).
2. Push down the seat cushion, then install the hook (C) to the rear seat cushion clip (D).

