


Rearview Mirror Removal and Installation


Removal

Without Automatic Dimming Mirror

1. Rearview Mirror - Remove

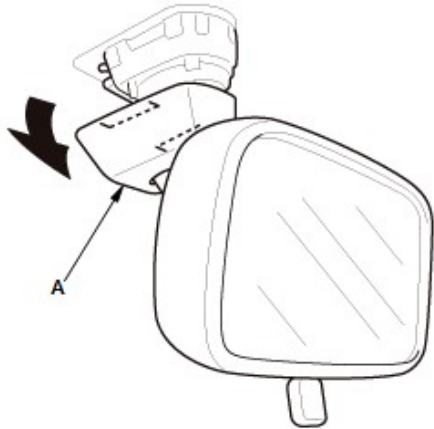

1. Pull down the mirror base cover (A).

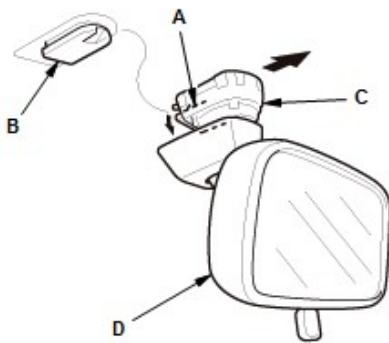


2. Pull down the hook (A) to release it from the mount (B).
3. Slide the mirror base (C) rearward, then remove the rearview mirror (D).


With Automatic Dimming Mirror

1. Rearview Mirror - Remove

1. Remove the rearview mirror harness cover (A).

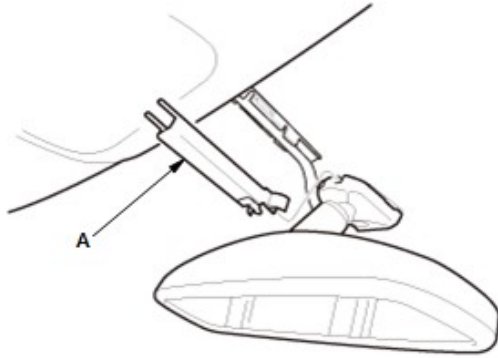

2. Disconnect the rearview mirror connector (A).

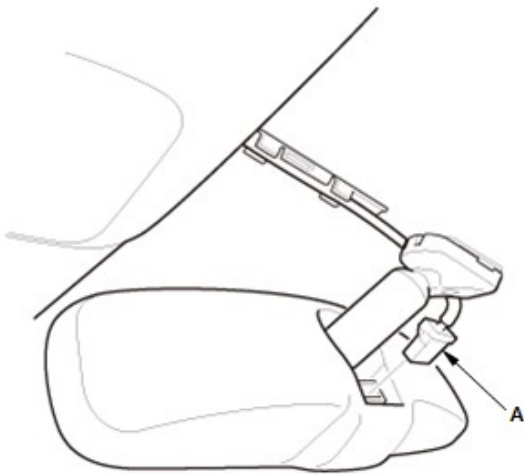


Fastener Location

A ▶ : 1



3. Loosen the screw (A) with a TORX T20 bit.


4. Slide the rearview mirror (B) rearward and off the mount (C).

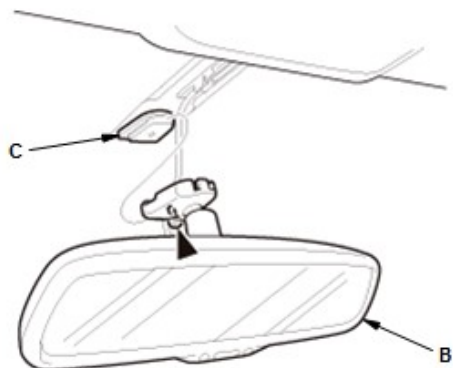

Installation

Without Automatic Dimming Mirror

1. Rearview Mirror - Install

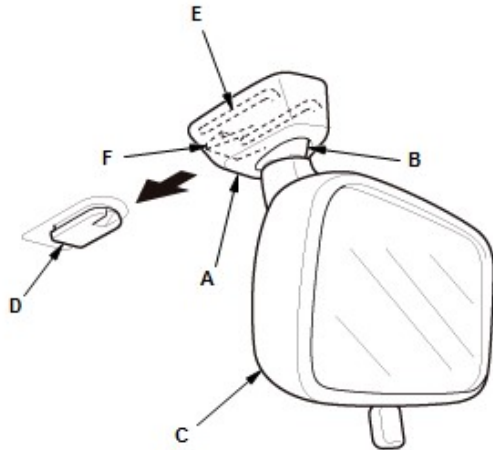


1. Install the mirror base cover (A) to the mirror base (B) securely.
2. Secure the rearview mirror (C) to the mount (D) by the spring (E) and the hook (F).

With Automatic Dimming Mirror

1. Rearview Mirror - Install

Fastener Location


C ▶ : 1

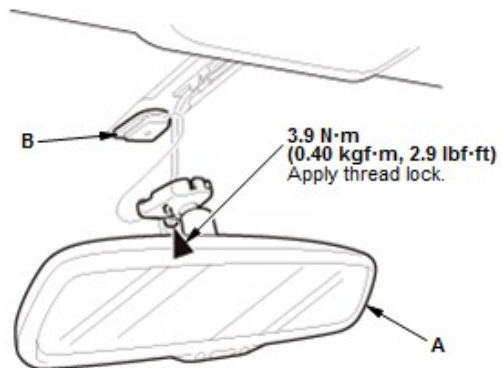

1. Install the rearview mirror (A) to the mount (B).
2. Install the screw (C) with a TORX T20 bit.

NOTE: Before installing the rearview mirror, remove the TORX screw, and apply medium strength liquid thread lock to it.

3. Connect the rearview mirror connector (A).

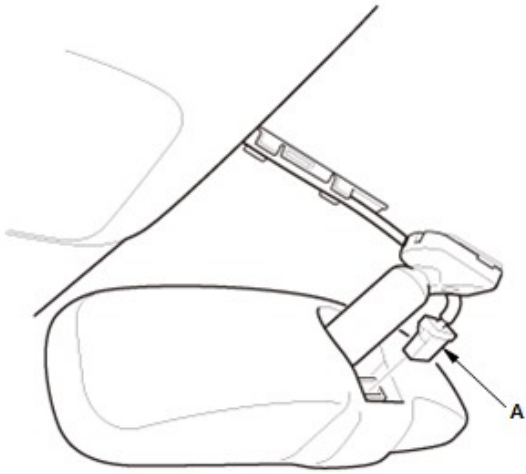

4. Install the rearview mirror harness cover (A).

