CONSOLE AND REAR FOOT LIGHT

FEB. 2008


ACCORD


INDEX

Parts List	
○ Console and Rear Foot Light Kit	
Tools and Supplies Required	2
Before You Begin	
Customer Information	
Wire Harness Routing Precautions	
O How To Install The Joint Connector Case and Cover	4
Illustration of the Components on the Vehicle	5
Installation (LHD Model)	
Removing the Vehicle Parts	
○ Installing the Foot Light Harness	11
O Installing the Foot Light	14
Installation (RHD Model)	
Removing the Vehicle Parts	
O Installing the Foot Light Harness	23
Installing the Foot Light	26
Chack After Installation	30

Parts List

Console and Rear Foot Light Kit

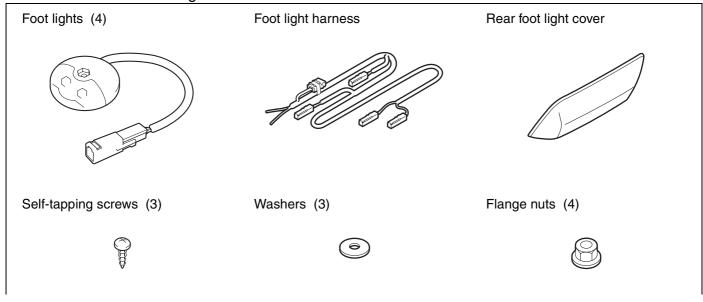

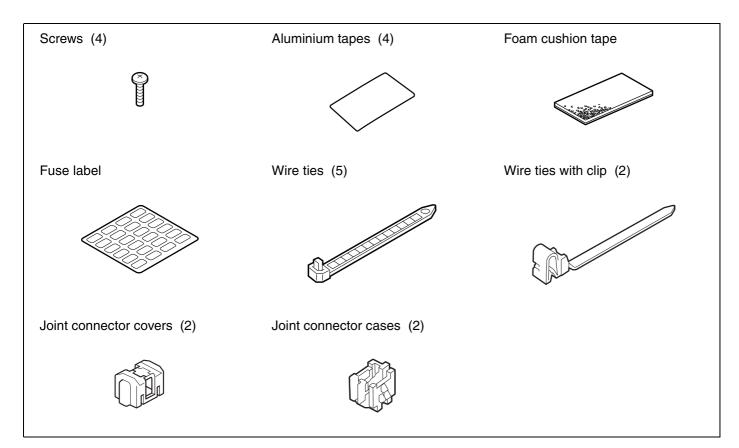

Tools and Supplies Required

- · Phillips screwdriver
- 8 mm and 17 mm Wrench
- 3 mm, 5 mm and 10 mm Drill bits
- Nippers
- · Duct tape

- Ratchet
- Pushpin
- File
- · Contact cleaner
- Eye protection (face shield, safety goggles, etc.)


- 10 mm Socket
- Drill
- Scissors
- · Shop towel

Before You Begin

Customer Information

- Write down the customer's radio station presets; the radio memory will be erased when you disconnect the battery.
- Make sure you have the anti-theft code for the radio, then write down the frequencies for the preset buttons.
- Move the driver's seat and passenger's seat to the rearmost position.
- · Disconnect the negative cable from the battery.
- · Before removing parts from the vehicle, note their locations so that they can be reinstalled in their original places prop-
- Be sure to use the bolts, screws and nuts included in this kit. Use of bolts, nuts and screws other than those included in this kit may damage the parts.
- Do not clamp the accessory harness and SRS harness together.

Wire Harness Routing Precautions

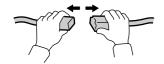







Disconnect the connectors and terminals by holding them. Do not pull the harness to disconnect the connector


Do not pull the harness with force. It will damage the harness.


Cut off the excess of the wire ties.

Connect the connectors and terminals securely until they lock.





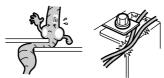

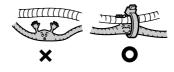

Reinstall the connectors to the corresponding stays whenever they are removed. After operation, check that the connectors are installed on the stays securely and not loose or come out of the stays.

Take care not to pinch the harness with the vehicle parts during assembly.

Secure the harness to the vehicle harness securely not to let them hang down. Reinstall the clamps of the vehicle if they are removed.


How To Install The Joint Connector Case and Cover


 Insert the end of the wire to be connected into the hole in the connector case; then bend and push the remaining section of the wire into the groove in the connector case. Lay the existing wire to which the wire is to be connected in the remaining groove in the connector case, as shown.

2. Place the connector cover over the connector case and push it to the first lock position by your hand. Finally squeeze the cover all the way to the second lock position with a pair of pliers.

When squeezing the connector cover to the second lock position with a pair of pliers

- O Do not pinch any wires with the pliers.
- After installing the joint connector case and cover, visually check the position of the tabs on both sides of the joint connector case.

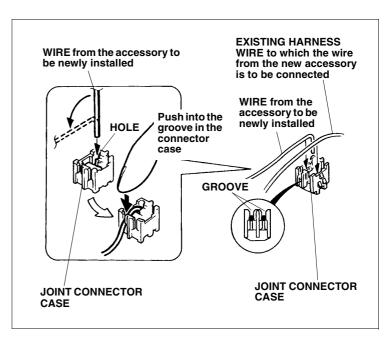

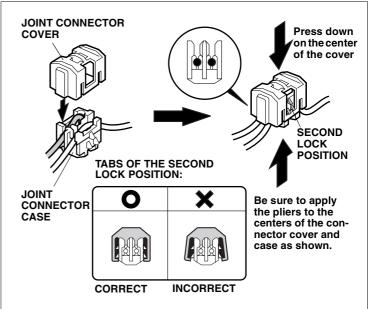

When the wire from the new accessory is connected to a wrong wire

Do not separate the joint connector case and cover once they are installed. Observe the following when you have connected the accessories wire to the wrong cars harness:

- Cut the accessories wire at a point about 40 mm away from the connector cover.
- O To prevent shortage, bend the end, then wrap an insulation tape around it as shown.
- Reconnect the accessories wire to the correct cars harness wire using new connector cover and case.
- New joint connector cover and case are available through your Honda car dealer.



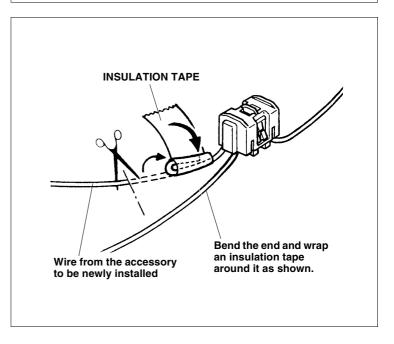


Illustration of the Components on the Vehicle

<LHD>

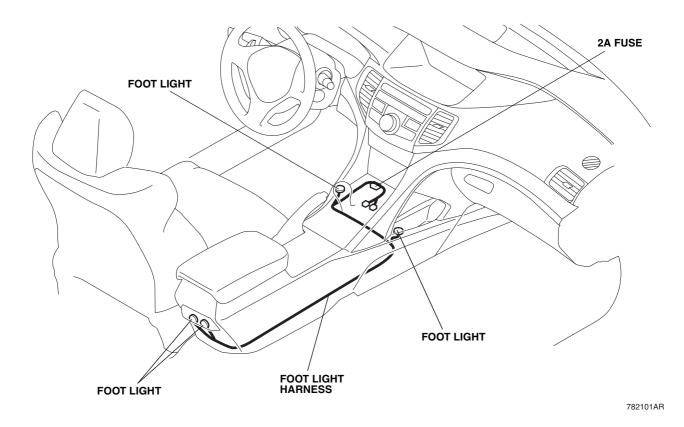

<RHD>

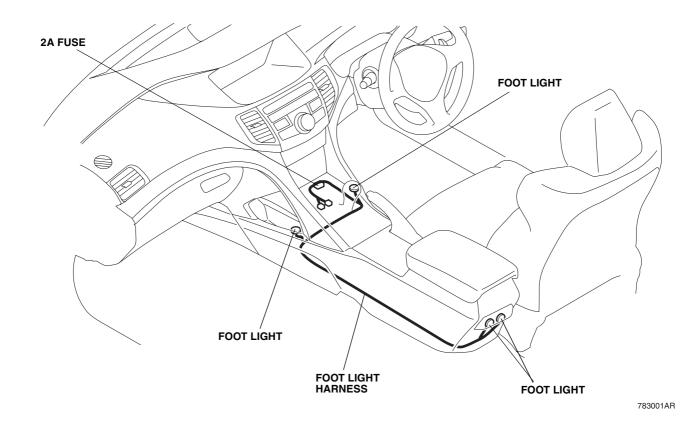


Installation (LHD Model)

Removing the Vehicle Parts


<M/T model>

- 1. Pull down the shift boot (two retaining tabs).
- 2. Turn the shift knob counterclockwise and remove it from the shift rod.

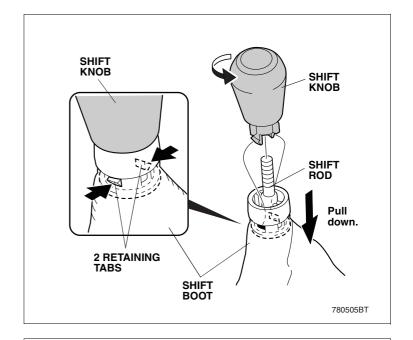

<M/T model with aluminium shift knob>


- 3. Pull down the shift boot (two retaining tabs).
- Using a 17 mm wrench, turn the special nut clockwise and loosen it while holding the shift knob with hand.
- 5. Turn the shift knob and special nut counterclockwise and remove them from the shift rod.

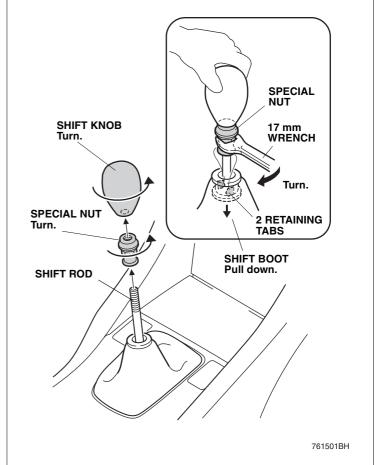


Attach the duct tape to the center console, and wrap the duct tape around the parking brake lever.

<A/T model only>


7. Wrap the duct tape around the shift knob.

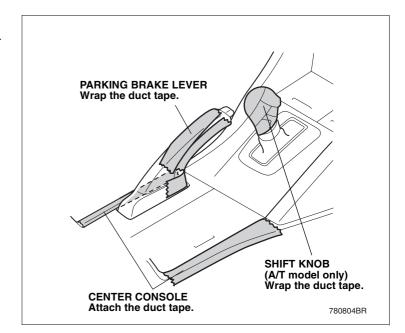


- 8. Pull the parking brake lever fully.
- Open the center holder lid, and remove the center console panel (ten clips, and unplug the vehicle connectors, if equipped).

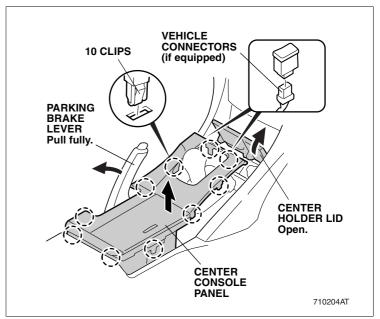


10. Open the glove box, and remove the passenger's dashboard trim (eight clips).

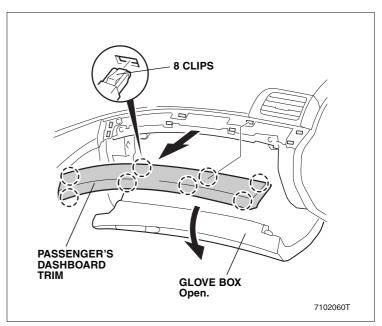


- 11. Attach the duct tape to the dashboard.
- 12. Remove the passenger's inner dashboard trim (two self-tapping screws and seven clips).

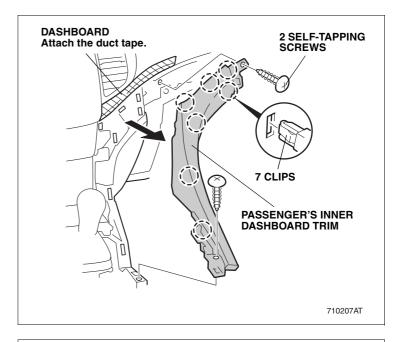


- 13. Attach the duct tape to the dashboard and steering column cover.
- 14. Remove the driver's inner dashboard trim (one self-tapping screw and six clips).

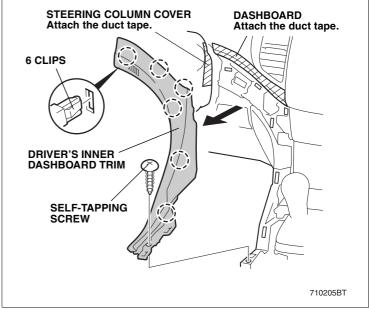


15. Push the center holder lid, and remove the ashtray.

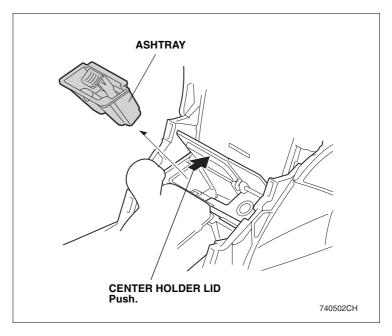


- 16. Remove the self-tapping screw, and pull out the center holder (four clips).
- 17. Unplug the vehicle connectors, and remove the center holder (one bulb socket, and one harness clip).

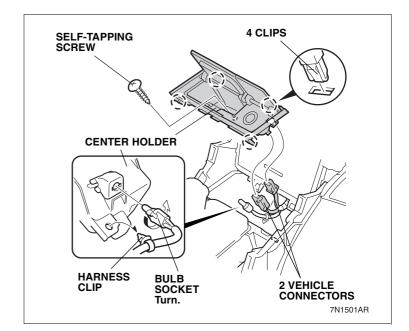


18. Remove the center console rear cover (four clips and two tabs).

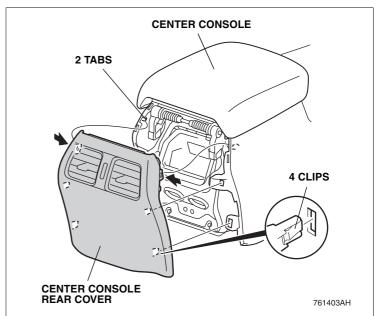

- Unplug the vehicle connectors, and pull up the center console (two self-tapping screws, four bolts and four clips).
- 20. Remove the center console (unplug the vehicle connectors, and release the harness clip, if equipped).

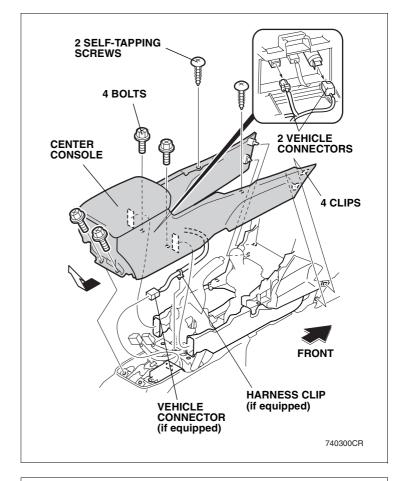



- 21. Remove the driver's center console side pocket (two self-tapping screws and one clip).
- 22. Remove the passenger's center console side pocket in the same manner as step 21.

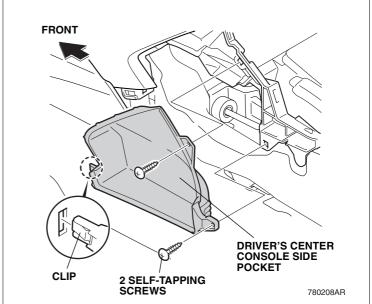


Installing the Foot Light Harness


- 23. Attach the 2A foot light fuse label to the fuse case of the foot light harness.
- 24. Using scissors, cut one foam cushion tape in three equal parts. Wrap one piece of the foam cushion tape that you just cut around the fuse case in a manner that allows you to open/close the lid of fuse case freely.

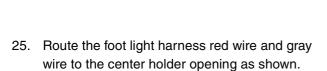

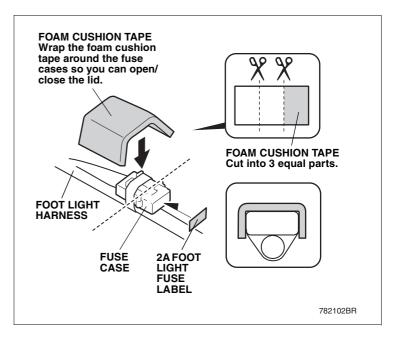


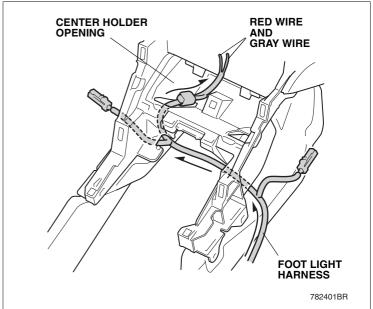


- 26. Connect the red wire in the foot light harness with the red wire in the vehicle 2-pin connector using the joint connector case and cover.
- 27. Connect the gray wire in the foot light harness with the gray wire in the vehicle 2-pin connector using the joint connector case and cover.
- For connection of joint connector case and cover, refer to "How To Install The Joint Connector Case and Cover".
- 28. Secure the foot light harness red wire and gray wire to the vehicle harness using one wire tie.
- 29. Wrap the remaining two pieces of the cushion tape that you cut in three equal parts in step 24 around the joint connector case and cover respectively.

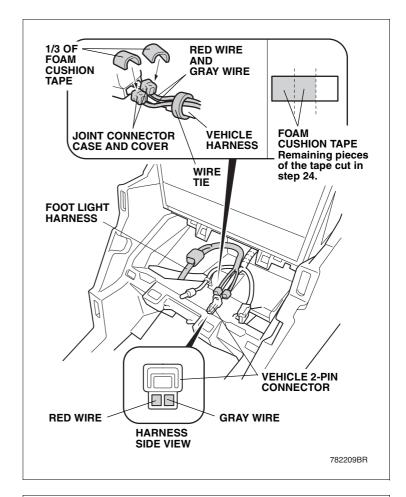


30. Secure the foot light harness to the dashboard using two wire ties with clip.

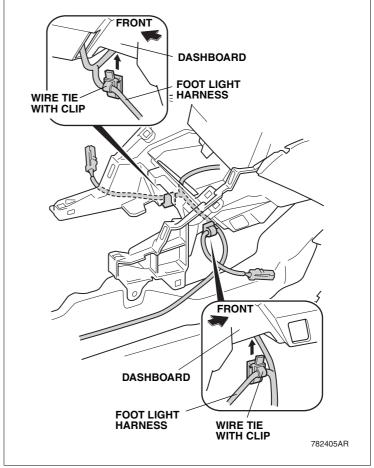


- 31. Using contact cleaner on a shop towel, clean the dashboard where the aluminium tape will attach.
- 32. Secure the foot light harness to the dashboard using one aluminium tape.

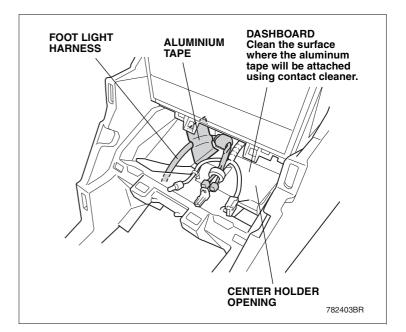

33. Route the foot light harness along the vehicle harness.

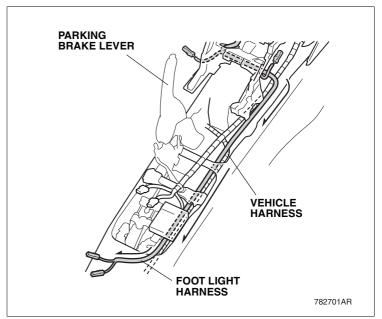


34. Secure the foot light harness to the vehicle harness using four wire ties.

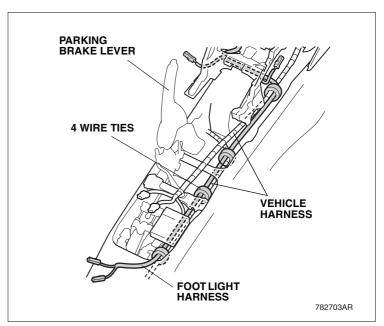


Installing the Foot Light


Console Foot Light

- 35. Using a pushpin, pierce the center of the three scribe marks on the driver's center console side pocket.
- 36. While wearing eye protection, drill a 10 mm hole and two 5 mm holes at the pierced points on the driver's center console side pocket. First drill with a 3 mm bit first, then finish with a 5 mm bit/10 mm bit.
- 37. Using a file, remove any burrs from the holes.
- 38. Route the foot light connector through the 10 mm hole. Install the foot light on the driver's center console side pocket using one screw and one flange nut.

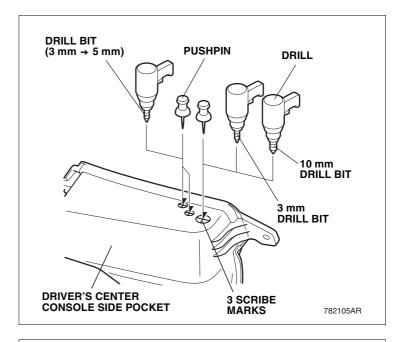

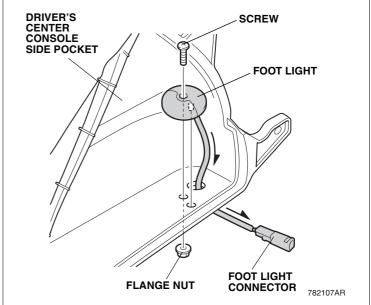


- 39. Using contact cleaner on a shop towel, clean the driver's center console side pocket where the aluminium tape will attach.
- 40. Secure the foot light harness and the connector to the driver's center console side pocket using one aluminium tape.
- 41. Install the foot light on the passenger's center console side pocket in the same manner as step 35 through step 40.

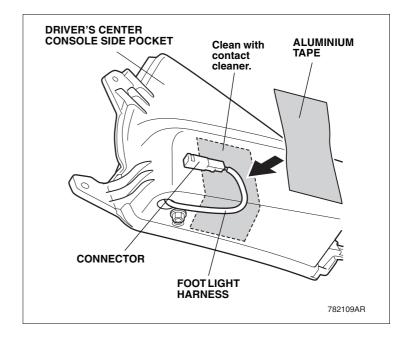


Rear Foot Light

<With rear ventilator>


 Remove the ventilator (three self-tapping screws and four retaining tabs) from the center console rear cover.

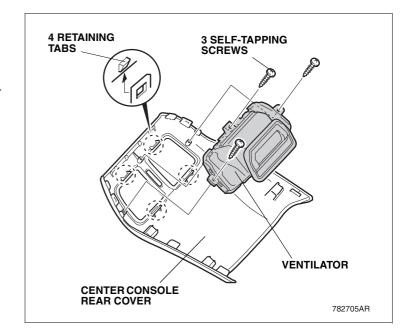


- 42. Using a pushpin, pierce the center of the nine scribe marks on the center console rear cover.
- 43. While wearing eye protection, drill five10 mm hole and four 5 mm holes at the pierced points on the center console rear cover. First drill with a 3 mm bit first, then finish with a 5 mm bit/10 mm bit.
- 44. Using a file, remove any burrs from the holes.

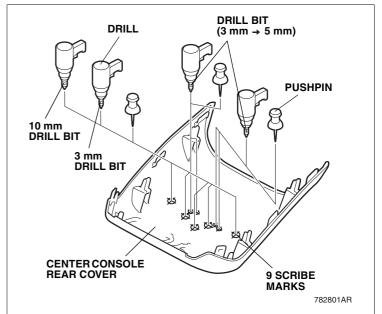

45. Route the foot light connectors through the two 10 mm holes in the center console rear cover one for each respectively. Install the two foot lights on the center console rear cover using two screws and two flange nuts.

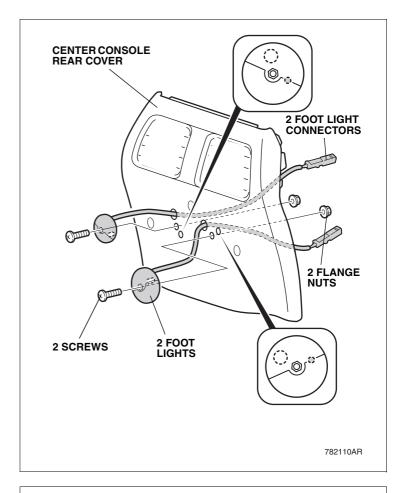


- 46. Using contact cleaner on a shop towel, clean the center console rear cover where the aluminium tape will attach.
- 47. Secure the two foot light harnesses and two connectors to the center console rear cover using one aluminium tape.

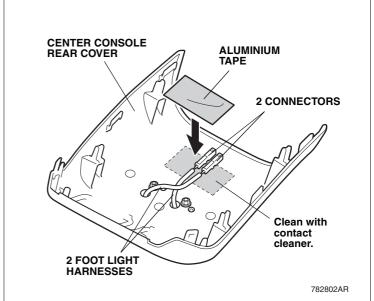


48. Install the rear foot light cover on the center console rear cover using three self-tapping screws and three washers.

<With rear ventilator>


a. Reinstall the ventilator to the center console rear cover.

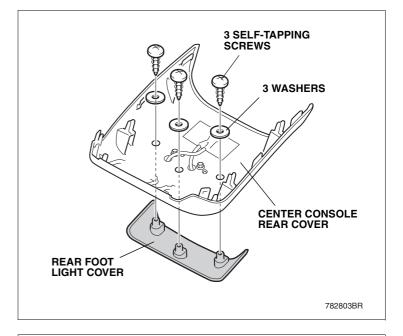

- 49. Plug the foot light harness 2-pin connector into the foot light 2-pin connector, and reinstall the driver's center console side pocket.
- 50. Install the passenger's center console side pocket in the same manner as step 49.

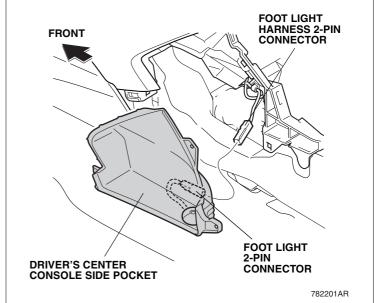

- 51. Reinstall the center console.
 - Take care not to pinch the harness with the center console bracket.
- 52. Plug the two foot light harness 2-pin connectors into the two foot light 2-pin connectors one for each respectively, and reinstall the center console rear cover.
 - Go to "Check After Installation."

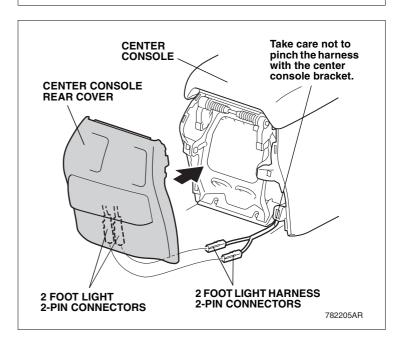


Installation (RHD Model)

Removing the Vehicle Parts


<M/T model>

- 1. Pull down the shift boot (two retaining tabs).
- 2. Turn the shift knob counterclockwise and remove it from the shift rod.

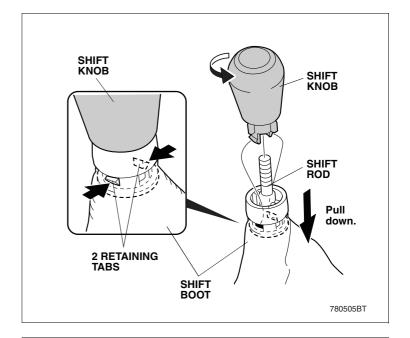

<M/T model with aluminium shift knob>


- 3. Pull down the shift boot (two retaining tabs).
- Using a 17 mm wrench, turn the special nut clockwise and loosen it while holding the shift knob with hand.
- 5. Turn the shift knob and special nut counterclockwise and remove them from the shift rod.

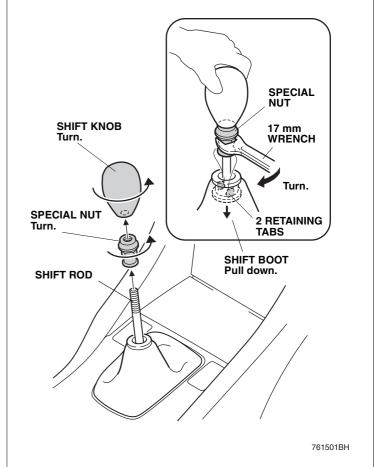


Attach the duct tape to the center console, and wrap the duct tape around the parking brake lever.

<A/T model only>


7. Wrap the duct tape around the shift knob.

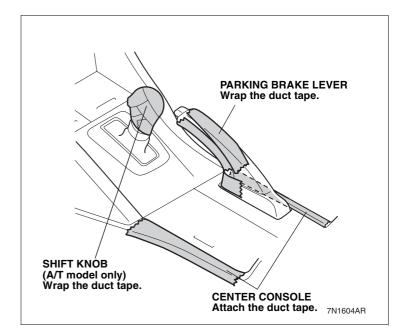


- 8. Pull the parking brake lever fully.
- Open the center holder lid, and remove the center console panel (ten clips, and unplug the vehicle connectors, if equipped).

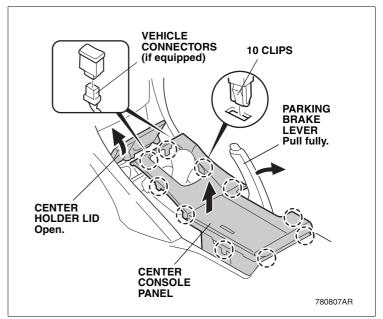


10. Open the glove box, and remove the passenger's dashboard trim (eight clips).

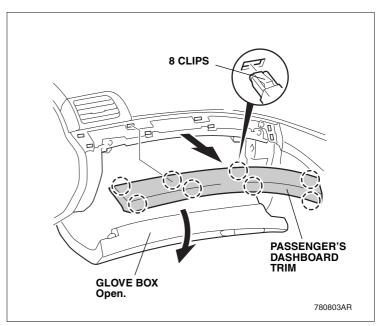


- 11. Attach the duct tape to the dashboard.
- 12. Remove the passenger's inner dashboard trim (two self-tapping screws and seven clips).

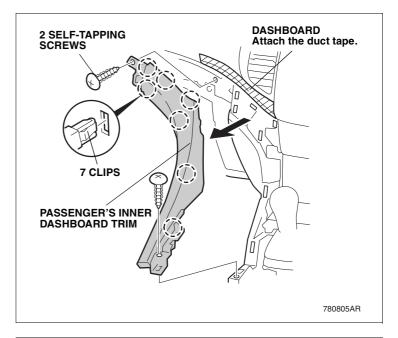


- 13. Attach the duct tape to the dashboard and steering column cover.
- 14. Remove the driver's inner dashboard trim (one self-tapping screw and six clips).

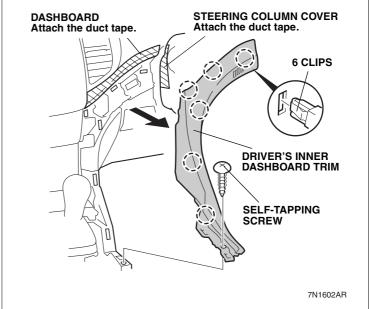


15. Push the center holder lid, and remove the ashtray.

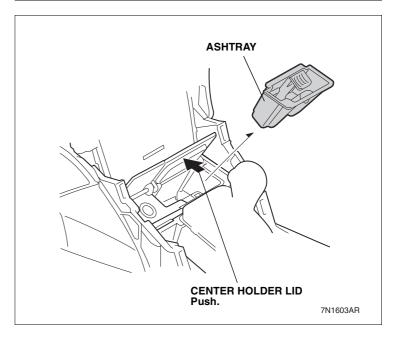


- 16. Remove the self-tapping screw, and pull out the center holder (four clips).
- 17. Unplug the vehicle connectors, and remove the center holder (one bulb socket, and one harness clip).

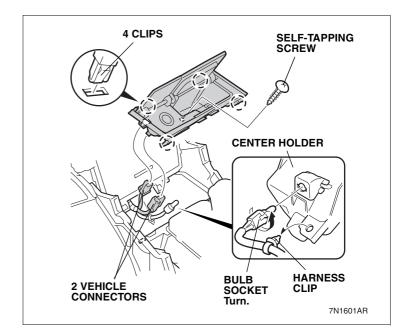


18. Remove the center console rear cover (four clips and two tabs).

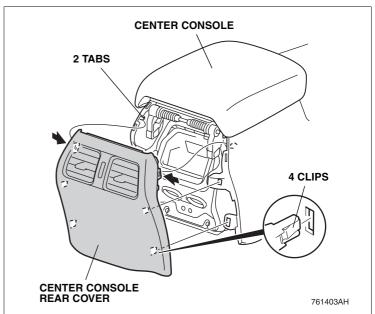

- Unplug the vehicle connectors, and pull up the center console (two self-tapping screws, four bolts and four clips).
- 20. Remove the center console (unplug the vehicle connectors, and release the harness clip, if equipped).

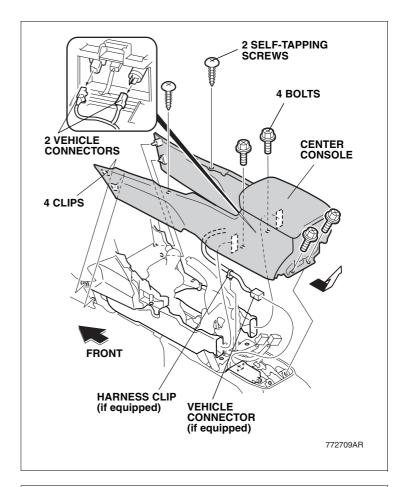



- 21. Remove the driver's center console side pocket (two self-tapping screws and one clip).
- 22. Remove the passenger's center console side pocket in the same manner as step 21.

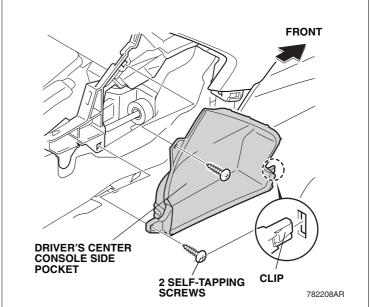


Installing the Foot Light Harness


- 23. Attach the 2A foot light fuse label to the fuse case of the foot light harness.
- 24. Using scissors, cut one foam cushion tape in three equal parts. Wrap one piece of the foam cushion tape that you just cut around the fuse case in a manner that allows you to open/close the lid of fuse case freely.

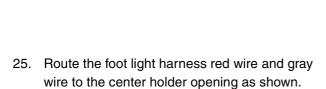

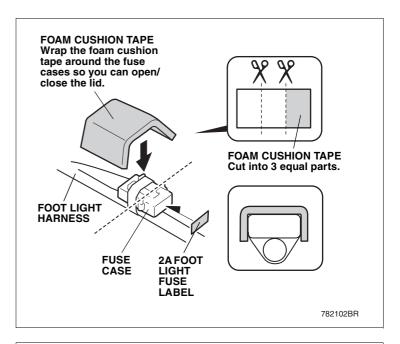


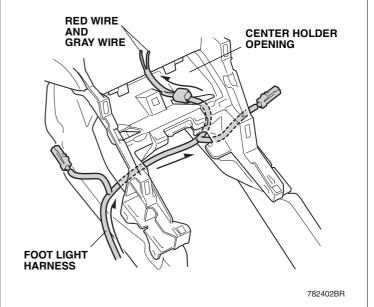


- 26. Connect the red wire in the foot light harness with the red wire in the vehicle 2-pin connector using the joint connector case and cover.
- 27. Connect the gray wire in the foot light harness with the gray wire in the vehicle 2-pin connector using the joint connector case and cover.
- For connection of joint connector case and cover, refer to "How To Install The Joint Connector Case and Cover".
- 28. Secure the foot light harness red wire and gray wire to the vehicle harness using one wire tie.
- 29. Wrap the remaining two pieces of the cushion tape that you cut in three equal parts in step 24 around the joint connector case and cover respectively.

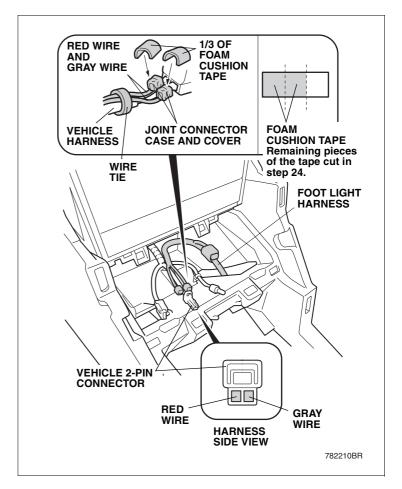


30. Secure the foot light harness to the dashboard using two wire ties with clip.

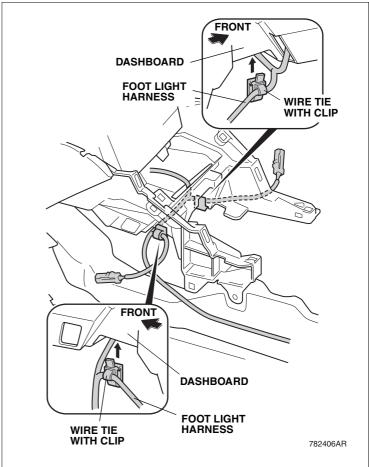


- 31. Using contact cleaner on a shop towel, clean the dashboard where the aluminium tape will attach.
- 32. Secure the foot light harness to the dashboard using one aluminium tape.

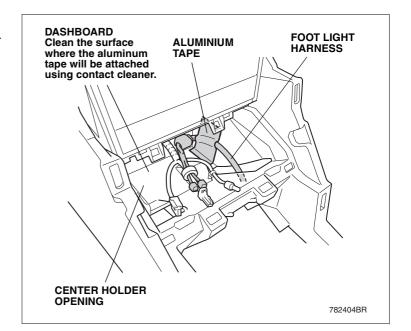

33. Route the foot light harness along the vehicle harness.

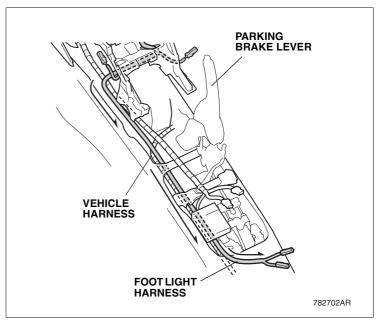


34. Secure the foot light harness to the vehicle harness using four wire ties.

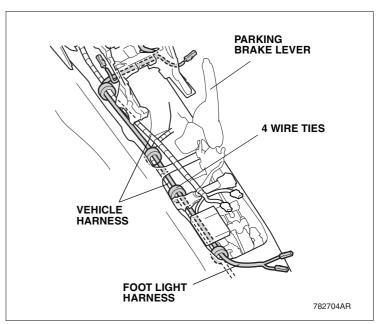



Installing the Foot Light

Console Foot Light


- 35. Using a pushpin, pierce the center of the three scribe marks on the driver's center console side pocket.
- 36. While wearing eye protection, drill a 10 mm hole and two 5 mm holes at the pierced points on the driver's center console side pocket. First drill with a 3 mm bit first, then finish with a 5 mm bit/10 mm bit.
- 37. Using a file, remove any burrs from the holes.

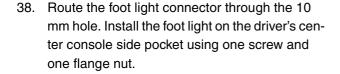

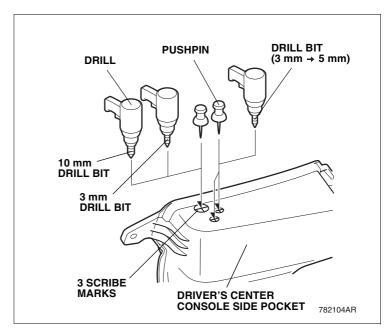

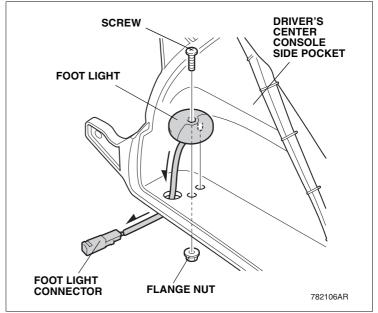


- 39. Using contact cleaner on a shop towel, clean the driver's center console side pocket where the aluminium tape will attach.
- 40. Secure the foot light harness and the connector to the driver's center console side pocket using one aluminium tape.
- 41. Install the foot light on the passenger's center console side pocket in the same manner as step 35 through step 40.

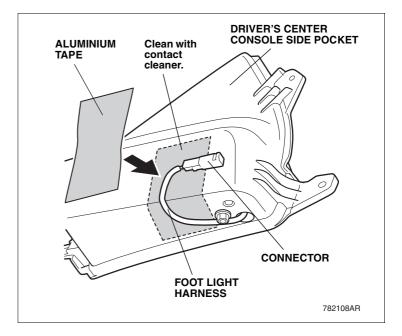


Rear Foot Light

<With rear ventilator>


 Remove the ventilator (three self-tapping screws and four retaining tabs) from the center console rear cover.

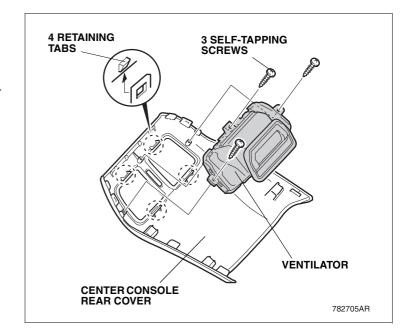


- 42. Using a pushpin, pierce the center of the nine scribe marks on the center console rear cover.
- 43. While wearing eye protection, drill five10 mm hole and four 5 mm holes at the pierced points on the center console rear cover. First drill with a 3 mm bit first, then finish with a 5 mm bit/10 mm bit.
- 44. Using a file, remove any burrs from the holes.

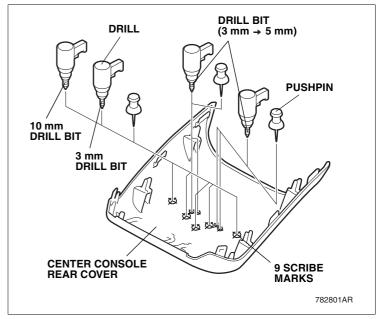

45. Route the foot light connectors through the two 10 mm holes in the center console rear cover one for each respectively. Install the two foot lights on the center console rear cover using two screws and two flange nuts.

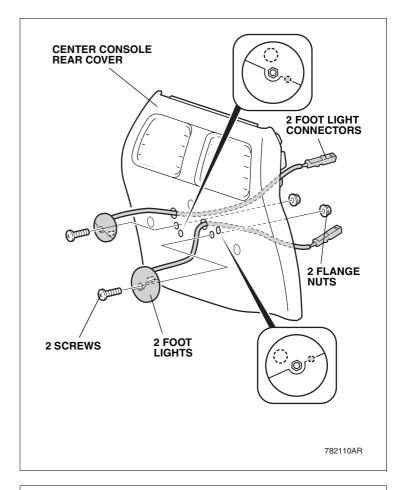


- 46. Using contact cleaner on a shop towel, clean the center console rear cover where the aluminium tape will attach.
- 47. Secure the two foot light harnesses and two connectors to the center console rear cover using one aluminium tape.

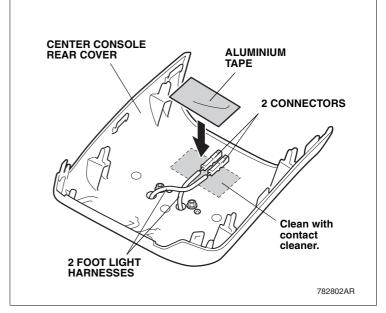


48. Install the rear foot light cover on the center console rear cover using three self-tapping screws and three washers.

<With rear ventilator>


a. Reinstall the ventilator to the center console rear cover.

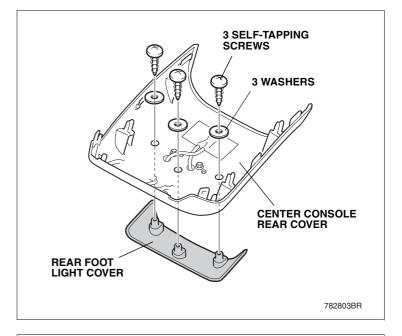

- 49. Plug the foot light harness 2-pin connector into the foot light 2-pin connector, and reinstall the driver's center console side pocket.
- 50. Install the passenger's center console side pocket in the same manner as step 49.

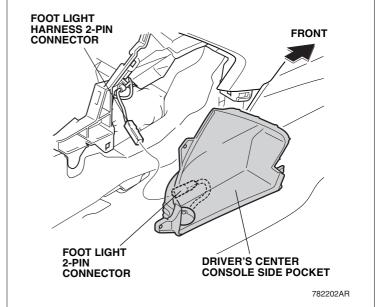

- 51. Reinstall the center console.
 - Take care not to pinch the harness with the center console bracket.
- 52. Plug the two foot light harness 2-pin connectors into the two foot light 2-pin connectors one for each respectively, and reinstall the center console rear cover.

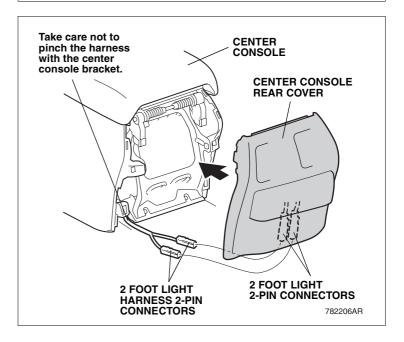


Check After Installation

- · Check that all wire harnesses are routed properly and all connectors are plugged in.
- · Reinstall all removed parts.
- Connect the negative cable to the battery and check operation of all lights and other electrical accessories.
- Enter the customer's radio anti-theft code, and reset the radio station presets.
- · Reset the clock.
- Do the Accelerator Pedal Kickdown Click System Learn Procedure described in the Shop Manual.
- Check the foot light for proper function referring to "Functioning of Foot Light" and "Illumination Control."

Functioning of Foot Light

When the light switch is in the "♣ost" or "**ED**" position, the foot light is on.

NOTE: If the foot light does not turn on, the fuse may be blown. Contact an authorized Honda dealer.

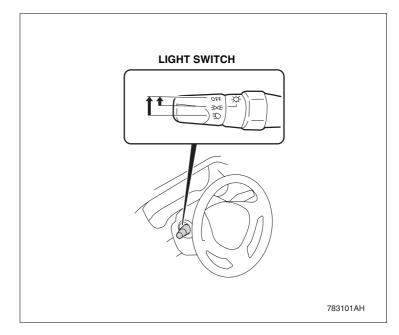

Illumination Control

- The select/reset knob on the instrument panel controls the brightness of the instrument panel lights and foot light.
- When the ignition switch is in the on (II) position, turn the select/reset knob to adjust the brightness.

To brighten

Turn the select/reset knob clockwise. An electric beep will sound when the brightness is at maximum.

To darken

Turn the select/reset knob counterclockwise. An electric beep will sound when the brightness is at minimum.

Adjust light brightness to your preference depending on the darkness outside of the vehicle.

