


Connector Views

88. Navigation Display Unit

- Center of dash
- On main wire harness

Connector A

- Blue

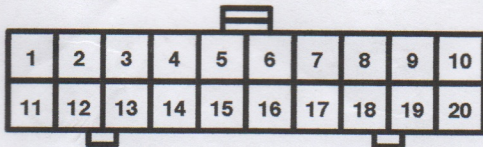

'96-'98: 17 wires

- 1 WHT/YEL (+B)
- 2 WHT/YEL (ACC)
- 3 '96-'99: RED (AUDIO BUS +)
- 4 '96-'99: GRY/YEL (SH AUDIO BUS)
- 5 BLK (DISP BUS +)
- 6 BLU (SCTY 1)
- 7 —
- 8 WHT (R SIG)
- 9 RED (G SIG)
- 10 BLK (GND)
- 11 RED/BLK (ILL+)
- 12 —
- 13 '96-'99: BLU (AUDIO BUS +)
- 14 —
- 15 WHT (DISP BUS -)
- 16 GRN (SCTY 2)
- 17 BLU (GND SIG)
- 18 YEL (B SIG)
- 19 BRN (C SIG)
- 20 BRN/YEL (SH SIG)


should be " "

'99-'04: 16 wires

- 1 WHT/YEL (+B)
- 2 WHT/YEL (ACC)
- 3 —
- 4 —
- 5 BLK (DISP BUS +)
- 6 BLU (SCTY 1)
- 7 —
- 8 WHT (R SIG)
- 9 RED (G SIG)
- 10 BLK (GND)
- 11 RED/BLK (ILL+)
- 12 RED
- 13 '00-'03: (ILL-)
- 14 '04: (ILL-)
- 15 '00-'03: ORN (SH DISP BUS)
- 16 '04: PNK (SH DISP BUS)
- 15 WHT (DISP BUS -)
- 16 GRN (SCTY 2)
- 17 BLU (GND SIG)
- 18 YEL (B SIG)
- 19 BRN (C SIG)
- 20 BRN/YEL (SH SIG)

Connector B ('04)

- Green



- 1 —
- 2 YEL (CLK 2)
- 3 BRN/WHT (SI)
- 4 LT GRN (SO)
- 5 —

3,4,13 control audio voice overpwr

16 controls audio voice overpwr

connector B

'00-'02 Diagram

- B2 CLK 2 A2 CLK 2
- B3 SI A3 Ae1
- B4 SO A4 Ae0