

Menu

Circuit Index

Terminal Numbering




Connector Terminal Views

242. ECM/PCM (V6)

- Under middle of dash

Connector A

- Gray
- On dashboard wire harness (right branch)

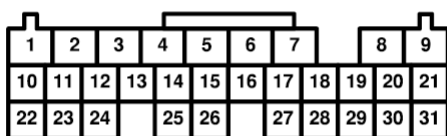

- 1 —
- 2 GRN/YEL (IMOFPR)
- 3 BRN/YEL (DBWRLY)
- 4 PNK (AFSHTCR)
- 5 RED/BLK (MRLY)
- 6 GRN/WHT (FANL)
- 7 GRN (FANH)
- 8 WHT/BLK (BKSW)
- 9 BRN/BLK
- '03-'04: (BKSWNC)
- '05: (BKSWNC)
- 10 LT GRN/RED (VSV)
- 11 BLU/WHT (VSSOUT)
- 12 —
- 13 2-door: M/T: LT BLU (CRMTCLS)
- 14 BLU (K-LINE)
- 15 WHT (CAN H)
- 16 BRN (SCS)
- 17 BLU/YEL (PSPSW)
- 18 BLU/BLK (ELD)
- 19 —
- 20 —
- 21 —
- 22 A/T : YEL/BLK (SLS)
- 2-door: M/T: GRN/WHT (RVS)
- 23 BLU/RED (NEP)
- 24 RED/WHT (WEN)
- 25 RED/BLU (IM OCD)
- 26 RED (CAN L)
- 27 RED (ACC)
- 28 GRN/BLK (SG4)
- 29 LT GRN (FTP)
- 30 —
- 31 YEL/GRN (VCC4)

Connector B


- White
- On ECM/PCM wire harness



- 1 —
- 2 RED/YEL (PCS)
- 3 2-door: M/T: WHT/RED (IMRC-)
- 4 2-door: M/T: WHT/BLU (IMRC+)
- 5 BLU/RED (EGR)
- 6 RED/BLU (KS)
- 7 BLU/YEL (MCS)
- 8 —
- 9 GRN (SHO2S B1)
- 10 WHT (VLBL B1)
- 11 2-door: M/T: WHT/BLK (IMRCM)
- 12 BLU (VS B1)
- 13 RED (VCENT B1)
- 14 GRN (IP B1)
- 15 BRN/YEL (LG2)
- 16 —
- 17 '05: GRN/RED (ECT2)
- 18 WHT (SHO2S B2)
- 19 WHT/RED (VLBL B2)
- 20 RED/BLU (VS B2)
- 21 RED/WHT (VCENT B2)
- 22 GRN/RED (IP B2)
- 23 A/T: RED/BLK (ATPN)
- 24 —

Connector C (A/T)

- White
- On ECM/PCM wire harness

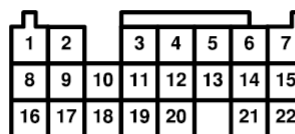

- 1 BLU/YEL (SHA)
- 2 BLU (ATP2)
- 3 BLU/YEL (ATFT)
- 4 —
- 5 BLU/WHT (OP3SW)
- 6 YEL (LC)
- 7 RED (LSA)
- 8 GRN/WHT (SHB)
- 9 BRN (ATP1)
- 10 YEL/GRN (ATPD5)
- 11 WHT (ATPP)
- 12 —
- 13 BLU/YEL (OP4SW)
- 14 —
- 15 BRN/WHT (LSB)
- 16 GRN (SHC)
- 17 BLU/BLK (ATPP)
- 18 RED (ATPD3)
- 19 BLU/YEL (ATPFWD)
- 20 —
- 21 GRN/WHT (METINH)
- 22 GRN/RED (LSC)

Menu

Circuit Index

Terminal Numbering

