

## Front Door Panel Removal and Installation


### Removal/Installation

NOTE: If you replace the power window master switch or the front passenger's power window switch, [reset the power window control unit](#).

#### 1. Tweeter Cover - Remove


##### Fastener Locations

▷ : 2

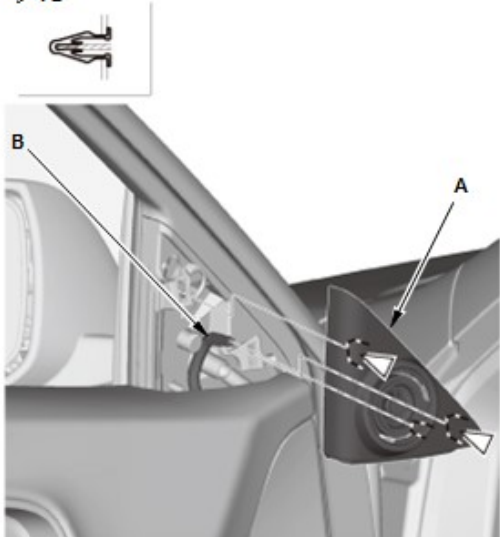

1. Remove the tweeter cover (A) by pulling from the top to release the clip.
2. Disconnect the connector (B).


#### 2. Front Door Panel - Remove

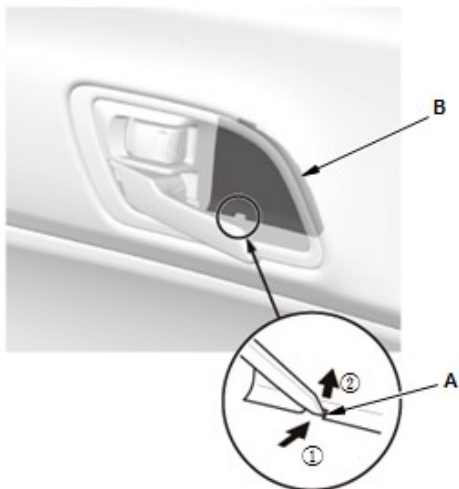

1. Push on the lower hook (A) with the appropriate trim tool, then pull back the inner handle cap (B) to remove it.

**Fastener Locations**

A ▶ : 2

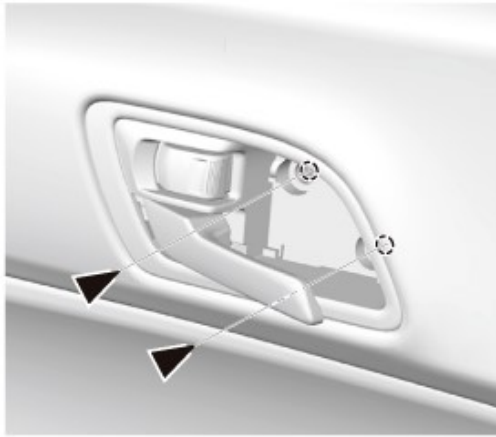

2. Remove the screws (A) securing the front door inner handle.

---

**Fastener Location**


B ▶ : 1



3. Remove the pull pocket cover (A) and the screw (B).
-


**Fastener Locations**

B ▷ : 8

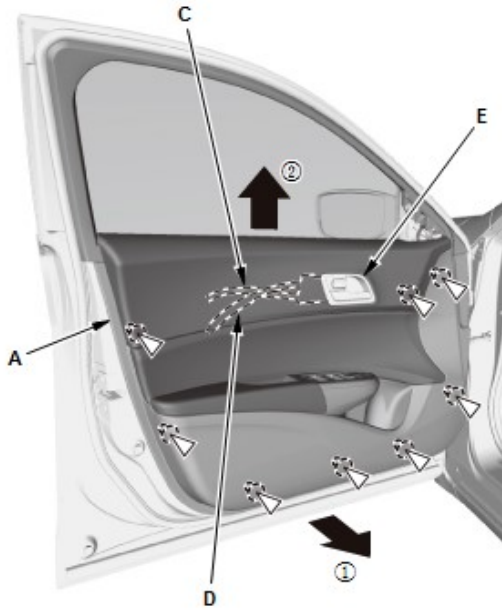


4. Start at the bottom edge of the front door panel (A), remove the clips (B) with a commercially available trim pad remover.
5. Starting at the rear, pull the door panel upward.

NOTE: The inner handle cable (C) and the latch cable (D) are connected to the front door inner handle (E). Do not pull up the door panel too far, or these cables will be damaged.

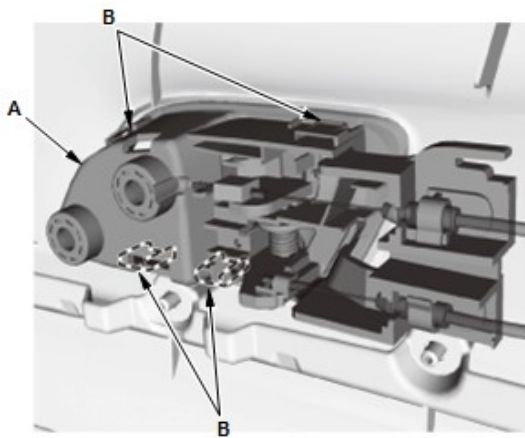


6. While holding the door panel away from the door, remove the front door inner handle (A) from the door panel by releasing the hooks (B).

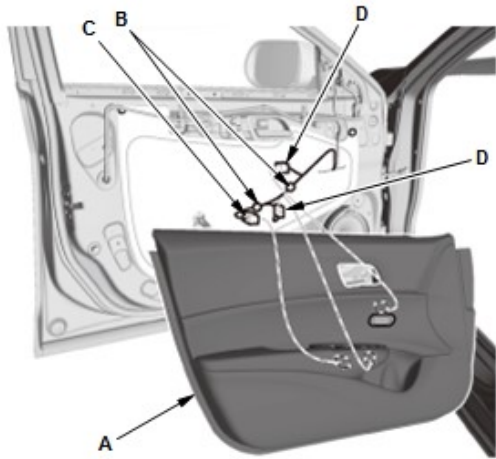

7. While holding the front door panel (A) away from the door, remove the harness clip (B) and disconnect the connector (C).

8. Driver's door: While holding the front door panel, disconnect the connectors (D).

### 3. Front Door Inner handle - Remove

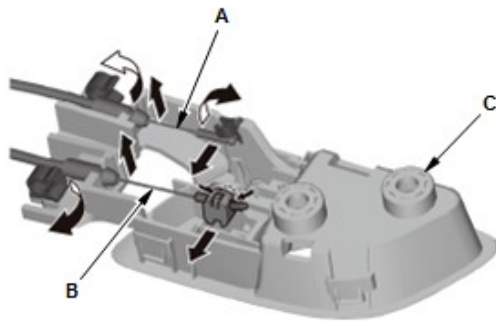

1. Disconnect the inner handle cable (A) and the latch cable (B) from the front door inner handle (C), then remove the handle.

### 4. Power Window Switch Panel - Remove

**Fastener Locations**

▷ : 2



**5. Front Door Armrest - Remove**

**Fastener Locations**

▶ : 5



**6. Front Door Inner Weatherstrip - Remove**



## 7. All Removed Parts - Install

1. Install the parts in the reverse order of removal.